

Valid to end of September 2009

*\*Important:-*

PLEASE LOGIN OR REGISTER TO VIEW VALUES

Canon Inkjet Printers		Cartridge Ref
Canon BJ-10 / BJ-5 / BJ-20		BC-01
Canon BJ100 / 200 / 220 / 230 / BJC-150 / 210 / 240		BC-02
Canon BJC-150 / 210 / 241		BC-05
Canon BJC-150 / 210 / 242		BC-06
Canon BJC-210 / BJC-240 / BJC-250 / BJC-1000		BC-09F
Canon BJC 4000 / 4100 / 4300 / 4400 / 5000 (black cartridge)		BC-20
Canon BC-22E		BC-22E
Canon BJC-5000 / BJC-5100		BC-23
Canon BC-29		BC-29
Canon B140 / 150 / 160 / 170 / 310 / 320 / 340 / 360		BX-2
Canon FAXPHONE B45, B540, B550, B640, B95, MultiPASS 800		BX-3
Canon Faxphone B740		BX-20
Canon Pixma iP1800/2500 Black		PG-30 / No 30
Canon Pixma iP1800/2500 Black		PG-31 / No 31
Canon Pixma iP1800/2500 Black		PG-37 / No 37
Canon Pixma iP1800/2500 Colour		CL-38 / No 38
Canon IP2200 / IP1600 / MP150 / MP170 / MP450 PIXMA Colour S		CL-41 / No 41
Canon MP450 Photo All-In-One and iP6210D, iP6220D Photo Print		CL-51 / No 51
Canon PIXMA iP6220D/iP6210D Photo		CL-52 / No 52
Canon BJC300 6000 S400 S450 S4500 S600		BCI3EBK / BCI3EC / BCI3EY / BCI3EM
Canon Pixma IP4000 / IP5000 + others		BCI6BK / BCI6C / BCI6M / BCI6Y
Canon Pixma iP3300 / 4200 / 4300 Black		CLI-8 Black / No 8
Canon Pixma iP3300 / 4200 / 4300 Colour		CLI-8 Cyan / Mag / Yell / Cyan No 8
Canon Pixma iP3300 / 4200 / 4300 Colour		CLI-8 Cyan / Mag / Yell / Cyan Photo No 8
Canon IP2200 / IP1600 / MP150 / MP170 / MP450 PIXMA Black S		PG-40 / No 40
Canon Pixma iP1600 Black High Capacity		PG-50 / No 50
Canon Pixma iP3300/4200/4300 Black		PGI-5BK / No 5
Canon Pixma MP240/260/480		PG-510
Canon Pixma MP240/260/480		PG-511 / PG-512 / PG-513 Colors
Canon Pixma iP3600 / 4600 Black		PGI-520BK
Canon Pixma iP3600 / 4600 Colour		CLI-521 All Colours
Dell Inkjet Printers		Cartridge Ref
Dell A920 / 720 Black		T0529 / N5878 / KF868 / Series 1
Dell A920 / 720 Colour		T0530 / N5882 / KF869 / Series 1
Dell A940 / A960 Black		7Y743 / X0502 / Series 2
Dell A940 / A960 Colour		7Y745 / X0504 / Series 2
Dell J740 Colour		T0602 / Series 3
Dell J743 Black		T0601 / T0722 / Series 3
Dell 540 / Photo		D6605 / Series 4
Dell 922 / 924 / 942 / 944 / 946 / 962 / 964 Photo		J4844 Series 5
Dell 922 / 924 / 942 / 944 / 946 / 962 / 964 Black		M4640 / J5566 / MJ246 / Series 5
Dell 922 / 924 / 942 / 944 / 946 / 962 / 964 Colour		M4646 / J5567 / Series 5
Dell 725 / 810 / All In One		JF333 Colour Series 6
Dell 966 Black		DH828 / CH883 / Series 7
Dell 966 Colour		DH829 / CH884 / Series 7
Dell 966 Photo		FH214 / Series 7
Dell Black		MJ264 / Series 8
Dell 926 Black		MK990 / 992 / Series 9
Dell 926 Colour		MK991 / 993 / Series 9

Dell 926 Photo	MK995 / Series 9
HP Inkjet Printers	Cartridge Ref
HP 300 series (black)	51633M / No 33
HP 300 / 400 / 500 series (colour cartridge)	51625A (clear bottom only) / No 25
HP 400 / 500 series (black)	51626A\G / No 26
HP 600 series (black)	51629A\G / No 29
HP 600 series (colour)	51649A\G / No 49
HP 600 series (photo cartridge)	C1816A / No 16
HP 700 / 800 / 1000 / 1100 series (colour)	C1823A\D / No 23
HP 700 / 800 / 1000 / 1100 / 1600 series (black)	51645A\G / No 45
HP DJ 610/612/640 Black	C6614A\D / No 20
HP 840C (black)	C6615A\D / No 15
HP DJ 840/843 Color	C6625A / No 17
HP Officejet G55 / 85 / 95 (tri colour cartridge)	C6578A 38 ML High Volume
HP Officejet G55 / 85 / 95 (tri colour cartridge)	C6578D 19 ML Low User
HP DJ 350c / 350CBi (black)	C6628A / No 19
HP DJ 420ci/cbi/5150/5550c/5552 Black	C6656A normal
HP DJ 420ci/cbi/5150/5550c/5552 Black	C6656G Small or low yield
HP DJ 420ci/cbi/5150/5550c/5552 Color	C6657A / No 57
HP DJ 420ci/cbi/5150/5550c/5552 Color	C6657A / No 57 XL
HP DJ 420ci/cbi/5150/5550c/5552 Photo	C6658A / No 58
HP DJ 3320/3325/3420/3550 Black	C8727A / No 27
HP DJ 3320/3325/3420/3550 Color	C8728A / No 28
HP DJ 3920/3940/1410 Black	C9351 / No 21
HP DJ 3920/3940/1410 Black	C9351 / No 21XL
HP DJ 3920/3940/1410 Color	C9352 / No 22
HP DJ 3920/3940/1410 Color	C9352 / No 22XL
HP DJ 3920/3940/1410 Black	C9351 / No 21 (Introductory)
HP DJ 3920/3940/1410 Color	C9352 / No 22 (Introductory)
HP Officejet Pro K550 Series	All No 88
HP DJ F4280 Black	CC640EE / No 300
HP DJ F4280 Color	CC643EE / No 300
HP DJ F4280 Black	CC641EE / No 300 XL
HP DJ F4280 Color	CC644EE / No 300 XL
HP DJ 5400 Series Low Black	C9362A / No 336
HP Photosmart 2570 Fast Black	C9364E / No 337
HP DJ 5740/6520/6540/6540dt/6840 Black	C8765E / No 338
HP DJ 5740/6520/6540/6540dt/6840 High Black	C8767E / No 339
HP DJ 5400 Series Low Color	C9361A / No 342
HP DJ 5740/6520/6540/6540dt/6840 Color	C8766E / No 343
HP DJ 5740/6520/6540/6540dt/6840 High Color	C9363E / No 344
HP DJ 5740/6520/6540/6540dt/6840 Photo	C9369E / No 348
HP DJ D4260/OfficeJet J5780 Black	CB335E / No 350
HP DJ D4260/OfficeJet J5780 High Black	CB336E / No 350XL
HP DJ D4260/OfficeJet J5780 Colour	CB337E / No 351
HP DJ D4260/OfficeJet J5780 High Colour	CB338E / No 351 XL
HP (various models)	C9359 / No 59
HP DJ 6540 Low Grey Photo	C9368E / No 100
HP Photosmart 8750 Blue Photo	C9365A / No 101
HP Photosmart 8750 High Grey Photo	C9360A / No 102
HP Photosmart A516/432/433	CB304A / No 110 (NO INTRODUCTORY CARTRIDGE)
HP Photosmart B8550 / C5380,C6380,D5460 Black	CB316E No 364
HP Photosmart B8550 C5380,C6380,D5460 High Black	CB321E No 364 XL
HP Photosmart B8550 C5380,C6380,D5460 Photo Black	CB317E No 364
HP Photosmart B8550 C5380,C6380,D5460 High Photo Black	CB322E No 364 XL
HP Photosmart B8550 C5380,C6380,D5460 Colour	CB318E / 319E / 320E No 364
HP Photosmart B8550 C5380,C6380,D5460 High Colour	CB323E / 324E / E325E No 364 XL

HP OfficeJet J4580 / J4660 / 4680 Black	CC563A No 901
HP OfficeJet J4580 / J4660 / 4680 Black	CC654A No 901 XL
HP OfficeJet J4580 / J4660 / 4680 Colour	CC656A No 901
<b>Lexmark Inkjet Printers</b>	<b>Cartridge Ref</b>
Lexmark i3/Z13/Z23/Z33/Z601/Z605 Black	10N0016 / No 16
Lexmark Z35/Z601/Z605 Low Black	10N0217 / No 17
Lexmark i3/Z13/Z23/Z33/Z601/Z605 Colour	10N0026 / No 26
Lexmark Z35/Z601/Z605 Low Colour	10N0227 / No 27
Lexmark 3200/5000/5700/5770 Black	12A1970 / No 70
Lexmark 3200/5000/5700/5770 Black	12A1975 / No 75
Lexmark 3200/5000/5700/5770 Colour	12A1980 / No 80
Lexmark 3200/5000/5700/5770 Colour	12A1985 / No 85
Lexmark X73/83/Z31/42/43/51/52/53 Photo	12A1990 / No 90
Lexmark Colour 1070 / 1100 / 2050 / 3000	1380619
Lexmark 4076	1380620
Lexmark 4076/1000/20/100/2030/50/55	13400HC
Lexmark 2070	1382050
Lexmark 2070	1382060
Lexmark 1000	15M0640
Lexmark P706/ P707/ P700ser Z705/ Z708/ Z700ser / P3150/ P31201	15M2619 / No 19
Lexmark Z11/31/42/43/45/45e Low Black	15M2971 / No 71
Lexmark X73/83/Z42/43/51/52/53 Colour	15M0120 / No 20
Lexmark X73/83/Z42/43/51/52/53 Colour	15M0125 / No 25
Lexmark X3500/4500/Z1400 Black	18C1623 / No 23A ( Must be the `A` Type)
Lexmark X3500/4500/Z1400 Colour	18C1624 / No 24A ( Must be the `A` Type)
Lexmark X2500/5490/Z1300 Black	18C1528 / No 28A ( Must be the `A` Type)
Lexmark X2500/5490/Z1300 Colour	18C1529 / No 29A ( Must be the `A` Type)
Lexmark Z12/22/32/705 Black	17G0050 / No 50
Lexmark Z12/22/32/705 Colour	17G0060 / No 60
Lexmark Z12/22/32/705 Low Black	17G0648 / No 48
Lexmark Z815/X5250/5270 Photo	18C0031 / No 31
Lexmark Z815/X5250/5270 Black	18C0032 / No 32
Lexmark Z815/X5250/5270 Colour	18C0033 / No 33
Lexmark Z815/X5250/5270 Black	18C0034 / No 34
Lexmark (various models)	18C0035 / No 35
Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	18C2150 / No 36A ( Must be the `A` Type)
Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	18C2190 / No 36A XL
Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	18C2160 / No 37A ( Must be the `A` Type)
Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	18C2200 / No 37A XL
Lexmark X2310/2330/2350/Z730/735	18C0781 / No 1
Lexmark X2580/3580/Z1380 Colour	18C0190 / No 2
Lexmark X2580/3580/Z1380 Black	18C1530 / No 3
Lexmark X2600 Series, X3600 Series, X4600 Series	18C1974 / No 4
Lexmark X2690 / X3690 / X4690 / Z2390 / Z2490	18C1960B / No 5
Lexmark Z2300, Z2320, X2650 and X2600 printers	18C2080 / 14A ( Must be the `A` Type)
Lexmark Z2300, Z2320, X2650 and X2600 printers	18C2100 / 15A ( Must be the `A` Type)
Lexmark X9350/P350 Series Photo	18Y0340 / No 40
Lexmark X4800/6570 Black	18Y0341 / No 41A ( Must be the `A` Type)
Lexmark X4800/6570 Colour	18Y0342 / No 42A ( Must be the `A` Type)
Lexmark X9350 / P350	18Y0143 / No 43
Lexmark X9350 / P350	18Y0133 / No 43 XL
Lexmark X9350	18Y0144 / No 44
Lexmark X9350	18Y0134 / No 44 XL
Lexmark P350	18Y0146 / No 45
Lexmark Z55/65 Colour/Photo	18L0000 / No 88
Lex X5100/X5130/X5150/X5190Pro/X6150/X6190Pro/X6170/Z55/Z65	18L0032 / No 82
Lex X5100/X5130/X5150/X5190Pro/X6150/X6190Pro/X6170/Z55/Z65	18L0042 / No 83

<b>Samsung Inkjet Printers</b>		<b>Cartridge Ref</b>
Samsung SF-4000 / 4100 / 4200 / 3000 / 3100 / 3200	M10	
Samsung SF330 / SF335T / SF331P	M40	
Samsung SF370 / SF375TP	M41	
Samsung SF-4300 / 4500 / 430 / 4700 / SCX-1100 Black	M50	
Samsung M50C	M50C	
Samsung SF350 Fax machine	M55	
Samsung C1	C1	
Samsung C10	C10	
Samsung C50	C50	
Samsung SF-430 / 4700 / SCX-1000 / 1100 / 1150F	C60	
<b>Misc Inkjet Printers</b>		<b>Cartridge Ref</b>
Brother LC900 Black and Colour	LC900	
Brother LC970 Black and Colour	LC970	
Brother LC980 Black and Colour	LC980	
Brother LC1000 Black and Colour	LC1000	
Brother LC1100 Black and Colour	LC1100	
Neopost RJ 25	RJ 25	
Neopost RJ 35	RJ 35	
Pitney Bowes 766-E	766-E	
Pitney Bowes 797	797	
Sharp	FO-21BC	
Sharp UX-B700	UX-C70B	
Olivetti JP1 50/170/190/250/350/360	JP150 (Yellow/Orange/Blue/Grey Tops)	
Philips	PFA 421 (Red/Yellow/Blue Tops)	
<b>Xerox Inkjet Printers</b>		<b>Cartridge Ref</b>
Xerox (various models)	J6301A	
Xerox (various models)	8R7880	
Xerox (various models)	8R7881	
Xerox (various models)	8R7882	
Xerox (various models)	8R7883	
Xerox (various models)	8R7903	
Xerox (various models)	8R7904	
Xerox (various models)	8R12591	

Apple Laser Printers	Cartridge Ref
Apple LaserWriter 300	M2045G/A or 92274A
Apple LaserWriter 300/320/4/600PS Printers (PX)	M2473G/A or 92298A
Apple LaserWriter Select 310 / 360 (Star LS5)	M1960G/A
Apple Laser 12/640	M4683G/A
Apple Laser 8500	M5893G/A
Brother Fax & Laser Printers	Cartridge Ref
Brother HL-2030 / 2040 (with cover)	TN2000 / TN350
Brother HL-2030 / 2040 (- minus cover)	TN2000 / TN350
Brother HL-2030 / 2040	DR2000 / DR350 Drum
Brother HL-2035 / 2045	TN-2005
Brother HL-2030 / 2040	DR-2005
Brother HL-2700CN Colour Toner	TN-04 - Black
Brother HL-2700CN Colour Toner	TN-04 - Colour
Brother HL-4050CN Black	TN-130 - Black
Brother HL-4050CN Colour	TN-130 Colour
Brother HL-4050CN Drum Unit	DR-130 Drum
Brother HL-3260 / 3260	TN-1200
Brother HL-3260 / 3260	DR-1200
Brother HL5100 / 5130 / 5140 / 5150 (with cover)	TN3060 / TN3030 / TN540 / TN570
Brother HL5100 / 5130 / 5140 / 5150 (- minus cover)	TN3060 / TN3030 / TN540 / TN570
Brother HL-1030/1230/1240/1250/1270/1440/1450/1470	DR3000 / DR510 Drum
Brother HL-6050 Series (with cover)	TN4100 / TN670
Brother HL-6050 Series (- minus cover)	TN4100 / TN670
Brother HL-6050 Series	DR4000 Drum
Brother HL2140/2150N/2170W (- with cover)	TN-2110
Brother HL2140/2150N/2170W (- minus cover)	TN-2110
Brother HL2140/2150N/2170W (- with cover)	TN-2120
Brother HL2140/2150N/2170W (- minus cover)	TN-2120
Brother HL2140/2150N/2170W	DR2100 Drum
Brother FAX-8650P/ 8750P/9650/9750/9870 toner (with cover)	TN6600 / TN6300 / TN430 / TN460
Brother FAX-8650P/ 8750P/9650/9750/9870 toner (- minus cover)	TN6600 / TN6300 / TN430 / TN460
Brother HL 1240 1250 1270	DR6000 / DR400 Drum
Brother HL-1650 / HL - 1670N (with cover)	TN7600 / TN7300 / TN530 / TN560
Brother HL-1650 / HL - 1670N (- minus cover)	TN7600 / TN7300 / TN530 / TN560
Brother HL1650/1670/1850/1870	DR7000 / DR500 Drum
Brother HL5240 / HL5250DN (with cover)	TN3170 / TN3130 / TN550 / TN580
Brother HL5240 / HL5250DN (- minus cover)	TN3170 / TN3130 / TN550 / TN580
Brother 8070P/MFC-9030/70/9160/80	DR8000
Brother DR3100 Drum Unit	DR3100 / DR520 Drum
Brother HL-8050	TN1700
Canon Fax & Laser Printers	Cartridge Ref
Canon LBP 430 / LBP-PX	EP-P or 92274A
Canon LBP460 / LBP660 / LBP-AX	EP-A or C3906A
Canon LBP2460 / LBP-WX	EP-W or C3909A
Canon LBP1760 / LBP-52	EP-52 or C4127X
Canon LBP3200/300N/LDA/LDF Black	EP27
Canon L700 series / L3300	FX1
Canon L500 / L600	FX2
Canon L250 / L300 / MultiPASS L60 / L90 / L6000	FX3
Canon L800 / L900	FX4
Canon FX6 L1000	FX6
Canon FX7 LC700 / L2000 / L2000IP	FX7
Canon M6580/6560/6550/6540/6530	706
Canon L 100 / 120 Fax	FX10
Canon FC200 / 300 series / PC300 / 500 / 700 series (Japanese Made E30 / E15 Japan / Chinese Virsion	

Canon FC200 / 300 series / PC300 / 500 / 700 series (French Made) E30 / E15 FRENCH OR OTHERS	
Canon M PC1210D / PC1230D / PC1270D Cartridge M	
Canon L380 / L400 / PC-D320 / PC-D340 / ImageClass D320 / D340 Cartridge T	
Dell Printers	Cartridge Ref
Dell 1100 / 1110	GC50J9833
Dell P1500	7Y605 / 606 / 608 / 610 / R0894 / 895
Dell P1600	K4671 / P4210 / T5870 / X5015
Dell P1700 / 1700N / 1710 (Must have the 2 guide wheels on each en	N3769 / H3730 / J3815 / K3756
Dell P1700 / 1700N / 1710 Drum	D4283 / W5389 / MW685
Dell P1720 (Must have the 2 guide wheels on each end and seal into	MV559 / GR332
Dell P1720 Drum	MW685
Dell 1815dn	NF485 / RF223 / PF656 / 658
Dell S2500	2Y666 / 667 / 668 / 669 / R0883 / 884
Dell 3000N	3000CN All Color Cartridges
Dell 3100N	3100CN All Color Cartridges
Dell 3110 / 3115	3110 / 3115 All Colour Cartridges Std Cap
Dell 3110 / 3115	3110 / 3115 All Colour Cartridges Hi Cap
Dell 5100	5100 All Colour Cartridges
Dell MS5200 / MS5210	N0888 / 893 / J2925 / R0136 / 0137
Dell M5210N	GD531 / PD974 / HD767 / TD381
Dell M5310N Extra High Yield	UD314 / RD907
Dell W5300 / W5310	J2925 / N2157 / R0137 / M2925
Epson Printers	Cartridge Ref
Epson EPL-5500 (Toner unit)	SO50005
Epson EPL-5500 (Drum Unit)	SO51029
Epson EPL-5700 (Toner unit)	SO50010
Epson EPL-5700 (Drum unit)	SO51055
Epson N2050	SO51070
Epson N4000	SO51060
Epson AcuLaser C1100	C13S050191 / 92 / 93 STD-CAP
Epson AcuLaser C1100	C13S050187 / 88 / 89 / 90 HI-CAP
Epson C900/1900 (black) ** (Must have Plastic cover)	SO50100
Epson C900/1900 (colour) ** (Must have Plastic cover)	SO50099 / 98 / 97
Epson EPL-5900 / EPL-6100 Laser Toner/Developer	SO50087 / SO50095
Epson AcuLaser C4100 (All Colours)	C13S050146 / 47 / 48 / 49
Epson EPL6200 Drum	SO51099
Epson EPL6200 Toner	SO50166/67
Hewlett Packard Laser Printers	Cartridge Ref
HP LaserJet 4L / 4P / 4ML / 4MP	92274A or EP-P or M2045G/A
HP LaserJet 4 / 4+ / 4M / 4M+ / 5 / 5N / 5M	92298A / or EP-E
HP LaserJet 4 / 4+ / 4M / 4M+ / 5 / 5N / 5M	92298X
HP 5P / 5MP / 6P / 6MP	C3903A or EP-V
HP 5L / 5ML / 6L / 6ML / 3100 / 3150	C3906A or EP-A
HP Series 5Si / 8000	C3909A / X or EP-W
HP LaserJet 1000 / 05 / 1200 / 20 / 3300 / 20 / 30 Std Cap	C7115A
HP LaserJet 1000 / 05 / 1200 / 20 / 3300 / 20 / 30 High Cap	C7115X
HP LaserJet 1010 / 12 / 15 / 18 / 20 / 22 / 32 / 3015 / 20 / 30	Q2612A or FP-270
HP Colour LaserJet CP6015	CB380A Black
HP Colour LaserJet CP6015	CB381A / CB382A / CB383A Color
HP Colour LaserJet CM 6030 F MFP/MFP/6040 F MFP/MFP	CB390A Black
HP Colour LaserJet CP4005	CB400A Black
HP Colour LaserJet CP4005	CB401A / CB402A / CB403A Colors
HP LaserJet P1005 / P1006 Printers	CB435A (NOT Starter Cartridge)
HP LaserJet P1505 / P1505 Series	CB436A (NOT Starter Cartridge)
HP Colour LaserJet CP1215 / CP1515	CB540A Black
HP Colour LaserJet CP1215 / CP1515	CB541A / CB542A / CB543A Color

HP LaserJet P4014 / P4050 / P4515 Series	CC364A
HP LaserJet P4014 / P4050 / P4515 Series	CC364X
Colour LaserJet CP2025/CM2320	CC530A Black
Colour LaserJet CP2025/CM2320	CC531A/CC532A/CC533A Colour
HP CM 3530 FS MFP/MFP/CP 3525/3525 DN/N/X	CE250A / X Black
HP CM 3530 FS MFP/MFP/CP 3525/3525 DN/N/X	CE251A / CE252A / CE253A
HP LaserJet P2035 / P2055 Black Toner	CE505A / 05A
HP LaserJet P2035 / P2055 Black Toner	CE505X / 05X
HP 1100 / 1100A / 3200	C4092A or EP-22
HP 1150	Q2624A / X
HP LaserJet 1160 / 1320 / 1320n / 1320nw / 1320tn Std Cap	Q5949A or EP-508
HP LaserJet 1160 / 1320 / 1320n / 1320nw / 1320tn High Cap	Q5949X
HP 1300 / 1300A	Q2613A
HP 1300 / 1300X	Q2613X
<b>HP 1500 / 2500 (black &amp; colour) DO NOT SEND THESE</b>	<b>C9700A / 01A / 02A / 03A DO NOT SEND THESE</b>
HP LaserJet 2100 series / 2200 series	C4096A or EP-32
HP LaserJet 2300 / 2300N	Q2610A
HP LaserJet 2410	Q6511A
HP LaserJet 2410	Q6511X
HP LaserJet 2550 (Black)	Q3960A / Q3970A
HP LaserJet 2550 (Colour)	Q3961A / 62A / 63A / 71A / 72A / 73A
HP LaserJet P2015 Printers Series A	Q7553A
HP LaserJet P2015 Printers Series X	Q7553X
HP Colour LaserJet 2600 / 2605 / 1015 / 1018	Q6000A Black
HP Colour LaserJet 2600 / 2605 / 1015 / 1018	Q6001A Colour
HP Colour LaserJet 2600 / 2605 / 1015 / 1019	Q6002A Colour
HP Colour LaserJet 2600 / 2605 / 1015 / 1020	Q6003A Colour
HP 3000 (black)	Q7560A
HP 3000 (colour)	Q7561A
HP 3000 (colour)	Q7562A
HP 3000 (colour)	Q7563A
HP LaserJet P3005 Printer series A	Q7551A
HP LaserJet P3005 Printer series X	Q7551X
HP 3500 (black)	Q2670A / Q2680A
HP 3500 (colour)	Q2671A / Q2672A / Q2673A
HP 3600 / 3800 (black)	Q6470A
HP 3600 (colour)	Q6471A
HP 3600 (colour)	Q6472A
HP 3600 (colour)	Q6473A
HP 3700 (colour)	Q2681A / Q2682A / Q2683A
HP 3800 (colour)	Q7581A
HP 3800 (colour)	Q7582A
HP 3800 (colour)	Q7883A
HP 4000 / 4000N / 4000T / 4050	C4127X or EP-52
HP 4000 / 4000N / 4000T / 4050	C4127A
HP 4100	C8061X
HP 4100	C8061A
HP 4200	Q1338A
HP LaserJet 4240 / 4250 / 4350 Std Cap	Q5942A
HP LaserJet 4240 / 4250 / 4350 High Cap	Q5942X
HP 4300	Q1339A
HP 4345	Q5945A
<b>HP 4600 (black &amp; colour) DO NOT SEND THESE</b>	<b>C9720A / 21A / 22A / 23A DO NOT SEND THESE</b>
HP 4700 (black)	Q5950A
HP 4700 (colour)	Q5951A / Q5952A / Q5953A
HP 4730 (black)	Q6460A
HP 4730 (colour)	Q6461A / Q6462A / Q6463A

HP 5000 / 5100	C4129X or EP-62
HP LaserJet M5025 mfp / 5035	Q7570A
HP LaserJet 5200 Printer series	Q7516A
<b>HP 5500 (black &amp; colour) DO NOT SEND THESE</b>	<b>C9730A / 31A / 32A / 33A DO NOT SEND THESE</b>
HP 8100 & 8150 & Mopier 320	C4182X
HP 9000	C8543X

IBM Laser Printers	Cartridge Ref
IBM Infoprint 4317 / Lexmark 4317 Network	63H2401
IBM Infoprint 1145 Series	28P1882
IBM Infoprint 1222	53P7704 / 05 / 06 / 07
IBM Infoprint 1120 / 1125 (Prebate / Non Prebate)	28P2491 / 92 / 93 / 94
IBM Infoprint 1130 / 1140 (Prebate / Non Prebate)	28P2007 / 08 09 / 10
IBM Infoprint <b>1332</b> / 1352 / 1372	75P4300 / 1 / 2 / 3
IBM Infoprint 1352 / 1372 Extra High Yield	75P4304 / 5
IBM Infoprint 1415	75P5708 / 09 / 10 / 11
IBM Infoprint 1422	75P6049 / 6050 / 6051 / 6052
IBM Infoprint <b>1532</b> / 1552 / 1572 MFP High Yield	75P6960 / 6961
IBM Infoprint <b>1532</b> / 1552 / 1572 MFP Std Yield	75P6958 / 6959
IBM Infoprint <b>1532</b> / 1552 / 1572 MFP Extra High Yield	75P6962 / 6963
IBM Infoprint 20 / M5893GA	90H0748
IBM Infoprint 24/32/40	63H5721 / 90H3566

Lexmark Fax & Laser Printers	Cartridge Ref
Lexmark 4039 / 4049 / Lexmark R / L standard capacity	1380850
Lexmark 4039 / 4049 / Lexmark R / L marathon capacity	1380950
Lexmark Std (7k)	1382100
Lexmark Marathon (14k)	1382150
Lexmark E120 Toner	12016SE / 12036SE
Lexmark E120 Drum	12026XW
Lexmark S (Non Prebate)	1382920 / 1382925
Lexmark S (Prebate)	1382620 / 1382625
Lexmark T 610 (Prebate / Non Prebate)	12A5740 / 45 / 12A5840 / 45 / 49
Lexmark T620 / T622 / X620e	12A6760 / 65 12A6860 / 65 / 69
Lexmark T520 / T522 / X520 / X522	12A6730 / 35 12A6830 / 35 / 38
Lexmark E210	10S0150
Lexmark E (Toner)	69G8256
Lexmark E (Drum)	69G8257
Lexmark E220	12S0300 / 12S0400
Lexmark E230 / E232 / E330 / E332 Toner	12A8300 / 12A8400
Lexmark E230 / E232 / E330 / E332 Toner	12A8305 / 12A8405
Lexmark E230 / E232 / E330 / E332 / E340 / E342 Drum	12A8302
Lexmark E250/350/352/450 Toner	E250A11E / A21E
Lexmark E250/350/352/450 Drum	E250X22G
Lexmark E260/360/460 Standard Toner	E260A11E/E260A21E
Lexmark E260/360/460 Drum	E260X22G
Lexmark E320 / E322	8A0475 / 76 / 77 / 78
Lexmark E321 / E323	12A7300 / 12A7305
Lexmark E321 / E323	12A7400 / 12A7405
Lexmark E340/342/232/330/332 Toner	24016/24036SE/34016/34036HE
Lexmark E350/352 Toner	E352H11E / H21E
Lexmark E360/460 High Yield Toner	E360H11E/E360H21E
Lexmark E450	E450A11E / A21E / H11E / H21E
Lexmark E460 Extra High Yield Toner	E460X11E / E460X21E
Lexmark M410 / 412	17G0152 / 154
Lexmark M410	4K00199
Lexmark C720	15W0903/15W0902/15W0901/ 15W0900
Lexmark E310 / E312 / E312L 6k	13T0101
Lexmark E310 / E312 / E312L 3k	13T0301 / 12A2202

Lexmark SE	12A0725 / 825 / 829
Lexmark T420	12A7310
Lexmark T420	12A7315
Lexmark T420 / X422	12A7410
Lexmark T420 / X422	12A7415
Lexmark T430	12A8420
Lexmark T430	12A8425 / 12A8325 / 12A8320
Lexmark T630 / T632 / T634 / X630e / X632	12A7360 / 62 / 7460 / 62
Lexmark T632 / T634 / X632	12A7365 / 7465
Lexmark W820	12B0090
Lexmark W810 Laser Cartridge	12L0250/1
Lexmark C510/C510n (black and colour)	20K0503/02/01/00
Lexmark C510/C510n (black and colour) High Yield	20K1403/02/01/00
Lexmark T640 / T642 / T644 / Std Yield	64016SE / 64036SE
Lexmark T640 / T642 / T644 / High Yield	64016HE / 64036HE
Lexmark T644 Extra High Yield	64416XE / 64436XE
Lexmark T650/652/654 Standard Yield	T650A11E / T650A21E
Lexmark T650/652/654 High Yield	T650H11E / T650H21E
Lexmark T654 Extra High Yield	T654X11A / T654X21A
Lexmark X215	18S0090
Lexmark X340/342e Toner	340A11G/A21G
Lexmark X422	12A3710/3715
Lexmark X642e/644 Standard Yield	X644X11E/X644X21E
Lexmark X642e/644 High Yield	X644H11E/X644H21E
Lexmark X644 Extra High Yield	X644A11E/X644A21E
Lexmark X651/652/654/656/658 Standard Yield	X651A11E/X651A21E
Lexmark X651/652/654/656/658 High Yield	X651H11E/X651H21E
Lexmark X654/656/658 Extra High Yield	X654X11E/X654X21E
Lexmark X830e/X832e	X8302KH
Lexmark X850/852/854	X850H21G
Lexmark X850/852/854 Drum	X850H22G
<b>Okii Fax &amp; Laser Printers</b>	
<b>Cartridge Ref</b>	
OKI Type C2 7000 Series all colours	
OKI Type C4 7000 Series all colours	
OKI Type C6L 3100 Series all colours	
OKI C5600/5700/5800 ** (Must have Plastic cover)	No Starters
OKI Type C3 9000 Series all colours	
OKI Type C5 9000 Series all colours	
OKI Type C56 5600 Series all colours	
OKI Type C6 51/52/53/5400 (Not starter Cartridges)	42127408 Black
OKI Type C6 51/52/53/5400 (Not starter Cartridges)	42127407 / 06 / 05 Colour
OKI Page 400e/410ex/600ex/800e Drum Unit	400E
<b>Panasonic Fax &amp; Laser Printers</b>	
<b>Cartridge Ref</b>	
Panafax UF550 / UF560 / UF770 / UF880 / UF885	UG3313
Panafax UF585 / UF595	UG3350
Panafax UF745 / LS5	UG3204
Panafax UF744 / UF788	UG3309
Panafax UF7000 / UF8000 / UF9000	UG5530 / 5540
<b>Pitney Bowes Fax &amp; Laser Printers</b>	
<b>Cartridge Ref</b>	
Pitney Bowes 9600 series	805-6 or Nefax 525
Pitney Bowes 9800	810-4 / PB9800
Pitney Bowes 9900	812-0
Pitney Bowes 9700	PB9700
<b>QMS / Minolta Laser Printers</b>	
<b>Cartridge Ref</b>	
QMS Magicolour 2300 (Black) ** (Must have Plastic cover)	1710517-005
QMS Magicolour 2300 (Colour) ** (Must have Plastic cover)	1710517-006 / 007 / 008

QMS Magicolour 2300 (Black) ** (WITHOUT Plastic cover)	1710517-005
QMS Magicolour 2300 (Colour) ** (WITHOUT Plastic cover)	1710517-006 / 007 / 008
QMS Magicolour 2400 (Black) (Must have Plastic cover)	1710587-004
QMS Magicolour 2400 (Colour) ** (Must have Plastic cover)	1710587-005 / 001
QMS Magicolour 2400 (Black) (WITHOUT Plastic cover)	1710587-004
QMS Magicolour 2400 (Colour) ** (WITHOUT Plastic cover)	1710587-007 / 003
<b>Ricoh Fax &amp; Laser Printers</b>	<b>Cartridge Ref</b>
Ricoh 2700 / 3700 / 4700 / MV310	339481 Type 150
Ricoh 1700 / 1750 / BTBF900 (Toner)	339474 Type 70
Ricoh 1700 / 1750 / BTBF900 (Drum)	339472 Master unit Type 70
Ricoh 200L	Type 1430/35
Ricoh 2400L / 2700L / 3700L	Type 12
Ricoh 1120L / 1160L	Type 1265
<b>Samsung Fax &amp; Laser Printers</b>	<b>Cartridge Ref</b>
Samsung ML-1210	ML 1210
Samsung ML-1650	ML 1650
Samsung ML-4500	ML 4500
Samsung ML-4550	ML 4550
Samsung ML-6060	ML 6060
Samsung SF-5100	SF 5100
Samsung SF-560R	SF-560R
Samsung SF-850	SCX 5312
Samsung SF850	SCX 5312 Drum
Samsung SCX5530	SCX 5530
Samsung ML-1710	ML 1710
Samsung SCX-4200 Series	SCX 4200
Samsung SCX-4321 / SCX-4521	SCX 4321 / SCX 4521
Samsung ML-2150	ML 2150
Samsung ML-2510	ML2510
Samsung ML-2550	ML 2550
Samsung ML2850	ML2850
Samsung SCX-4216	SCX 4216
Samsung ML 3050	ML 3050
Samsung ML 3060	ML 3060
Samsung SCX-4100 (NO STARTER CARTRIDGE)	SCX 4100 (NO STARTER CARTRIDGE)
Samsung CLP-300 (Black and Colour)	CLP 300
Samsung CLP-310 / CLP-315 (Black and Colour)	CLP-310
Samsung CLP-350 (Black and Colour)	CLP-350
Samsung CLP-500 (Black and Colour)	CLP 500
Samsung CLP-510 (Black and Colour)	CLP 510
Samsung CLP-600 (Black and Colour)	CLP 600
Samsung CLP-610 (Black and Colour)	CLP 610
Samsung CLP-660 (Black and Colour)	CLP 660
Samsung ML-2010	ML 2010
Samsung SCX4720	SCX 4720
Samsung SCX4725	SCX 4725
Samsung SCX6120	SCX 6120
Samsung SCX6120	SCX 6120 Drum
Samsung SCX6345	SCX 6345
Samsung SCX6345	SCX 6345 Drum
Samsung ML-2250	ML 2250
Samsung ML-1610	ML 1610
Samsung ML1630	ML1630
Samsung ML-1520	ML 1520
<b>Xerox Laser Printers</b>	<b>Cartridge Ref</b>
Xerox Phaser 3120 / Phaser 3130	109R00725

<b>Xerox Phaser 3400</b>	<b>106R00462 / 461</b>
<b>Xerox Phaser 3450 Series</b>	<b>106R00688 / 687</b>
<b>Xerox Phaser 3117 / 3122</b>	<b>106R01159</b>
<b>Xerox Phaser 3150</b>	<b>109R00746 / 109R00747</b>
<b>Xerox Pro 412 Copier</b>	<b>106R584</b>
<b>Xerox Phaser 6100 (Black)</b>	<b>106R00679 / 106R00684</b>
<b>Xerox Phaser 6100 (Colour)</b>	<b>106R00680 / 0681 / 0682</b>
<b>Xerox Phaser 6250</b>	<b>106R00668 To 675 All Colours</b>
<b>Xerox N24</b>	<b>113R00184</b>
<b>Xerox P8e</b>	<b>113R296</b>
<b>Xerox Phaser 4500 / 4505</b>	<b>113R00656 / 113R00703</b>
<b>Xerox WorkCentre PE16</b>	<b>113R00667</b>
<b>Xerox N17</b>	<b>4317 / 113R95 / 655L20077</b>