

cart_manufacture	cart_device	cart_ref	barcode
Brother	Brother HL-2030 / 2040	Brother TN-2000 Reman	REMAN\REFILLED
Brother Drum	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother DR-2300 Drum Reman	REMAN\REFILLED
Brother Drum	Brother DCP-8070/8085/HL-5340/5350/5370/5380/MFC-8370/8380/8880/8890	Brother DR-3200 Drum Reman	REMAN\REFILLED
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Black Reman	REMAN\REFILLED
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Cyan Reman	REMAN\REFILLED
Brother Drum	Brother HL-2240 / 2250 / 2270	Brother DR-2200 Drum Reman	REMAN\REFILLED
Brother Intro	Brother DCP-7010/7020/7025/FAX-2820/2920/HL-2030/2040/2050/2070/MFC-7225N/7420/7820N	Brother TN-2000 / TN-350 INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Black INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Cyan INTRO Reman	REMAN\REFILLED
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Magenta Reman	REMAN\REFILLED
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Yellow Reman	REMAN\REFILLED
Brother Drum	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother DR-320CL Drum Reman	REMAN\REFILLED
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Magenta INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Yellow INTRO Reman	REMAN\REFILLED
Brother	Brother DCP-7055 / HL-2130 / HL-2132 / HL-2135	Brother TN-2010 Reman	REMAN\REFILLED
Brother Drum	Brother DCP-8110/8250/HL-5440/5450/5470/6180/MFC-8510/8520/8950	Brother DR-3300 Drum Reman	REMAN\REFILLED
Brother	Brother TN3330	Brother TN-3380 Reman	REMAN\REFILLED
Brother Drum	Brother DCP-L5500/6600/HL-L5000/5100/5200/6300/6400/MFC-L5700/5750/6800/6900/	Brother DR-3400 Drum Reman	REMAN\REFILLED
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Cyan Reman	REMAN\REFILLED
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Magenta Reman	REMAN\REFILLED
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Yellow Reman	REMAN\REFILLED
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Black INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Cyan INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Magenta INTRO Reman	REMAN\REFILLED
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Yellow INTRO Reman	REMAN\REFILLED
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Black Reman	REMAN\REFILLED
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Cyan Reman	REMAN\REFILLED
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Magenta Reman	REMAN\REFILLED
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Yellow Reman	REMAN\REFILLED
Brother Drum	Brother DCP-1510 / HL-1110 / HL-1112 / MFC-1810	Brother DR-1050 Drum Reman	REMAN\REFILLED
Brother Intro	Brother DCP-7055 / HL-2130 / HL-2132 / HL-2135	Brother TN-2010 INTRO Reman	REMAN\REFILLED
Brother	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2310 Reman	REMAN\REFILLED
Brother	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2320 Reman	REMAN\REFILLED
Brother Intro	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2310 / TN-2320 INTRO Reman	REMAN\REFILLED
Brother Drum	Brother DCP-L8400/8450/8250/HL-L8350/9200/9300/MFC-L8650/8850/9550	Brother DR-321CL Drum Reman	REMAN\REFILLED
Brother Intro		Brother TN-3512 INTRO Reman	REMAN\REFILLED
HP	HP Color LaserJet 5500 / 5550	HP C9731A / 645A Cyan Reman	REMAN\REFILLED
HP	HP Color LaserJet 5500 / 5550	HP C9732A / 645A Yellow Reman	REMAN\REFILLED
HP	HP Color LaserJet 5500 / 5550	HP C9733A / 645A Magenta Reman	REMAN\REFILLED
HP	HP 4200	HP 38A / Q1338A Reman	REMAN\REFILLED
HP	HP 4300	HP 39A / Q1339A Reman	REMAN\REFILLED
HP	HP Color LaserJet CP2025/CM2320	HP CC530A / 304A Black Reman	REMAN\REFILLED
HP	HP Color LaserJet CP2025/CM2320	HP CC531A / 304A Cyan Reman	REMAN\REFILLED
HP	HP LaserJet 1160 / 1320 / 1320n / 1320tn / 1320tn	HP 49X / Q5949X / Canon 708H Reman	REMAN\REFILLED
HP	HP LaserJet 4240 / 4250 / 4350 Std Cap	HP 42A / Q5942A Reman	REMAN\REFILLED
HP	HP LaserJet 4240 / 4250 / 4350 High Cap	HP 42X / Q5942X Reman	REMAN\REFILLED
HP	HP 4345	HP 45A / Q5945A Reman	REMAN\REFILLED
HP	HP LaserJet Pro 400 M401 / MFP M425	HP 80A / CF280A / Canon 720 Reman	REMAN\REFILLED
HP	HP LaserJet Pro 400 M401 / MFP M425	HP 80X / CF280X / Canon 720H Reman	REMAN\REFILLED
HP	HP 4700 (Black)	HP Q5950A / 643A Black Reman	REMAN\REFILLED
HP	HP 4700 (Color)	HP Q5951A / 643A Cyan Reman	REMAN\REFILLED
HP	HP 4700 (Color)	HP Q5952A / 643A Yellow Reman	REMAN\REFILLED
HP	HP 4700 (Color)	HP Q5953A / 643A Magenta Reman	REMAN\REFILLED
HP	HP 4730	HP Q6460A / 644A Black Reman	REMAN\REFILLED
HP	HP 4730	HP Q6463A / 644A Magenta Reman	REMAN\REFILLED
HP	HP LaserJet 5200 Printer series	HP 16A / Q7516A Reman	REMAN\REFILLED
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB540A / 125A Black Reman	REMAN\REFILLED
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB541A / 125A Cyan Reman	REMAN\REFILLED
HP	HP Color LaserJet CP4005	HP CB401A / 642A Cyan Reman	REMAN\REFILLED
HP	HP LaserJet P4014 / P4015 / P4515 Series	HP 64A / CC364A Reman	REMAN\REFILLED
HP	HP LaserJet P4015 / P4515 Series	HP 64X / CC364X Reman	REMAN\REFILLED
HP	HP LaserJet P2035 / P2055 Black Toner	HP 05A / CE505A / Canon 719 Reman	REMAN\REFILLED
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250A / 504A / Canon 723 Black Reman	REMAN\REFILLED
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE251A / 504A / Canon 723 Cyan Reman	REMAN\REFILLED
HP	HP LaserJet P2035 / P2055 Black Toner	HP 05X / CE505X / Canon 719H Reman	REMAN\REFILLED
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250X / 504X / Canon 723H Black Reman	REMAN\REFILLED
HP	HP LaserJet P2015 Printers Series X	HP 53X / Q7553X / Canon 715H Reman	REMAN\REFILLED
HP	HP LaserJet M5025 mfp / 5035	HP 70A / Q7570A Reman	REMAN\REFILLED
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB540A / 125A / Canon 716 Black INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB541A / 125A / Canon 716 Cyan INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB542A / 125A / Canon 716 Yellow INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB543A / 125A / Canon 716 Magenta INTRO Reman	REMAN\REFILLED
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB542A / 125A Yellow Reman	REMAN\REFILLED
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB543A / 125A Magenta Reman	REMAN\REFILLED
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC530A / 304A Black INTRO Reman	REMAN\REFILLED
HP	HP Color LaserJet CP2025/CM2320	HP CC532A / 304A Yellow Reman	REMAN\REFILLED
HP	HP Color LaserJet CP2025/CM2320	HP CC533A / 304A Magenta Reman	REMAN\REFILLED
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC531A / 304A Cyan INTRO Reman	REMAN\REFILLED
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC532A / 304A Yellow INTRO Reman	REMAN\REFILLED
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC533A / 304A Magenta INTRO Reman	REMAN\REFILLED
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250A / 504A / Canon 723 Black INTRO Reman	REMAN\REFILLED
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE252A / 504A / Canon 723 Yellow Reman	REMAN\REFILLED
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE253A / 504A / Canon 723 Magenta Reman	REMAN\REFILLED
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE251A / 504A / Canon 723 Cyan INTRO Reman	REMAN\REFILLED
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE252A / 504A / Canon 723 Yellow INTRO Reman	REMAN\REFILLED
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE253A / 504A / Canon 723 Magenta INTRO Reman	REMAN\REFILLED
HP	HP Color LaserJet CP4005	HP CB402A / 642A Yellow Reman	REMAN\REFILLED
HP	HP Color LaserJet CP4005	HP CB403A / 642A Magenta Reman	REMAN\REFILLED
HP	HP 4730	HP Q6461A / 644A Cyan Reman	REMAN\REFILLED
HP	HP 4730	HP Q6462A / 644A Yellow Reman	REMAN\REFILLED
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE270A / 650A Black Reman	REMAN\REFILLED
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE271A / 650A Cyan Reman	REMAN\REFILLED
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE272A / 650A Yellow Reman	REMAN\REFILLED
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE273A / 650A Magenta Reman	REMAN\REFILLED
HP	HP LaserJet M4555f MFP	HP 90A / CE390A Black Reman	REMAN\REFILLED

HP	HP LaserJet M4555f MFP	HP 90X / CE390X Black Reman	REMAN\REFILLED
HP	HP LJ Enterprise Flow MFP M630 ALL	HP 81A / CF281A Reman	REMAN\REFILLED
HP	HP LJ Enterprise Flow MFP M630 ALL	HP 81X / CF281X Reman	REMAN\REFILLED
HP	HP LaserJet Pro M402 / MFP M426	HP 26X / CF226X Hi Cap Black Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410X / 410X Black Hi Cap Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411X / 410X Cyan Hi Cap Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412X / 410X Yellow Hi Cap Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413X / 410X Magenta Hi Cap Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410A / 410A Black Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411A / 410A Cyan Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412A / 410A Yellow Reman	REMAN\REFILLED
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413A / 410A Magenta Reman	REMAN\REFILLED
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410A / 410A Black INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411A / 410A Cyan INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412A / 410A Yellow INTRO Reman	REMAN\REFILLED
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413A / 410A Magenta INRTO Reman	REMAN\REFILLED
HP	HP LaserJet Enterprise M506dn / LaserJet Pro M501dn / M501n	HP 87X / CF287X Reman	REMAN\REFILLED
HP		HP 28A / CF228A Reman	REMAN\REFILLED
HP		HP 28X / CF228X Reman	REMAN\REFILLED
HP Intro		HP 28A INTRO Reman	REMAN\REFILLED
HP		HP 37A / CF237A Reman	REMAN\REFILLED
HP		HP 37X / CF237X Hi Cap Reman	REMAN\REFILLED
HP		HP 37Y / CF237Y Extra Hi Cap Reman	REMAN\REFILLED
HP Intro		HP 37A / CF237 INTRO Reman	REMAN\REFILLED
HP		HP 56A / CF256A Reman	REMAN\REFILLED
HP		HP 56X / CF256X Reman	REMAN\REFILLED
HP Intro		HP 56A INTRO Reman	REMAN\REFILLED
HP		HP CF450A / 655A Black Reman	REMAN\REFILLED
HP		HP CF451A / 655A Cyan Reman	REMAN\REFILLED
HP		HP CF453A / 655A Magenta Reman	REMAN\REFILLED
HP		HP CF452A / 655A Yellow Reman	REMAN\REFILLED
HP		HP CF460X / 656X Black Hi Cap Reman	REMAN\REFILLED
HP		HP CF461X / 656X Cyan Hi Cap Reman	REMAN\REFILLED
HP		HP CF463X / 656X Magenta Hi Cap Reman	REMAN\REFILLED
HP		HP CF462X / 656X Yellow Hi Cap Reman	REMAN\REFILLED
HP		HP CF470X / 656X Black Hi Cap Reman	REMAN\REFILLED
HP		HP CF471X / 656X Cyan Hi Cap Reman	REMAN\REFILLED
HP		HP CF473X / 656X Magenta Hi Cap Reman	REMAN\REFILLED
HP		HP CF472X / 656X Yellow Hi Cap Reman	REMAN\REFILLED
Canon InkJet	Canon IP2200 / IP1600 / 150 / 170 / 450 PIXMA	Canon PG-40 Reman	REMAN\REFILLED
Canon InkJet	Canon IP2200 / IP1600 / MP150 / MP170 / MP450 PIXMA	Canon CL-41 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP1800/2500 Black	Canon PG-37 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP1800/2500 Colour	Canon CL-38 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MP240/260/480	Canon PG-510 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MP240/260/480	Canon CL-511 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MP240/260/480	Canon PG-512 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MP240/260/480	Canon CL-513 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon PG-540 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon CL-541 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon PG-540XL Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon CL-541XL Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP1600	Canon PG-50 Reman	REMAN\REFILLED
Canon InkJet	Canon MP450 Photo / iP6210 / iP6220	Canon CL-51 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon PG-545 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon PG-545XL Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon CL-546 Reman	REMAN\REFILLED
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon CL-546XL Reman	REMAN\REFILLED
HP InkJet	HP DesignJet 230/250C/330/350C/400 Series/650/CopyJet	HP 40 / 51640A Reman	REMAN\REFILLED
HP InkJet	HP 700 / 800 / 1000 / 1100 / 1600 series (black)	HP 45 / 51645A Reman	REMAN\REFILLED
HP InkJet	HP Officejet G55 / 85 / 95 (tri Colour cartridge)	HP 78D / C6578D 19ML Reman	REMAN\REFILLED
HP InkJet	HP 310/3810/3816/3820/3822/810/12/16/25/40/41/42/43/45/916/920	HP 15 / C6615A Reman	REMAN\REFILLED
HP InkJet	HP Officejet G55 / 85 / 95 (tri Colour cartridge)	HP 78A / C6578A 38ML Reman	REMAN\REFILLED
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552 Black	HP 56A / C6656A Reman	REMAN\REFILLED
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552 Colour	HP 57A / C6657A Reman	REMAN\REFILLED
HP InkJet	HP DJ 3320/3325/3420/3550 Black	HP 27A / C8727A Reman	REMAN\REFILLED
HP InkJet	HP DJ 3320/3325/3420/3550 Colour	HP 28A / C8728A Reman	REMAN\REFILLED
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840 High Black	HP 339 / C8767E Reman	REMAN\REFILLED
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840 High Colour	HP 344 / C9363E Reman	REMAN\REFILLED
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840 Colour	HP 343 / C8766E Reman	REMAN\REFILLED
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840 Black	HP 338 / C8765EE Reman	REMAN\REFILLED
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 348 / C9369E Reman	REMAN\REFILLED
HP InkJet	HP DJ D4260/OfficeJet J5780 Black	HP 350 / CB335EE Black Reman	REMAN\REFILLED
HP InkJet	HP DJ D4260/OfficeJet J5780 Colour	HP 351 / CB337E Reman	REMAN\REFILLED
HP InkJet	HP DJ D4260/OfficeJet J5780 High Black	HP 350XL / CB336E Reman	REMAN\REFILLED
HP InkJet	HP DJ D4260/OfficeJet J5780 High Colour	HP 351XL / CB338E Reman	REMAN\REFILLED
HP InkJet	HP DJ F4280 Black	HP 300 Black / C640E Reman	REMAN\REFILLED
HP InkJet	HP DJ F4280 Colour	HP 300 Colour / C643E Reman	REMAN\REFILLED
HP InkJet	HP DJ F4280 Black	HP 300XL Black / C641E Reman	REMAN\REFILLED
HP InkJet	HP DJ F4280 Colour	HP 300XL Colour / C644E Reman	REMAN\REFILLED
HP InkJet	HP OfficeJet J4580 / J4660 / 4680 Black	HP 901 Black / CC653A Reman	REMAN\REFILLED
HP InkJet	HP OfficeJet J4580 / J4660 / 4680 Black	HP 901XL Black / CC654A Reman	REMAN\REFILLED
HP InkJet	HP OfficeJet J4580 / J4660 / 4680 Colour	HP 901 Colour / CC656A Reman	REMAN\REFILLED
HP InkJet Intro	HP DJ F4280 Colour	HP 300 Colour / CC642EE INTRO Reman	REMAN\REFILLED
HP InkJet	HP DeskJet 930/950/970/980/990/G55/G85/G95	HP 77X Plus / CB277A Reman	REMAN\REFILLED
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301 / CH561EE Black (OLD) Reman	REMAN\REFILLED
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301XL / CH563EE Black (OLD) Reman	REMAN\REFILLED
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301 / CH562EE Color (OLD) Reman	REMAN\REFILLED
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301XL / CH564EE Color (OLD) Reman	REMAN\REFILLED
HP InkJet Intro	HP DJ F4280 Black	HP 300 Black / CC639EE INTRO Reman	REMAN\REFILLED
HP InkJet	HP DJ 3920/3940/1410 Black	HP 21 / C9351 Reman	REMAN\REFILLED
HP InkJet	HP DJ 3920/3940/1410 Colour	HP 22 / C9352 Reman	REMAN\REFILLED
HP InkJet	HP DJ 3920/3940/1410 Black	HP 21XL / C9351 Reman	REMAN\REFILLED
HP InkJet	HP DJ 3920/3940/1410 Colour	HP 22XL / C9352 Reman	REMAN\REFILLED
HP InkJet Intro	HP DJ 3920/3940/1410 Colour	HP 22 / C9352 INTRO Reman	REMAN\REFILLED
HP InkJet	HP DJ 3920/3940/1410 Black	HP 21 / C9351AE Black Low Volume Reman	REMAN\REFILLED
HP InkJet	HP DJ 5400 Series Low Colour	HP 342 / C9361EE Colour Reman	REMAN\REFILLED

HP InkJet	HP DJ 5400 Series Low Black	HP 336 / C9362EE Black Reman	REMAN\REFILLED
HP InkJet	HP Photosmart 2570 Fast Black	HP 337 / C9364EE Black Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black / F6U66AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color / F6U65AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black XL / F6U68AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color XL / F6U67AE Reman	REMAN\REFILLED
HP InkJet	HP Psmart 475/A310/311/314/316/320/430/432/433/434/436/440/441/444/510/512/516/520/522/525/526/528	HP 110 / CB304A Reman	REMAN\REFILLED
HP InkJet	HP Fax 640 printer	HP 701 Black / CC635A Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301 V1 / CH561EE Black (NEW) Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301 V1 / CH562EE Color (NEW) Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301XL V1 / CH563EE Black (NEW) Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301XL V1 / CH564EE Color (NEW) Reman	REMAN\REFILLED
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62 / C2P04A Black Reman	REMAN\REFILLED
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62XL / C2P05A Black Reman	REMAN\REFILLED
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62 / C2P06A Color Reman	REMAN\REFILLED
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62XL / C2P07A Color Reman	REMAN\REFILLED
HP InkJet	HP Deskjet Ink Advantage 2515 and 2515 e-All-in-One	HP 650 Black / CZ101AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet Ink Advantage 2515 and 2515 e-All-in-One	HP 650 Color / CZ102AE Reman	REMAN\REFILLED
HP InkJet	HP CG401A Blue (Must have plug on bottom)	HP CG401A Blue Reman	REMAN\REFILLED
HP InkJet	HP Q2353A Blue (Must have plug on bottom)	HP Q2353A Blue Reman	REMAN\REFILLED
HP InkJet	HP Q2354A Blue (Must have plug on bottom)	HP Q2354A Blue Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304 Black / N9K06AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304XL Black / N9K08AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304 Colour / N9K05AE Reman	REMAN\REFILLED
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304XL Colour / N9K07AE Reman	REMAN\REFILLED
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Black (NOT SETUP H) Reman	REMAN\REFILLED
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Colour (NOT SETUP H) Reman	REMAN\REFILLED
HP InkJet	HP Q2344A Black (Must have plug on bottom)	HP Q2344A Black (1918) Reman	REMAN\REFILLED
HP InkJet	HP C8842A Versatile black	HP C8842A Versatile black Reman	REMAN\REFILLED
HP InkJet	HP C6120A Red Fluorescent	HP C6120A Red Fluorescent Reman	REMAN\REFILLED
HP InkJet	HP C6128A Red	HP C6128A Red Reman	REMAN\REFILLED
HP InkJet	HP C6170A Blue	HP C6170A Blue Reman	REMAN\REFILLED
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black / T6N02AE Reman	REMAN\REFILLED
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303XL Black / T6N04AE Reman	REMAN\REFILLED
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour / T6N01AE Reman	REMAN\REFILLED
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303XL Colour / T6N03AE Reman	REMAN\REFILLED
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black (NOT SETUP H) Reman	REMAN\REFILLED
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour (NOT SETUP H) Reman	REMAN\REFILLED
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black (SETUP H) Reman	REMAN\REFILLED
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour (SETUP H) Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark 4076/1000/20/100/2030/50/55	Lexmark 13400HC Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark i3/Z13/Z23/Z33/Z601/Z605 Black	Lexmark 16 / 10N0016 Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark Z35/Z601/Z605 Low Black	Lexmark 17 / 10N0217 Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark (various models)	Lexmark 35 / 18C0035 Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark Z815/X5250/5270 Black	Lexmark 34 / 18C0034 Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	Lexmark 36A / 18C2150E Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650	Lexmark 37A / 18C2160E Reman	REMAN\REFILLED
Lexmark InkJet	Lexmark X2580/3580/Z1380 Black	Lexmark 3 / 18C1530 Reman	REMAN\REFILLED
Neopost	Neopost RJ 25	Neopost IJ 25 Blue Reman	REMAN\REFILLED
Neopost	Neopost RJ 35 (410)	Neopost RJ 35 (410) Reman	REMAN\REFILLED
Neopost	Neopost RJ 35 (413)	Neopost RJ 35 (413) Reman	REMAN\REFILLED
Neopost	Neopost RJ 35 (4135555U)	Neopost RJ 35 (4135555U) Reman	REMAN\REFILLED
Neopost	Neopost RJ 35 (412)	Neopost RJ 35 (412) Reman	REMAN\REFILLED
Neopost	Neopost RJ 35 (414)	Neopost RJ 35 (414) Reman	REMAN\REFILLED
Neopost	Neopost IJ 240 Blue	Neopost IJ 25 Red Reman	REMAN\REFILLED
Neopost	Neopost IJ 240 Red	Neopost IJ 240 Blue Reman	REMAN\REFILLED
Samsung InkJet	Samsung SF330 / SF335T / SF331P	Samsung INK-M40 Black Reman	REMAN\REFILLED
Samsung InkJet	Samsung SF370 / SF375TP	Samsung INK-M41 Black Reman	REMAN\REFILLED
Kyocera	Kyocera TK-560 Black	Kyocera TK-560 Black Reman	REMAN\REFILLED
Kyocera	Kyocera TK-560 Cyan	Kyocera TK-560 Cyan Reman	REMAN\REFILLED
Kyocera	Kyocera TK-560 Magenta	Kyocera TK-560 Magenta Reman	REMAN\REFILLED
Kyocera	Kyocera TK-560 Yellow	Kyocera TK-560 Yellow Reman	REMAN\REFILLED
Kyocera	Kyocera TK-170 / 172 Black	Kyocera TK-170 / 172 Black Reman	REMAN\REFILLED
Kyocera	Kyocera TK-580 Black	Kyocera TK-580 Black Reman	REMAN\REFILLED
Kyocera	Kyocera TK-580 Cyan	Kyocera TK-580 Cyan Reman	REMAN\REFILLED
Kyocera	Kyocera TK-580 Magenta	Kyocera TK-580 Magenta Reman	REMAN\REFILLED
Kyocera	Kyocera TK-580 Yellow	Kyocera TK-580 Yellow Reman	REMAN\REFILLED
Kyocera	Kyocera TK-590 Black	Kyocera TK-590 Black Reman	REMAN\REFILLED
Kyocera	Kyocera TK-675 Black	Kyocera TK-675 Reman	REMAN\REFILLED
Kyocera	Kyocera TK-160 Black	Kyocera TK-160 Reman	REMAN\REFILLED
Lexmark	Lexmark E260/360/460	Lexmark E260 / E360 / E460 ALL Reman	REMAN\REFILLED
Lexmark	Lexmark MS810 / MS811 / MS812 Series	Lexmark 522X Ultra Hi Cap Reman	REMAN\REFILLED
OKI	OKI B710/B720/B730	OKI 01279001 / B710 Reman	REMAN\REFILLED
Brother	Brother FAX-8650P/ 8750P/9650/9750/9870	Brother TN-6300 / TN-430	
Brother	Brother HL-1650 / HL - 1670N	Brother TN-7600 / TN-560	
Brother Intro	Brother HL-2035 / 2045	Brother TN-2005 INTRO	
Brother	Brother HL-6050 Series	Brother TN-4100	
Brother	Brother HL-1700/8050	Brother TN-1700	
Brother Drum	Brother HL-6050 Series	Brother DR-4000 Drum	
Brother	Brother DCP-7010/7020/7025/FAX-2820/2920/HL-2030/2040/2050/2070/MFC-7225N/7420/7820N	Brother TN-2000	
Brother	Brother FAX-8650P/ 8750P/9650/9750/9870	Brother TN-6600 / TN-460	
Brother	Brother HL-1650 / HL - 1670N	Brother TN-7300 / TN-530	
Brother Intro	Brother DCP-L5500/6600/HL-L5000/5100/5200/6300/6400/MFC-L5700/5750/6800/6900/	Brother TN-3430/3480 INTRO	
Brother	Brother DCP-8060/8065/HL-5240/HL-5250/5270/5280DW/MFC-8460/8860/8870	Brother TN-3130 / TN-550	
Brother	Brother DCP-L5500/6600/HL-L5000/5100/5200/6300/6400/MFC-L5700/5750/6800/6900/	Brother TN-3430	
Brother	Brother DCP-L5500/6600/HL-L5000/5100/5200/6300/6400/MFC-L5700/5750/6800/6900/	Brother TN-3480	
Brother	Brother DCP-8060/8065/HL-5240/HL-5250/5270/5280DW/MFC-8460/8860/8870	Brother TN-3170	
Brother	Brother HL-2140/2150N/2170W	Brother TN-2110	
Brother	Brother HL-2140/2150N/2170W	Brother TN-2120	
Brother	Brother HL-2035 / 2045	Brother TN-2005	
Brother Intro	Brother HL-2240 / 2250 / 2270	Brother TN-2210 / TN-2220 INTRO	
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-135 Black	
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-135 Cyan	
Brother Drum	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother DR-2300 Drum	
Brother	Brother DCP-8070/8085/HL-5340/5350/5370/5380/MFC-8370/8380/8880/8890	Brother TN-2320 / TN-620	
Brother	Brother DCP-8070/8085/HL-5340/5350/5370/5380/MFC-8370/8380/8880/8890	Brother TN-3280	

Brother Drum	Brother DCP-8070/8085/HL-5340/5350/5370/5380/MFC-8370/8380/8880/8890	Brother DR-3200 Drum
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Black
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Cyan
Brother	Brother HL-2240 / 2250 / 2270	Brother TN-2210
Brother	Brother HL-2240 / 2250 / 2270	Brother TN-2220
Brother Drum	Brother DCP-7055 / HL-2130 / HL-2132 / HL-2135	Brother DR-2200 Drum
Brother Intro	Brother DCP-7010/7020/7025/FAX-2820/2920/HL-2030/2040/2050/2070/MFC-7225N/7420/7820N	Brother TN-2000 / TN-350 INTRO
Brother Intro	Brother HL-2140/2150N/2170W	Brother TN-2110 / TN-2120 INTRO
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Black INTRO
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Cyan INTRO
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-130 Magenta
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-130 Yellow
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-135 Magenta
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-135 Yellow
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Magenta
Brother	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Yellow
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 Black
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 Cyan
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 Magenta
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 Yellow
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-325 Black
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-325 Cyan
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-325 Magenta
Brother	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-325 Yellow
Brother Drum	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother DR-320CL Drum
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Magenta INTRO
Brother Intro	Brother HL3040CN / HL3070CW / DCP9010 / MFC9120CN / MFC9320CW	Brother TN-230 Yellow INTRO
Brother Intro	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 / 325 / 328 Black INTRO
Brother Intro	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 / 325 / 328 Cyan INTRO
Brother Intro	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 / 325 / 328 Magenta INTRO
Brother Intro	Brother DCP-9055CDN / HL-4140 / 4150 / 4570 / MFC-9460 / 9465 / 9970	Brother TN-320 / 325 / 328 Yellow INTRO
Brother	Brother DCP-9270CDN / HL-4570CDWT	Brother TN-328 Black
Brother	Brother DCP-9270CDN / HL-4570CDWT	Brother TN-328 Cyan
Brother	Brother DCP-9270CDN / HL-4570CDWT	Brother TN-328 Magenta
Brother	Brother DCP-9270CDN / HL-4570CDWT	Brother TN-328 Yellow
Brother	Brother DCP-7055 / HL-2130 / HL-2132 / HL-2135	Brother TN-2010
Brother	Brother DCP-8250DN / HL-6180DW / 6180DWT / MFC-8950DWT	Brother TN-3390
Brother Drum	Brother DCP-8110/8250/HL-5440/5450/5470/6180/MFC-8510/8520/8950	Brother DR-3300 Drum
Brother	Brother DCP-8110/8250/HL-5440/5450/5470/6180/MFC-8510/8520/8950	Brother TN-3330
Brother	Brother DCP-8110/8250/HL-5440/5450/5470/6180/MFC-8510/8520/8950	Brother TN-3380
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-130 Black
Brother Drum	Brother DCP-L5500/6600/HL-L5000/5100/5200/6300/6400/MFC-L5700/5750/6800/6900/	Brother DR-3400 Drum
Brother	Brother DCP-9040/9042/9045/HL-4040/4050/4070/MFC-9440/9450/9840	Brother TN-130 Cyan
Brother Drum	Brother DCP-8060/8065/HL-5240/HL-5250/5270/5280DW/MFC-8460/8860/8870	Brother DR-3100 Drum
Brother Intro	Brother DCP-8110/8250/HL-5440/5450/5470/6180/MFC-8510/8520/8950	Brother TN-3330 / 3380 / 3390 INTRO
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Cyan
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Magenta
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Yellow
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Black INTRO
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Cyan INTRO
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Magenta INTRO
Brother Intro	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 / 245 Yellow INTRO
Brother Drum	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother DR-241CL Drum
Brother	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother TN-241 Black
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Cyan
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Magenta
Brother	Brother DCP-9020CDW/HL-3140/3150/3170/MFC-9140/9330/9340c	Brother TN-245 Yellow
Brother	Brother DCP-1510 / HL-1110 / HL-1112 / MFC-1810	Brother TN-1050
Brother Intro	Brother DCP-1510 / HL-1110 / HL-1112 / MFC-1810	Brother TN-1050 INTRO
Brother Drum	Brother DCP-1510 / HL-1110 / HL-1112 / MFC-1810	Brother DR-1050 Drum
Brother Drum	Brother HL3140 / HL3170 / MFC9130 / MFC9330	Brother DR-241 Black Drum
Brother Intro	Brother DCP-7055 / HL-2130 / HL-2132 / HL-2135	Brother TN-2010 INTRO
Brother	Brother DCP7040/HL2140/HL2142/HL2150N/HL2170W/MFC7340/MFC7440/MFC7840W	Brother TN-2130
Brother	Brother DCP7040/HL2140/HL2142/HL2150N/HL2170W/MFC7340/MFC7440/MFC7840W	Brother TN-2150
Brother	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2310
Brother	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2320
Brother Intro	Brother DCP-L2500D/L2520DW/L2540DN/HL-L2300D/L2340DW/L2360DN/L2365DW/MFC-L2700DW/L2720DW/L2740DW	Brother TN-2310 / TN-2320 INTRO
Brother Intro	Brother DCP-8060/8065/HL-5240/HL-5250/5270/5280DW/MFC-8460/8860/8871	Brother TN-3130 / TN-3170 INTRO
Brother	Brother HL-5240/5250DN/5270DN/MFC-8460N/8860DN	Brother TN-3185 Black
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 Black
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 Cyan
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 Magenta
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 Yellow
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-326 Black
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-326 Cyan
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-326 Magenta
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-326 Yellow
Brother Intro	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 / TN-326 Black INTRO
Brother Intro	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 / TN-326 Cyan INTRO
Brother Intro	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 / TN-326 Magenta INTRO
Brother Intro	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-321 / TN-326 Yellow INTRO
Brother Intro	Brother DCP-8070/8085/HL-5340/5350/5370/5380/MFC-8370/8380/8880/8891	Brother TN-3230 / TN-3280 INTRO
Brother	Brother HL-L9200CDWT / HL-L9300CDWT / MFC-L9550CDWT	Brother TN-900 Black
Brother	Brother HL-L9200CDWT / HL-L9300CDWT / MFC-L9550CDWT	Brother TN-900 Cyan
Brother	Brother HL-L9200CDWT / HL-L9300CDWT / MFC-L9550CDWT	Brother TN-900 Magenta
Brother	Brother HL-L9200CDWT / HL-L9300CDWT / MFC-L9550CDWT	Brother TN-900 Yellow
Brother Drum	Brother DCP-L8400/8450/8250/HL-L8350/9200/9300/MFC-L8650/8850/9950	Brother DR-321CL Drum
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-329 Black Ex Hi Cap
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-329 Cyan Ex Hi Cap
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-329 Magenta Ex Hi Cap
Brother	Brother DCP-L8400CDN/L8450CDW/HL-L8250CDN/L8350CDW/MFC-L8650CDW/L8850CDW	Brother TN-329 Yellow Ex Hi Cap
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 Black
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 Cyan
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 Magenta
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 Yellow
Brother Intro	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 / 246 Black INTRO

Brother Intro	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 / 246 Cyan INTRO
Brother Intro	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 / 246 Magenta INTRO
Brother Intro	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-242 / 246 Yellow INTRO
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-246 Cyan
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-246 Magenta
Brother	Brother DCP-9017/9022/3142/3152/3172/9142/9332/9342	Brother TN-246 Yellow
Brother	Brother DCP-L6600/HL-L6250/L6300/L6400/MFC-L6800/L6900	Brother TN-3512 Super High
Brother	Brother DCP-L6600/HL-L6250/L6300/L6400/MFC-L6800/L6900	Brother TN-3520 Ultra High
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 Black
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 Cyan
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 Magenta
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 Yellow
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-423 Black
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-423 Cyan
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-423 Magenta
Brother	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-423 Yellow
Brother Intro	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 / 423 Black INTRO
Brother Intro	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 / 423 Cyan INTRO
Brother Intro	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 / 423 Magenta INTRO
Brother Intro	Brother DCP-L8410CDW / HL-L8260CDW / L8360CDW / MFC-L8690CDW /L8900CDW	Brother TN-421 / 423 Yellow INTRO
Brother	Brother HL-L8360CDW / MFC-L8900CDW	Brother TN-426 Black
Brother	Brother HL-L8360CDW / MFC-L8900CDW	Brother TN-426 Cyan
Brother	Brother HL-L8360CDW / MFC-L8900CDW	Brother TN-426 Magenta
Brother	Brother HL-L8360CDW / MFC-L8900CDW	Brother TN-426 Yellow
Brother Drum	Brother HL-L8360CDW / MFC-L8900CDW	Brother DR-421Cl Drum
Brother	Brother HL-L9310CDW / MFC-L9570CDW	Brother TN-910 Black
Brother	Brother HL-L9310CDW / MFC-L9570CDW	Brother TN-910 Cyan
Brother	Brother HL-L9310CDW / MFC-L9570CDW	Brother TN-910 Magenta
Brother	Brother HL-L9310CDW / MFC-L9570CDW	Brother TN-910 Yellow
Brother Intro	Brother DCP-L6600/HL-L6250/L6300/L6400/MFC-L6800/L6900	Brother TN-3512 INTRO
Canon	Canon FC200 / 300 series / PC300 / 500 / 700 series	Canon E30 / E15 French or Others
Canon	Canon FC200 / 300 series / PC300 / 500 / 700 series	Canon E30 / E15 Japan / Chinese Versions
Canon	Canon 716 Black	Canon 716 Black
Canon	Canon 716 Cyan	Canon 716 Cyan
Canon	Canon 716 Magenta	Canon 716 Magenta
Canon	Canon 716 Yellow	Canon 716 Yellow
Canon	Canon 711 Black	Canon 711 Black
Canon	Canon 711 Cyan	Canon 711 Cyan
Canon	Canon 711 Magenta	Canon 711 Magenta
Canon	Canon 711 Yellow	Canon 711 Yellow
Canon	Canon I-SENSYS LBP-6000	Canon 725
Canon	Canon 718 Black	Canon 718 Black
Canon	Canon 718 Cyan	Canon 718 Cyan
Canon	Canon 718 Magenta	Canon 718 Magenta
Canon	Canon 718 Yellow	Canon 718 Yellow
Canon	Canon I-SENSYS MF4410 / MF4430 / MF4450 / MF4580dn / MF4570dn	Canon 728
Canon Intro	Canon 718 Black INTRO	Canon 718 Black INTRO
Canon Intro	Canon 718 Cyan INTRO	Canon 718 Cyan INTRO
Canon Intro	Canon 718 Magenta INTRO	Canon 718 Magenta INTRO
Canon Intro	Canon 718 Yellow INTRO	Canon 718 Yellow INTRO
Canon	Canon IR-2270 Black	Canon C-EXV 11 Black
Canon	Canon IR 2535 / IR2545i	Canon C-EXV 32 Black
Canon	Canon IR 2520 / IR 2525 / IR 2530i	Canon C-EXV 33 Black
Canon	Canon IR-6055/6055i/6065/6075/6255/6265/6275/6555/6565/6571	Canon C-EXV 36 Black
Canon	Canon IR 4045i / IR4051i	Canon C-EXV 38 Black
Canon	Canon IR-4025/4035/4225/4235/4245/4251	Canon C-EXV 39 Black
Canon	Canon IR C250i/C350i/C350P/IR C351F	Canon C-EXV 47 Black
Canon	Canon 731 Black	Canon 731 Black
Canon	Canon 731H Black Hi Cap	Canon 731H Black Hi Cap
Canon	Canon 731 Cyan	Canon 731 Cyan
Canon	Canon 731 Yellow	Canon 731 Yellow
Canon	Canon 731 Magenta	Canon 731 Magenta
Canon Intro	Canon 731 Black INTRO	Canon 731 Black INTRO
Canon Intro	Canon 731 Cyan INTRO	Canon 731 Cyan INTRO
Canon Intro	Canon 731 Yellow INTRO	Canon 731 Yellow INTRO
Canon Intro	Canon 731 Magenta INTRO	Canon 731 Magenta INTRO
Canon	Canon IR-1730/1740/1750	Canon C-EXV 37 Black
Canon	Canon IR-C3320 / C3325 / C3330	Canon C-EXV 49 Black
Canon	Canon IR C250i/C350i/C350P/IR C351F	Canon C-EXV 47 Cyan
Canon	Canon IR C250i/C350i/C350P/IR C351F	Canon C-EXV 47 Magenta
Canon	Canon IR C250i/C350i/C350P/IR C351F	Canon C-EXV 47 Yellow
Canon	Canon IR-C3320 / C3325 / C3330	Canon C-EXV 49 Cyan
Canon	Canon IR-C3320 / C3325 / C3330	Canon C-EXV 49 Magenta
Canon	Canon IR-C3320 / C3325 / C3330	Canon C-EXV 49 Yellow
Canon	Canon IR-C7260i/7270/7280	Canon C-EXV 45 Black
Canon	Canon IR-C7260i/7270/7280	Canon C-EXV 45 Cyan
Canon	Canon IR-C7260i/7270/7280	Canon C-EXV 45 Magents
Canon	Canon IR-C7260i/7270/7280	Canon C-EXV 45 Yellow
Canon	Canon IR C1325iF/C1335iF/C1335iFC	Canon C-EXV 48 Black
Canon	Canon IR C1325iF/C1335iF/C1335iFC	Canon C-EXV 48 Cyan
Canon	Canon IR C1325iF/C1335iF/C1335iFC	Canon C-EXV 48 Magenta
Canon	Canon IR C1325iF/C1335iF/C1335iFC	Canon C-EXV 48 Yellow
Canon	Canon IR-C5535/C5535i/C5540i/C5550i/C5560	Canon C-EXV 51 Black
Canon	Canon IR-C5535/C5535i/C5540i/C5550i/C5560	Canon C-EXV 51 Cyan
Canon	Canon IR-C5535/C5535i/C5540i/C5550i/C5560	Canon C-EXV 51 Magenta
Canon	Canon IR-C5535/C5535i/C5540i/C5550i/C5560	Canon C-EXV 51 Yellow
Canon	Canon ImageRUNNER IR-5570 / IR-6570	Canon C-EXV 13 Black
Canon	Canon C-EXV 24 Black	Canon C-EXV 22 Black
Canon	Canon IR-1435 / 1435i / 1435iF / 1435P	Canon C-EXV 50 Black
Canon	Canon IR-C7565i / C7570i / C7580i	Canon C-EXV 52 Black
Canon	Canon IR-C7565i / C7570i / C7580i	Canon C-EXV 52 Cyan
Canon	Canon IR-C7565i / C7570i / C7580i	Canon C-EXV 52 Magenta
Canon	Canon IR-C7565i / C7570i / C7580i	Canon C-EXV 52 Yellow
Canon	Canon IR-4525i / 4535i / 4545i /4551i	Canon C-EXV 53 Black
Canon Intro	Canon 716 Black INTRO	Canon 716 Black INTRO
Canon Intro	Canon 716 Cyan INTRO	Canon 716 Cyan INTRO

Canon Intro	Canon 716 Yellow INTRO	Canon 716 Yellow INTRO
Canon Intro	Canon 716 Magenta INTRO	Canon 716 Magenta INTRO
Canon	Canon IR-3570 Black	Canon C-EXV 12 Black
Canon Drum	Canon IRC-2380/2880/3080/3380/3580/3880	Canon C-EXV 21 Black Drum
Canon Drum	Canon IRC-2380/2880/3080/3380/3580/3880	Canon C-EXV 21 Cyan Drum
Canon Drum	Canon IRC-2380/2880/3080/3380/3580/3880	Canon C-EXV 21 Magenta Drum
Canon Drum	Canon IRC-2380/2880/3080/3380/3580/3880	Canon C-EXV 21 Yellow Drum
Canon	Canon C-EXV15 Black	Canon C-EXV 15 Black
Canon	Canon C-EXV18 Black	Canon C-EXV 18 Black
Canon	Canon IR-C2020 / C2030	Canon C-EXV 34 Black
Canon	Canon IR-C2020 / C2030	Canon C-EXV 34 Cyan
Canon	Canon IR-C2020 / C2030	Canon C-EXV 34 Magenta
Canon	Canon IR-C2020 / C2030	Canon C-EXV 34 Yellow
Dell	Dell P1700 / 1700N / 1710	Dell P1700 / P1710 ALL
Dell	Dell 1100 / 1110	Dell 1100 / GC502
Dell	Dell 1720 / 1720dn	Dell P1720 ALL
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Black Std Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Cyan Std Cap
Dell	Dell 3130	Dell 3130 Black Std Cap
Dell	Dell 3130	Dell 3130 Cyan Std Cap
Dell	Dell 3130	Dell 3130 Black Hi Cap
Dell	Dell 3130	Dell 3130 Cyan Hi Cap
Dell	Dell 2330d / 2330dn / 2350d / 2350dn	Dell 2330 ALL
Dell	Dell 2335	Dell 2335 / HX756 HI CAP
Dell	Dell M5210	Dell M5210 / M5310 ALL
Dell	Dell 1100 / 1110	Dell 1100 / J9341
Dell	Dell 3330	Dell 3330 / P976R
Dell	Dell 2230	Dell 2230 / M797K & M795K
Dell	Dell B1260dn / B1265dfw / B1265dnf	Dell B126X / DRYXV HI Cap
Dell	Dell B1260dn / B1265dfw / B1265dnf	Dell B126X / G9W85 Std Cap
Dell	Dell 1230C / 1235	Dell 1230/35 / N012K Black
Dell	Dell 1230C / 1235	Dell 1230/35 / J069K Cyan
Dell	Dell 1230C / 1235	Dell 1230/35 / J506K Magenta
Dell	Dell 1230C / 1235	Dell 1230/35 / M127K Yellow
Dell	Dell 1130, 1130n, 1133, 1135n	Dell 1130 / 3111D Std Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Magenta Std Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Yellow Std Cap
Dell	Dell 3130	Dell 3130 Magenta Hi Cap
Dell	Dell 3130	Dell 3130 Yellow Hi Cap
Dell	Dell 3130	Dell 3130 Magenta Std Cap
Dell	Dell 3130	Dell 3130 Yellow Std Cap
Dell	Dell 1130, 1130n, 1133, 1135n	Dell 1130 / 2MMJP HI Cap
Dell	Dell 2335	Dell 2335 Std Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Black Hi Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Cyan Hi Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Magenta Hi Cap
Dell	Dell 3110CN / 3115CN (Epson C2800 / Xerox 6180)	Dell 3110 / 3115 Yellow Hi Cap
Dell	Dell B1260dn / B1265dfw / B1265dnf	Dell B1260 / B1265 DRYXV HI Cap
Dell	Dell B1260dn / B1265dfw / B1265dnf	Dell B1260 / B1265 G9W85 Std Cap
Dell	Dell 5350dn	Dell 5230/5320/5350 ALL Black
Dell	Dell 5130	Dell 5130 Black
Dell	Dell 5130	Dell 5130 Cyan
Dell	Dell 5130	Dell 5130 Margenta
Dell	Dell 5130	Dell 5130 Yellow
Dell	Dell 3333DN / 3335DN	Dell 3333DN / 3335DN Hi Cap
Dell	Dell 3333DN / 3335DN	Dell 3333DN / 3335DN Std Cap
Dell	Dell B2360D / B3460DN / B3465DNF	Dell B2360 / B3460 / B3465
Dell Intro	Dell B2360D / B3460DN / B3465DNF	Dell B2360 / B3460 / B3465 INTRO
Dell	Dell B5460dn / B5465dnf	Dell B5460 / B5465 Std Cap
Dell	Dell B1160 / B1160w / B1163w / B1165nfw	Dell B116 Hi Cap
Dell	Dell B2375DFW / B2375DNF	Dell B2375 Hi Cap
Dell	Dell 2355	Dell 2355 Std Cap
Dell	Dell 2355	Dell 2355 Hi Cap
Dell	Dell B1160 / B1160w / B1163w / B1165nfw	Dell B116 Std Cap
Dell Intro	Dell B1160 / B1160w / B1163w / B1165nfw	Dell B116 INTRO
Dell Intro	Dell B1260dn / B1265dfw / B1265dnf	Dell B126 INTRO
Dell	Dell B2375DFW / B2375DNF	Dell B2375 Std Cap
Dell	Dell B5460dn / B5465dnf	Dell B5460 / B5465 Hi Cap
Dell Intro	Dell B5460dn / B5465dnf	Dell B5460 / B5465 INTRO
Dell	Dell 7130 Black	Dell 7130 Black
Dell	Dell 7130 Cyan	Dell 7130 Cyan
Dell	Dell 7130 Magenta	Dell 7130 Magenta
Dell	Dell 7130 Yellow	Dell 7130 Yellow
Dell	Dell E310dw/E514dw/E515dn/E515dw	Dell E310 E515 Hi Cap
Dell	Dell E310dw/E514dw/E515dn/E515dw	Dell E310 E515 Std Cap
Dell	Dell E525 Black	Dell E525 Black
Dell	Dell E525 Cyan	Dell E525 Cyan
Dell	Dell E525 Magenta	Dell E525 Magenta
Dell	Dell E525 Yellow	Dell E525 Yellow
Dell	Dell H625cdw/H825cdw/S2825cdn	Dell H625 Black
Dell	Dell H625cdw/H825cdw/S2825cdn	Dell H625 Cyan
Dell	Dell H625cdw/H825cdw/S2825cdn	Dell H625 Magenta
Dell	Dell H625cdw/H825cdw/S2825cdn	Dell H625 Yellow
Epson	Epson EPL-N4000	Epson 1060 / EPL-N4000
Epson	Epson EPL-N2050	Epson 1070 / EPL-N2050
Epson	Epson EPL-6200	Epson 0166 / EPL-6200 Hi Cap
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1161 / C2800 Hi Cap Black
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1165 / C2800 Std Cap Black
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1160 / C2800 Hi Cap Cyan
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1164 / C2800 Std Cap Cyan
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1159 / C2800 Hi Cap Magenta
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1163 / C2800 Std Cap Magenta
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1158 / C2800 Hi Cap Yellow
Epson	Epson C2800 (Dell 3110 / Xerox 6180)	Epson 1162 / C2800 Std Cap Yellow
Epson	Epson EPL-N3000	Epson 1111 / EPL-N3000
Epson	Epson EPL-6200	Epson 0167 / EPL-6200

Epson	Epson C3800	Epson 1127 / C3800 Black Hi Cap	
Epson	Epson C3800	Epson 1126 / C3800 Cyan Hi Cap	
Epson	Epson C3800	Epson 1125 / C3800 Magenta Hi Cap	
Epson	Epson C3800	Epson 1124 / C3800 Yellow Hi Cap	
Epson	Epson C3800	Epson 1130 / C3800 Cyan	
Epson	Epson C3800	Epson 1129 / C3800 Magenta	
Epson	Epson C3800	Epson 1128 / C3800 Yellow	
Epson	Epson MX20 / M2400 / EPL-N2550	Epson 0582 / 584 / MX2300 / 2400	
Epson	Epson MX20 / M2300 / M2400	Epson 0583 / 585 / MX2300 / 2400	
Epson	Epson AcuLaser M2000D	Epson 0435 / 0436 / 0437 / 0438	
Epson	Epson C1700/c1750n/C1750w/CX17/CX17nf/CX17wf	Epson 0614 / 0672 / C1700 Black	
Epson	Epson C1700/c1750n/C1750w/CX17/CX17nf/CX17wf	Epson 0613 / 0671 / C1700 Cyan	
Epson	Epson C1700/c1750n/C1750w/CX17/CX17nf/CX17wf	Epson 0611 / 0669 / C1700 Yellow	
Epson	Epson C1700/c1750n/C1750w/CX17/CX17nf/CX17wf	Epson 0612 / 0670 / C1700 Magenta	
Epson	Epson AL-M300D Epson AL-M300DN	Epson 0689 / 0691 / AL-M300 Black Hi Cap	
Epson Intro	Epson AL-M300D Epson AL-M300DN	Epson 0689 / 0691 / 0690 AL-M300 Black INTRO	
Epson Drum	Epson AL-M300D	Epson 1228 / AL-M300 Drum Unit	
Epson	Epson AL-M400DN	Epson 0698 / 0699 AL-M400 Black-	
Epson Intro	Epson AL-M400DN	Epson 0698 / 0699 AL-M400 Black INTRO	
Epson Drum	Epson AL-M400DN	Epson 1230 / AL-M400 Drum Unit	
Epson	Epson AcuLaser M2000D	Epson 0437 Hi Cap	
Epson	Epson AL-M300D Epson AL-M300DN	Epson 0690 AL-M300 Black Std Cap	
Epson	Epson AcuLaser M1400/MX14/MX14NF	Epson 0650 Hi Cap	
Epson	Epson AcuLaser M1400/MX14/MX14NF	Epson 0651 Hi Cap	
Epson	Epson AcuLaser M1400/MX14/MX14NF	Epson 0652 Std Cap	
Epson Drum	Epson EPL-6200 Drum	Epson 1099 / EPL-6200 Drum	
HP	HP LaserJet 4L / 4P / 4ML / 4MP	HP 74A / 92274A	
HP	HP IIIp / IIIPMAC / IIp / IIp Plus	HP 75A / 92275A	
HP	HP 4si / 4si mx / IIIsi IIIsi mx	HP 91A / 92291A	
HP	HP II / IID / III / IIID	HP 95A / 92295A	
HP	HP LaserJet 4 / 4+ / 4M / 4M+ / 5 / 5N / 5M	HP 98A / 92298A	
HP	HP LaserJet 4 / 4+ / 4M / 4M+ / 5 / 5N / 5M	HP 98X / 92298X	
HP	HP LaserJet 4V/4MV	HP 00A / C3900A	
HP	HP 5P / 5MP / 6P / 6MP	HP 03A / C3903A	
HP	HP 5L / 5ML / 6L / 6ML / 3100 / 3150	HP 06A / C3906A	
HP	HP Series 5Si / 8000	HP 09A/X / C3909A/X / Canon EP-W	
HP	HP 1100 / 1100A / 3200	HP 92A / C4092A	
HP	HP LaserJet 2100 series / 2200 series	HP 96A / C4096A	
HP	HP 4000 / 4000N / 4000T / 4050	HP 27A / C4127A / Canon EP-53	
HP	HP 4000 / 4000N / 4000T / 4050	HP 27X / C4127X / Canon EP-52	
HP	HP 5000 / 5100	HP 29X / C4129X / Canon EP-62	
HP	HP Color LaserJet 8500	HP C4149A Black	
HP	HP Color LaserJet 8500	HP C4150A Cyan	
HP	HP Color LaserJet 8500	HP C4151A Magenta	
HP	HP Color LaserJet 8500	HP C4152A Yellow	
HP	HP 8100 & 8150 & Mopier 320	HP 82X / C4182X / Canon EP-72	
HP	HP Color LaserJet 4500	HP C4191A Black	
HP	HP Color LaserJet 4500	HP C4192A Cyan	
HP	HP Color LaserJet 4500	HP C4193A Magenta	
HP	HP Color LaserJet 4500	HP C4194A Yellow	
HP	HP LaserJet 1000 / 05 / 1200 / 20 / 3300 / 20 / 30 Std Cap	HP 15A / C7115A	
HP	HP LaserJet 1000 / 05 / 1200 / 20 / 3300 / 20 / 30 High Cap	HP 15X / C7115X	
HP	HP 4100	HP 61A / C8061A	
HP	HP 4100	HP 61X / C8061X	
HP	HP 9000 Series	HP 43X / C8543X	
HP	HP Color LaserJet 4600 / 4650	HP C9720A / 641A Back	
HP	HP Color LaserJet 4600 / 4650	HP C9721A / 641A Cyan	
HP	HP Color LaserJet 4600 / 4650	HP C9722A / 641A Yellow	
HP	HP Color LaserJet 4600 / 4650	HP C9723A / 641A Magenta	
HP	HP 1500 / 2500 Black	HP C9700A / 121A / Canon 701 Black	
HP	HP 1500 / 2500 Color	HP C9701A / 121A / Canon 701 Cyan	
HP	HP 1500 / 2500 Color	HP C9702A / 121A / Canon 701 Yellow	
HP	HP 1500 / 2500 Color	HP C9703A / 121A / Canon 701 Magenta	
HP	HP Color LaserJet 5500 / 5550	HP C9730A / 645A Black	
HP	HP Color LaserJet 5500 / 5550	HP C9731A / 645A Cyan	
HP	HP Color LaserJet 5500 / 5550	HP C9732A / 645A Yellow	
HP	HP Color LaserJet 5500 / 5550	HP C9733A / 645A Magenta	
HP	HP 4200	HP 38A / Q1338A	
HP	HP 4300	HP 39A / Q1339A	
HP	HP 1150	HP 24A / Q2624A	
HP	HP 1300 / 1300A	HP 13A / Q2613A	
HP	HP LaserJet 2300 / 2300N	HP 10A / Q2610A	
HP	HP 1300 / 1300X	HP 13X / Q2613X	
HP	HP LaserJet 1010/12/15/18/20/22/32/3015/20/30	HP 12A / Q2612A	
HP	HP Color LaserJet 3500 / 3550 / 3700	HP Q2671A / 308A Cyan	
HP	HP Color LaserJet 3500 / 3550 / 3700	HP Q2672A / 308A Yellow	
HP	HP Color LaserJet 3500 / 3550 / 3700	HP Q2673A / 308A Magenta	
HP	HP Color LaserJet 3700	HP Q2681A / 308A Cyan	
HP	HP Color LaserJet 3700	HP Q2682A / 308A Yellow	
HP	HP Color LaserJet 3700	HP Q2683A / 308A Magenta	
HP	HP Color LaserJet CP6015, CM6030, CM6040	HP CB380A / 823A Black	
HP	HP Color LaserJet CP6015, CM6030, CM6040	HP CB381A / 823A Cyan	
HP	HP Color LaserJet CP2025/CM2320	HP CC530A / 304A Black	
HP	HP Color LaserJet CP2025/CM2320	HP CC531A / 304A Cyan	
HP Intro	HP LaserJet Pro MFP M125nw / M127fn	HP 83A / CF283A INTRO	
HP Drum	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3964A / 122 Drum	
HP	HP LaserJet 1160 / 1320 / 1320n / 1320nw / 1320tn	HP 49A / Q5949A / Canon 708	
HP	HP LaserJet 1160 / 1320 / 1320n / 1320nw / 1320tn	HP 49X / Q5949X / Canon 708H	
HP	HP LaserJet 4240 / 4250 / 4350 Std Cap	HP 42A / Q5942A	
HP	HP LaserJet 4240 / 4250 / 4350 High Cap	HP 42X / Q5942X	
HP	HP LaserJet 2410	HP 11A / Q6511A / Canon 710	
HP	HP LaserJet 2410	HP 11X / Q6511X / Canon 710H	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3971A / 122 Cyan	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3972A / 122 Yellow	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3973A / 122 Magenta	
HP	HP 4345	HP 45A / Q5945A	

HP	HP Series 5Si / 8000	HP 09X / C3909X	
HP	HP LaserJet Pro 400 M401 / MFP M425	HP 80A / CF280A / Canon 720	
HP	HP LaserJet Pro 400 M401 / MFP M425	HP 80X / CF280X / Canon 720H	
HP	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6000A / 124A / Canon 707 Black	
HP	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6001A / 124A / Canon 707 Cyan	
HP	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6002A / 124A / Canon 707 Yellow	
HP	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6003A / 124A / Canon 707 Magenta	
HP	HP 4700 (Black)	HP Q5950A / 643A Black	
HP	HP 4700 (Color)	HP Q5951A / 643A Cyan	
HP	HP 4700 (Color)	HP Q5952A / 643A Yellow	
HP	HP 4700 (Color)	HP Q5953A / 643A Magenta	
HP	HP Color LaserJet 3600 / 3800 / CP3505	HP Q6470A / 501A Black	
HP	HP Color LaserJet 3600 / 3800 / CP3505	HP Q6471A / 501A Cyan	
HP	HP Color LaserJet 3600 / 3800 / CP3505	HP Q6472A / 501A Yellow	
HP	HP Color LaserJet 3600 / 3800 / CP3505	HP Q6473A / 501A Magenta	
HP	HP 4730	HP Q6460A / 644A Black	
HP	HP 4730	HP Q6463A / 644A Magenta	
HP	HP 2700 / 3000 (black)	HP Q7560A / 314A Black	
HP	HP 2700 / 3000 (Color)	HP Q7561A / 314A Cyan	
HP	HP 2700 / 3000 (Color)	HP Q7562A / 314A Yellow	
HP	HP 2700 / 3000 (Color)	HP Q7563A / 314A Magenta	
HP	HP LaserJet 5200 Printer series	HP 16A / Q7516A	
HP	HP Colour LaserJet 3800 / CP3505	HP Q7581A / 503A Cyan	
HP	HP Colour LaserJet 3800 / CP3505	HP Q7582A / 503A Yellow	
HP	HP Colour LaserJet 3800 / CP3505	HP Q7583A / 503A Magenta	
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB540A / 125A Black	
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB541A / 125A Cyan	
HP	HP Color LaserJet CP4005	HP CB400A / 642A Black	
HP	HP Color LaserJet CP4005	HP CB401A / 642A Cyan	
HP	HP LaserJet P1005 / P1006 Printers	HP 35A / CB435A / Canon 712	
HP	HP LaserJet P1505 / P1505 Series	HP 36A / CB436A / Canon 713	
HP	HP LaserJet P4014 / P4015 / P4515 Series	HP 64A / CC364X	
HP	HP LaserJet P4015 / P4515 Series	HP 64X / CC364X	
HP	HP LaserJet P2035 / P2055 Black Toner	HP 05A / CE505A / Canon 719	
HP	HP Color LaserJet CM6030 / 6040	HP CB390A / 825A Black	
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250A / 504A / Canon 723 Black	
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE251A / 504A / Canon 723 Cyan	
HP	HP LaserJet P2035 / P2055 Black Toner	HP 05X / CE505X / Canon 719H	
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250X / 504X / Canon 723H Black	
HP	HP LaserJet P2015 Printers Series A	HP 53A / Q7553A / Canon 715	
HP	HP LaserJet P2015 Printers Series X	HP 53X / Q7553X / Canon 715H	
HP	HP LaserJet M3027 / 3035 / P3005 Std Cap	HP 51A / Q7551A	
HP	HP LaserJet M3027 / 3035 / P3005 High Cap	HP 51X / Q7551X	
HP	HP LaserJet M5025 mfp / 5035	HP 70A / Q7570A	
HP	HP LaserJet Enterprise P3015	HP 55A / CE255A / Canon 724	
HP	HP LaserJet Enterprise P3015	HP 55X / CE255X / Canon 724H	
HP Intro	HP LaserJet P1005 / P1006 Printers	HP 35A / CB435A / Canon 712 INTRO	
HP Intro	HP LaserJet P1505 / P1505 Series	HP 36A / CB436A / Canon 713 INTRO	
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB540A / 125A / Canon 716 Black INTRO	
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB541A / 125A / Canon 716 Cyan INTRO	
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB542A / 125A / Canon 716 Yellow INTRO	
HP Intro	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB543A / 125A / Canon 716 Magenta INTRO	
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB542A / 125A Yellow	
HP	HP Colour LJ CM1312/CP1215/CP1217/CP1510/CP1514/CP1515/CP1518	HP CB543A / 125A Magenta	
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC530A / 304A Black INTRO	
HP	HP Color LaserJet CP2025/CM2320	HP CC532A / 304A Yellow	
HP	HP Color LaserJet CP2025/CM2320	HP CC533A / 304A Magenta	
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC531A / 304A Cyan INTRO	
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC532A / 304A Yellow INTRO	
HP Intro	HP Color LaserJet CP2025/CM2320	HP CC533A / 304A Magenta INTRO	
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE250A / 504A / Canon 723 Black INTRO	
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE252A / 504A / Canon 723 Yellow	
HP	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE253A / 504A / Canon 723 Magenta	
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE251A / 504A / Canon 723 Cyan INTRO	
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE252A / 504A / Canon 723 Yellow INTRO	
HP Intro	HP CM 3530 FS MFP/MFP/CP 3525 DN/N/X	HP CE253A / 504A / Canon 723 Magenta INTRO	
HP	HP Colour LaserJet CP4525dn / CP4025n	HP CE260A Black	
HP	HP Colour LaserJet CP4525dn / CP4025n	HP CE261A Cyan	
HP	HP Colour LaserJet CP4525dn / CP4025n	HP CE262A Yellow	
HP	HP Colour LaserJet CP4525dn / CP4025n	HP CE263A Magenta	
HP	HP Color LaserJet CP6015, CM6030, CM6040	HP CB382A / 823A Yellow	
HP	HP Color LaserJet CP6015, CM6030, CM6040	HP CB383A / 823A Magenta	
HP	HP Color LaserJet CP4005	HP CB402A / 642A Yellow	
HP	HP Color LaserJet CP4005	HP CB403A / 642A Magenta	
HP	HP Colour LaserJet CP4525dn / CP4025n	HP CE260X / 649X Black	
HP	HP CP5225	HP CE740A / 307A Black	
HP	HP CP5225	HP CE741A / 307A Cyan	
HP	HP CP5225	HP CE742A / 307A Yellow	
HP	HP CP5225	HP CE743A / 307A Magenta	
HP	HP LaserJet Enterprise Flow M830z / M806dn / M806x+	HP 25X / CF325X	
HP	HP LaserJet Pro MFP M125nw / M127fn	HP 83A / CF283A / Canon 737	
HP Intro	HP LJ Pro M1132MFP/M1212NF/M1217nfw/P1100/p1102/P1104	HP 85A / CE285A INTRO	
HP	HP LJ Pro M1132MFP/M1212NF/M1217nfw/P1100/p1102/P1104	HP 85A / CE285A	
HP Intro	HP LaserJet Pro P1566	HP 78A / CE278A INTRO	
HP	HP LaserJet Pro P1566	HP 78A / CE278A	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3960A / 122 Black	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3961A / 122 Cyan	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3962A / 122 Yellow	
HP	HP Colour Laserjet 2550 / 2820 / 2840 / 2800	HP Q3963A / 122 Magenta	
HP	HP Color LaserJet 3500 / 3550 / 3700	HP Q2670A / 308A Black	
HP	HP 4730	HP Q6461A / 644A Cyan	
HP	HP 4730	HP Q6462A / 644A Yellow	
HP Intro	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6000A / 124A / Canon 707 Black INTRO	
HP Intro	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6001A / 124A / Canon 707 Cyan INTRO	
HP Intro	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6002A / 124A / Canon 707 Yellow INTRO	
HP Intro	HP Color LaserJet 2600 / 2605 / 1015 / 1017	HP Q6003A / 124A / Canon 707 Magenta INTRO	

HP	HP Color LaserJet CP1020 / CP1025	HP CE310A / 126A / Canon 729 Black	
HP	HP Color LaserJet CP1020 / CP1025	HP CE311A / 126A / Canon 729 Cyan	
HP	HP Color LaserJet CP1020 / CP1025	HP CE313A / 126A / Canon 729 Magenta	
HP	HP Color LaserJet CP1020 / CP1025	HP CE312A / 126A / Canon 729 Yellow	
HP	HP Color LaserJet CP1415 / CP1525	HP CE320A / 128A Black	
HP	HP Color LaserJet CP1415 / CP1525	HP CE321A / 128A Cyan	
HP	HP Color LaserJet CP1415 / CP1525	HP CE323A / 128A Magenta	
HP	HP Color LaserJet CP1415 / CP1525	HP CE322A / 128A Yellow	
HP Drum	HP Color LaserJet CP1020 / CP1025	HP CE314A / 126A / Canon 029 Drum	
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE270A / 650A Black	
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE271A / 650A Cyan	
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE272A / 650A Yellow	
HP	HP Colour LaserJet CP5520 / 5525dn / M750dn	HP CE273A / 650A Magenta	
HP	HP Color LaserJet CM4540	HP CE264X / 646X Black	
HP	HP Color LaserJet CM4540	HP CF031A / 646A Cyan	
HP	HP Color LaserJet CM4540	HP CF033A / 646A Magenta	
HP	HP Color LaserJet CM4540	HP CF032A / 646A Yellow	
HP Intro	HP Color LaserJet CP1415 / CP1525	HP CE320A / 128A Black INTRO	
HP Intro	HP Color LaserJet CP1415 / CP1525	HP CE321A / 128A Cyan INTRO	
HP Intro	HP Color LaserJet CP1415 / CP1525	HP CE323A / 128A Magenta INTRO	
HP Intro	HP Color LaserJet CP1415 / CP1525	HP CE322A / 128A Yellow INTRO	
HP Intro	HP Color LaserJet CP1020 / CP1025	HP CE310A / 126A / Canon 729 Black INTRO	
HP Intro	HP Color LaserJet CP1020 / CP1025	HP CE311A / 126A / Canon 729 Cyan INTRO	
HP Intro	HP Color LaserJet CP1020 / CP1025	HP CE313A / 126A / Canon 729 Magenta INTRO	
HP Intro	HP Color LaserJet CP1020 / CP1025	HP CE312A / 126A / Canon 729 Yellow INTRO	
HP	HP LaserJet M4555f MFP	HP 90A / CE390A Black	
HP	HP LaserJet M4555f MFP	HP 90X / CE390X Black	
HP	HP LaserJet Enterprise 500 Colour M551dn/n/xh	HP CE400A / 507A / Canon 732 Black	
HP	HP LaserJet Enterprise 500 Colour M551dn/n/xh	HP CE400X / 507X / Canon 732H Black	
HP	HP LaserJet Enterprise 500 Colour M551dn/n/xh	HP CE401A / 507A / Canon 732 Cyan	
HP	HP LaserJet Enterprise 500 Colour M551dn/n/xh	HP CE402A / 507A / Canon 732 Yellow	
HP	HP LaserJet Enterprise 500 Colour M551dn/n/xh	HP CE403A / 507A / Canon 732 Magenta	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE410X / 305X Black	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE410A / 305A Black	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE411A / 305A Cyan	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE413A / 305A Magenta	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE412A / 305A Yellow	
HP	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE410A / 305A Black INTRO	
HP Intro	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE411A / 305A Cyan INTRO	
HP Intro	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE413A / 305A Magenta INTRO	
HP Intro	HP LaserJet Pro 300 M351a/MFP M375nw/400 M451dn/MFP M475dn	HP CE412A / 305A Yellow INTRO	
HP	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF210X / 131X Black	
HP	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF210A / 131A Black	
HP	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF211A / 131A Cyan	
HP	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF212A / 131A Yellow	
HP	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF213A / 131A Magenta	
HP Intro	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF210A / 131A Black INTRO	
HP Intro	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF211A / 131A Cyan INTRO	
HP Intro	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF212A / 131A Yellow INTRO	
HP Intro	HP LaserJet Pro 200 Color M251n / MFP M276n	HP CF213A / 131A Magenta INTRO	
HP	HP LaserJet Enterprise 700 Color MFP M775dn	HP CE340A / 651A Black	
HP	HP LaserJet Enterprise 700 Color MFP M775dn	HP CE341A / 651A Cyan	
HP	HP LaserJet Enterprise 700 Color MFP M775dn	HP CE343A / 651A Magenta	
HP	HP LaserJet Enterprise 700 Color MFP M775dn	HP CE342A / 651A Yellow	
HP	HP LaserJet Enterprise 700 M712dn	HP 14X / CF214X	
HP	HP LaserJet Enterprise 700 M712dn	HP 14A / CF214A	
HP	HP Colour Laserjet Enterprise M855dn/x+/xh	HP CF310A / 826A Black	
HP	HP Colour Laserjet Enterprise M855dn/x+/xh	HP CF311A / 826A Cyan	
HP	HP Color Laserjet Enterprise M855dn/x+/xh	HP CF312A / 826A Yellow	
HP	HP Color Laserjet Enterprise M855dn/x+/xh	HP CF313A / 826A Magenta	
HP	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF350A / 130A Black	
HP	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF351A / 130A Cyan	
HP	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF352A / 130A Yellow	
HP	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF353A / 130A Magenta	
HP	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF380X / 312X Black	
HP	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF380A / 312A Black	
HP	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF381A / 312A Cyan	
HP	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF382A / 312A Yellow	
HP	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF383A / 312A Magenta	
HP Intro	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF380A / 312A Black INTRO	
HP Intro	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF381A / 312A Cyan INTRO	
HP Intro	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF382A / 312A Yellow INTRO	
HP Intro	HP Colour LaserJet Pro MFP M476dn/dw/nw	HP CF383A / 312A Magenta INTRO	
HP	HP Color LaserJet Ente M651dn/n/xh/Flow MFP M680z/dn/f	HP CF320A / 652A Black	
HP	HP Color LaserJet Enterprise Flow MFP M680z/dn/f	HP CF320X / 653X Black	
HP	HP Color LaserJet Enterprise Flow MFP M680z/dn/f	HP CF321A / 653A Cyan	
HP	HP Color LaserJet Enterprise Flow MFP M680z/dn/f	HP CF322A / 653A Yellow	
HP	HP Color LaserJet Enterprise Flow MFP M680z/dn/f	HP CF323A / 653A Magenta	
HP	HP Colour LaserJet Enterprise flow M880/+ NFC	HP CF300A / 827A Black	
HP	HP Colour LaserJet Enterprise flow M880/+ NFC	HP CF301A / 827A Cyan	
HP	HP Colour LaserJet Enterprise flow M880/+ NFC	HP CF302A / 827A Yellow	
HP	HP Colour LaserJet Enterprise flow M880/+ NFC	HP CF303A / 827A Magenta	
HP	HP Colour LaserJet Enterprise M651	HP CF330A / 654A Black	
HP	HP Colour LaserJet Enterprise M651	HP CF330X / 654X Black	
HP	HP Colour LaserJet Enterprise M651	HP CF331A / 654A Cyan	
HP	HP Colour LaserJet Enterprise M651	HP CF332A / 654A Yellow	
HP	HP Colour LaserJet Enterprise M651	HP CF333A / 654A Magenta	
HP Intro	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF350A / 130A Black INTRO	
HP Intro	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF351A / 130A Cyan INTRO	
HP Intro	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF352A / 130A Yellow INTRO	
HP Intro	HP Colour LaserJet Pro MFP M176n / M177fw	HP CF353A / 130A Magenta INTRO	
HP	HP LaserJet Pro 400 M425dw	HP 88A / CF288A	
HP Intro	HP LaserJet Pro 400 M425dw	HP 88A / CF288A INTRO	
HP	HP LaserJet Pro MFP M125nw / M127fn	HP 83X / CF283X / Canon 737H	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF360X / 508X Black Hi-Cap	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF361X / 508X Cyan Hi-Cap	

HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF362X / 508X Yellow Hi-Cap	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF363X / 508X Magenta Hi-Cap	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF360A / 508A Black	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF361A / 508A Cyan	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF362A / 508A Yellow	
HP	HP Colour LaserJet Enterprise M552dn/M553dn/M553x	HP CF363A / 508A Magenta	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF400X / 201X Black Hi-Cap	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF401X / 201X Cyan Hi-Cap	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF402X / 201X Yellow Hi-Cap	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF403X / 201X Magenta Hi-Cap	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF400A / 201A Black	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF401A / 201A Cyan	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF402A / 201A Yellow	
HP	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF403A / 201A Magenta	
HP Intro	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF400A / 201A Black INTRO	
HP Intro	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF401A / 201A Cyan INTRO	
HP Intro	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF402A / 201A Yellow INTRO	
HP Intro	HP Colour LaserJet Pro M252dw/M252n/MFP M277dw/M277n	HP CF403A / 201A Magenta INTRO	
HP	HP LJ Enterprise Flow MFP M630 ALL	HP 81A / CF281A	
HP	HP LJ Enterprise Flow MFP M630 ALL	HP 81X / CF281X	
HP	HP LaserJet Pro M402 / MFP M426	HP 26A / CF226A Black	
HP	HP LaserJet Pro M402 / MFP M426	HP 26X / CF226X Hi Cap Black	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410X / 410X Black Hi Cap	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411X / 410X Cyan Hi Cap	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412X / 410X Yellow Hi Cap	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413X / 410X Magenta Hi Cap	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410A / 410A Black	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411A / 410A Cyan	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412A / 410A Yellow	
HP	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413A / 410A Magenta	
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF410A / 410A Black INTRO	
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF411A / 410A Cyan INTRO	
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF412A / 410A Yellow INTRO	
HP Intro	HP Colour LaserJet MFP M477 / Pro M452 / Pro MFP M477	HP CF413A / 410A Magenta INRTO	
HP	HP LaserJet Enterprise M506dn / LaserJet Pro M501dn / M501n	HP 87A / CF287A	
HP Intro	HP LaserJet Enterprise M506dn / LaserJet Pro M501dn / M501n	HP 87A / CF287A INTRO	
HP	HP LaserJet Enterprise M506dn / LaserJet Pro M501dn / M501n	HP 87X / CF287X	
HP	HP LaserJet Pro M203/MFP M227	HP 30A / CF230A	
HP	HP LaserJet Pro M203/MFP M227	HP 30X / CF230X	
HP Intro	HP LaserJet Pro M203/MFP M227	HP 30A / CF230A INTRO	
HP	HP LaserJet Pro M102/MFP M130	HP 17A / CF217A	
HP Drum	HP LaserJet Pro M102/MFP M130	HP 19A / CF219A Drum	
HP Drum	HP LaserJet Pro M203/MFP M227	HP 32A / CF232A Drum	
HP	HP LaserJet Pro M12/MFP M26	HP 79A / CF279A	
HP Intro	HP LaserJet Pro M102/MFP M130	HP 17A / CF217A INTRO	
HP Intro	HP LaserJet Pro M12/MFP M26	HP 79A / CF279A INTRO	
HP	HP LaserJet Pro M403/MFP M427/M427dn/M427dw/M427fdw	HP 28A / CF228A	
HP	HP LaserJet Pro M403/MFP M427/M427dn/M427dw/M427fdw	HP 28X / CF228X	
HP Intro	HP LaserJet Pro M403/MFP M427/M427dn/M427dw/M427fdw	HP 28A INTRO	
HP	HP LaserJet Enterprise Flow MFP M631/M632/M607/M608/M609/M631/M632	HP 37A / CF237A	
HP	HP LaserJet Enterprise Flow MFP M631/M632/M607/M608/M609/M631/M632	HP 37X / CF237X Hi Cap	
HP	HP LaserJet Enterprise Flow MFP M631/M632/M607/M608/M609/M631/M632	HP 37Y / CF237Y Extra Hi Cap	
HP Intro	HP LaserJet Enterprise Flow MFP M631/M632/M607/M608/M609/M631/M632	HP 37A / CF237 INTRO	
HP	HP LaserJet MFP M436n / M436nda	HP 56A / CF256A	
HP	HP LaserJet MFP M436n / M436nda	HP 56X / CF256X	
HP Intro	HP LaserJet MFP M436n / M436nda	HP 56A INTRO	
HP	HP Colour LaserJet Enter / Flow MFP M681/M682/M652/M653/M681	HP CF450A / 655A Black	
HP	HP Colour LaserJet Enter / Flow MFP M681/M682/M652/M653/M681	HP CF451A / 655A Cyan	
HP	HP Colour LaserJet Enter / Flow MFP M681/M682/M652/M653/M681	HP CF453A / 655A Magenta	
HP	HP Colour LaserJet Enter / Flow MFP M681/M682/M652/M653/M681	HP CF452A / 655A Yellow	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF460X / 656X Black Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF461X / 656X Cyan Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF463X / 656X Magenta Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF462X / 656X Yellow Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF470X / 656X Black Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF471X / 656X Cyan Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF473X / 656X Magenta Hi Cap	
HP	HP Colour LaserJet Enterprise M652dn / M652n / M653dn / M653x	HP CF472X / 656X Yellow Hi Cap	
HP	HP Color LaserJet 9500	HP C8550 Black	
HP	HP Color LaserJet 9500	HP C8551 Cyan	
HP	HP Color LaserJet 9500	HP C8552 Yellow	
HP	HP Color LaserJet 9500	HP C8553 Magenta	
IBM / Ricoh	IBM Infoprint 1145 Series	IBM 28P1882	
IBM / Ricoh	IBM Infoprint 1352 / 1372	IBM 75P4303	
IBM / Ricoh	IBM Infoprint 1352 / 1372	IBM 75P4301	
IBM / Ricoh	IBM Infoprint 1352 / 1372	IBM 75P4302 Hi Cap	
IBM / Ricoh	IBM Infoprint 1832 / 1852 / 1872 (T650)	IBM 39V2513 / 2515 Black	
IBM / Ricoh	IBM Infoprint 1832 / 1852 / 1872 (T650)	IBM 39V2511 Black	
Canon InkJet	Canon BJ-10 / BJ-5 / BJ-20	Canon BC-01	
Canon InkJet	Canon BJ100 / 200 / 220 / 230 / BJC-150 / 210 / 240	Canon BC-02	
Canon InkJet	Canon B140 / 150 / 160 / 170 / 310 / 320 / 340 / 360	Canon BX-2	
Canon InkJet	Canon FAXPHONE B45, B540, B550, B640, B95, MultiPASS 800	Canon BX-3	
Canon InkJet	Canon FAXPHONE B740	Canon BX-20	
Canon InkJet	Canon IP2200 / IP1600 / 150 / 170 / 450 PIXMA	Canon PG-40	
Canon InkJet	Canon IP2200 / IP1600 / 150 / 170 / 450 PIXMA	Canon CL-41	
Canon InkJet	Canon Pixma iP1800/2500 Black	Canon PG-37	
Canon InkJet	Canon Pixma iP1800/2500 Colour	Canon CL-38	
Canon InkJet	Canon Pixma MP240/260/480	Canon PG-510	
Canon InkJet	Canon Pixma MP240/260/480	Canon CL-511	
Canon InkJet	Canon Pixma MP240/260/480	Canon PG-512	
Canon InkJet	Canon Pixma MP240/260/480	Canon CL-513	
Canon InkJet	Canon Pixma iP7250 / MG5450 / MG6350 / MX925	Canon PGI-550 Black	
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon PG-540	
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon CL-541	
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon PG-540XL	
Canon InkJet	Canon Pixma MG2150 / 3150 / 4150 / MX375 / 435 / 515	Canon CL-541XL	

Canon InkJet	Canon Pixma iP1600	Canon PG-50
Canon InkJet	Canon MP450 Photo / iP6210 / iP6220	Canon CL-51
Canon InkJet	Canon PIXMA iP6220/iP6210	Canon CL-52
Canon InkJet	Canon Pixma MG3140 / MX374 / MX434 / MX514	Canon PG-440XL
Canon InkJet	Canon Pixma MG3140 / MX374 / MX434 / MX514	Canon CL-441XL
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon PG-545
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon PG-545XL
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon CL-546
Canon InkJet	Canon Pixma iP2850 / Pixma MG2450 / Pixma MG2550	Canon CL-546XL
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571 Black
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571XL Black
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571 Cyan
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571XL Cyan
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571 Magenta
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571XL Magenta
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571 Yellow
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571XL Yellow
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571 Gray
Canon InkJet	Canon Pixma MG5750/51/52/53/MG6850/51/52/53/MG7750/51/52/53	Canon CLI-571XL Gray
Canon InkJet	Canon ImagePROGRAF iPF5000 / iPF6000S / iPF6200	Canon PFI-101 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF500/510/600/605/610/700/710/720/LP17/24	Canon PFI-102 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF5100 / iPF6100 / iPF6200	Canon PFI-103 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF650 / 750 / MFPM40 / 755 / 765	Canon PFI-104 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF6300 / iPF6350 / iPF6400 / iPF6450	Canon PFI-106 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF670/680/685/770/780/785	Canon PFI-107 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF680 / iPF685 / iPF780 / iPF785	Canon PFI-207 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF8000/8000S/8100/9000/9000S/9100	Canon PFI-701 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF8300S/iPF8400/iPF8400SE/iPF9400	Canon PFI-706 series All Colours
Canon InkJet	Canon ImagePROGRAF iPF830 / iPF840 / iPF850	Canon PFI-707 series All Colours
Dell InkJet	Dell 922 / 924 / 942 / 944 / 946 / 962 / 964	Dell Series 5 / M4646 Color
Dell InkJet	Dell 966	Dell Series 7 / DH828 Black
Dell InkJet	Dell 966	Dell Series 7 / DH829 Color
Dell InkJet	Dell 926	Dell Series 9 / MK992 Black
Dell InkJet	Dell 926	Dell Series 9 / MK993 Color
Dell InkJet	Dell 948/V505/V505w	Dell Series 11 / KX703 Colour
Dell InkJet	Dell 948/V505/V505w	Dell Series 11 / KX701 Black
Dell InkJet	Dell V105 All-In-One	Dell Series 15 / WP322 Black
Dell InkJet	Dell V105 All-In-One	Dell Series 15 / UK852 Color
Dell InkJet	Dell 948/V505/V505w	Dell Series 11 / JP451 Black
Dell InkJet	Dell 948/V505/V505w	Dell Series 11 / JP453 Color
Dell InkJet	Dell 926	Dell Series 9 / MK990 Black
Dell InkJet	Dell 926	Dell Series 9 / MK991 Color
Dell InkJet	Dell 922 / 924 / 942 / 944 / 946 / 962 / 964	Dell Series 5 / M4640 Black
Dell InkJet	Dell 966	Dell Series 7 / CH883 Black
Dell InkJet	Dell 966 / 968	Dell Series 7 / CH884 Color
Dell InkJet	Dell 922 / 924 / 942 / 944 / 946 / 962 / 964	Dell Series 5 / J5566 Black
Dell InkJet	Dell 922 / 924 / 942 / 944 / 946 / 962 / 964	Dell Series 5 / J5567 Colour
Dell InkJet	Dell 725 / 810 / All In One	Dell Series 6 / JF333
Frama Matrix	Frama Matrix F2/F4/F6/F8/F12/F22/F32/F42/F62/F82	Frama Matrix All Colours
HP InkJet	HP 400 / 500 series	HP 26 / 51626A/G
HP InkJet	HP 300 series	HP 33 / 51633M
HP InkJet	HP DesignJet 230/250C/330/350C/400 Series/650/CopyJet	HP 40 / 51640A
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552	HP 56 / C6656G Small
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552	HP 57 / C6657GE Small
HP InkJet	HP 700 / 800 / 1000 / 1100 / 1600 series	HP 45 / 51645A
HP InkJet	HP 700 / 800 / 1000 / 1100 series	HP 23 / C1823A/D
HP InkJet	HP DeskJet 930/950/970/980/990/G55/G85/G95	HP 78D / C6578D 19ML
HP InkJet	HP DJ 610/612/640	HP 20 / C6614A/D
HP InkJet	HP 310/3810/3816/3820/3822/810/12/16/25/40/41/42/43/45/916/920	HP 15 / C6615A
HP InkJet	HP DJ 840/843	HP 17A / C6625A
HP InkJet	HP DeskJet 750/755/Designjet 350C/450C/455C/488C/750C/755CM	HP 44 Cyan / 51644C
HP InkJet	HP DeskJet 750/755/Designjet 350C/450C/455C/488C/750C/755CM	HP 44 Magenta / 51644M
HP InkJet	HP DeskJet 750/755/Designjet 350C/450C/455C/488C/750C/755CM	HP 44 Yellow / 51644Y
HP InkJet	HP DeskJet 930/950/970/980/990/G55/G85/G95	HP 78A / C6578A 38ML
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552	HP 56A / C6656A
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552	HP 57A / C6657A
HP InkJet	HP DJ 420ci/cbi/5150/5550c/5552	HP 58A / C6658A
HP InkJet	HP DJ 3320/3325/3420/3550	HP 27A / C8727A
HP InkJet	HP DJ 3320/3325/3420/3550	HP 28A / C8728A
HP InkJet	HP DesignJet CP-1160/Officejet 7110/7130/7140/D125/D135/D145/D155	HP 14A C5011A Black
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 339 / C8767E
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 344 / C9363E
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 343 / C8766E
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 338 / C8765EE
HP InkJet	HP DJ 5740/6520/6540/6540dt/6840	HP 348 / C9369E
HP InkJet	HP DJ D4260/OfficeJet J5780	HP 350 / CB335EE Black
HP InkJet	HP DJ D4260/OfficeJet J5780	HP 351 / CB337E
HP InkJet	HP DJ D4260/OfficeJet J5780	HP 350XL / CB336E
HP InkJet	HP DJ D4260/OfficeJet J5780	HP 351XL / CB338E
HP InkJet	HP DJ F4280	HP 300 Black / C640E
HP InkJet	HP DJ F4280	HP 300 Colour / C643E
HP InkJet	HP DJ F4280	HP 300XL Black / C641E
HP InkJet	HP DJ F4280	HP 300XL Colour / C644E
HP InkJet	HP OfficeJet J4580 / J4660 / 4680	HP 901 Black / CC653A
HP InkJet	HP OfficeJet J4580 / J4660 / 4680	HP 901XL Black / CC654A
HP InkJet	HP OfficeJet J4580 / J4660 / 4680	HP 901 Colour / CC656A
HP InkJet	HP OfficeJet 6000 / 6500 / 7000	HP 920 Black / CD971AE
HP InkJet	HP OfficeJet 6000 / 6500 / 7000	HP 920XL Black / CD975AE
HP InkJet	HP OfficeJet 6000 / 6500 / 7000	HP 920XL Magenta / CD973AE
HP InkJet	HP OfficeJet 6000 / 6500 / 7000	HP 920XL Yellow / CD974AE
HP InkJet	HP OfficeJet 6000 / 6500 / 7000	HP 920XL Cyan / CD972AE
HP InkJet	HP Designjet CP-1160/Officejet 7110/7130/7140/D125/D135/D145/D155	HP 14A C5010A Color
HP InkJet Intro	HP DJ F4280	HP 300 Colour / CC642EE INTRO
HP InkJet	HP DeskJet 930/950/970/980/990/G55/G85/G95	HP 77X Plus / CB277A
HP InkJet	HP Officejet Pro 8000 9500	HP 940XL Black / C4906AE
HP InkJet	HP Officejet Pro 8000 9500	HP 940XL Cyan / C4907AE

HP InkJet	HP Officejet Pro 8000 9500	HP 940XL Magenta / C4908AE
HP InkJet	HP Officejet Pro 8000 9500	HP 940XL Yellow / C4909AE
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301 / CH561EE Black (OLD)
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301XL / CH563EE Black (OLD)
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301 / CH562EE Color (OLD)
HP InkJet	HP DeskJet 1000/1050/2050/2510/3000/3050/3055A	HP 301XL / CH564EE Color (OLD)
HP InkJet Intro	HP DJ F4280	HP 300 Black / C6399E INTRO
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364 Magenta / CN682E
HP InkJet	HP DJ 3920/3940/1410	HP 21 / C9351
HP InkJet	HP DJ 3920/3940/1410	HP 22 / C9352
HP InkJet	HP DJ 3920/3940/1410	HP 21XL / C9351
HP InkJet	HP DJ 3920/3940/1410	HP 22XL / C9352
HP InkJet Intro	HP DJ 3920/3940/1410	HP 21 / C9351 INTRO
HP InkJet Intro	HP DJ 3920/3940/1410	HP 22 / C9352 INTRO
HP InkJet	HP DJ 3920/3940/1410	HP 21 / C9351AE Black Low Volume
HP InkJet	HP Officejet Pro 8100e / 8600	HP 950XL Black / CN045AE
HP InkJet	HP Officejet Pro 8100e / 8600	HP 951XL Cyan / CN046AE
HP InkJet	HP Officejet Pro 8100e / 8600	HP 951XL Magenta / CN047AE
HP InkJet	HP Officejet Pro 8100e / 8600	HP 951XL Yellow / CN048AE
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364XL Cyan / CN685E
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364XL Yellow / CN687E
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364 Cyan / CN681E
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364 Yellow / CN683E
HP InkJet	HP Photosmart B8550/C5380/C6380/D5460	HP 364XL Magenta / CN686E
HP InkJet	HP DesignJet 500 / 510 / 800	HP 82 Black / CH565A 69ml
HP InkJet	HP DesignJet 500 / 510 / 800	HP 82 Cyan / C4911A 69ml
HP InkJet	HP DesignJet 500 / 510 / 800	HP 82 Magenta / C4912A 69ml
HP InkJet	HP DesignJet 500 / 510 / 800	HP 82 Yellow / C4913A 69ml
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9403A Matte Black
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9370A Black Photo
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9371A Cyan
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9372A Magenta
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9373A Yellow
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9374A Gray
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9397A Black Photo
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9398A Cyan
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9399A Magenta
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9400A Yellow
HP InkJet	HP DesignJet T1100/T1120HD/T1200/T1300/T2300/T610/T620/T770/T790	HP 72 / C9401A Gray
HP InkJet	HP DJ 5400 Series	HP 342 / C9361EE Colour
HP InkJet	HP DJ 5400 Series	HP 336 / C9362EE Black
HP InkJet	HP Photosmart 2570	HP 337 / C9364EE Black
HP InkJet	HP DeskJet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black / F6U66AE
HP InkJet	HP DeskJet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color / F6U65AE
HP InkJet	HP DeskJet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black XL / F6U68AE
HP InkJet	HP DeskJet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color XL / F6U67AE
HP InkJet	HP Officejet 6100e/6600 /6700 Premium e-All-in-one	HP 932 Black / CN057AE
HP InkJet	HP Officejet 6100e/6600 /6700 Premium e-All-in-one	HP 932XL Black / CN053AE
HP InkJet	HP Officejet 6100e/6600 /6700 Premium e-All-in-one	HP 933XL Cyan / CN054AE
HP InkJet	HP Officejet 6100e/6600 /6700 Premium e-All-in-one	HP 933XL Magenta / CN055AE
HP InkJet	HP Officejet 6100e/6600 /6700 Premium e-All-in-one	HP 933XL Yellow / CN056AE
HP InkJet	HP Photosmart 8750	HP 102 Photo Gray / C9360A
HP InkJet	HP Psmart 475/A310/311/314/316/320/430/432/433/434/436/440/441/444/510/512/516/520/522/525/526/528	HP 110 / CB304A
HP InkJet	HP Designjet 4000 / 4500 / 4520HD	HP 90 / C5061A HC Cyan
HP InkJet	HP Designjet 4000 / 4500 / 4520HD	HP 90 / C5063A Hi Cap Magenta
HP InkJet	HP Designjet 4000 / 4500 / 4520HD	HP 90 / C5065A Hi Cap Yellow
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9464A Matte Black
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9465A Black Photo
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9467A Cyan
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9470A Light Cyan
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9468A Magenta
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9471A Light Mag
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9469A Yellow
HP InkJet	HP Designjet Z6100 Photo / Z6100ps	HP 91 / C9466A Light Gray
HP InkJet	HP Fax 640 printer	HP 701 Black / C6635A
HP InkJet	HP Designjet T1120sd/Z2100/Z3100/Z3200/Z5200/Z5400/B8850/B9180	HP 70 / C9407A Black Photo/Light Grey
HP InkJet	HP Designjet T1120sd/Z2100/Z3100/Z3200/Z5200/Z5400/B8850/B9180	HP 70 / C9405A Light Cyan/Light Magenta
HP InkJet	HP Designjet T1120sd/Z2100/Z3100/Z3200/Z5200/Z5400/B8850/B9180	HP 70 / C9404A Matte Black/Cyan
HP InkJet	HP Designjet T1120sd/Z2100/Z3100/Z3200/Z5200/Z5400/B8850/B9180	HP 70 / C9406A Magenta/Yellow
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 970 / CN621AE Black
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 / CN622AE Cyan
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 / CN623AE Magenta
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 / CN624AE Yellow
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 970XL / CN625AE Black
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971XL / CN626AE Cyan
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971XL / CN627AE Magenta
HP InkJet	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971XL / CN628AE Yellow
HP InkJet Intro	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 970 Black INTRO
HP InkJet Intro	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 Cyan INTRO
HP InkJet Intro	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 Magenta INTRO
HP InkJet Intro	HP Officejet Pro X451dw/X476dw/X551dw/X576dw	HP 971 Yellow INTRO
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301 V1 / CH561EE Black (NEW)
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301 V1 / CH562EE Color (NEW)
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301XL V1 / CH563EE Black (NEW)
HP InkJet	HP Deskjet 1010/1510/12/14/2512/40/42/44/49/Envy 4500 Series	HP 301XL V1 / CH564EE Color (NEW)
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62 / C2P04A Black
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62XL / C2P05A Black
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62 / C2P06A Color
HP InkJet	HP Envy 5640 e-All-in-One / 7640 / Officejet 5740	HP 62XL / C2P07A Color
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 934 / C2P19AE Black
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 / C2P20AE Cyan
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 / C2P21AE Magenta
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 / C2P22AE Yellow
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 934XL / C2P23AE Black
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935XL / C2P24AE Cyan
HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935XL / C2P25AE Magenta

HP InkJet	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935XL / C2P26AE Yellow
HP InkJet Intro	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 Cyan / C2P20AE SETUP
HP InkJet Intro	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 Magenta / C2P21AE SETUP
HP InkJet Intro	HP Officejet Pro 6230 ePrinter / 6830 e-All-in-One	HP 935 Yellow / C2P22AE SETUP
HP InkJet	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Black / D8J10A
HP InkJet	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Cyan / D8J07A
HP InkJet	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Magenta / D8J08A
HP InkJet	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Yellow / D8J09A
HP InkJet	HP Deskjet Ink Advantage 2515 and 2515 e-All-in-One	HP 650 Black / CZ101AE
HP InkJet	HP Deskjet Ink Advantage 2515 and 2515 e-All-in-One	HP 650 Color / CZ102AE
HP InkJet Intro	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black (NOT SETUP H)
HP InkJet Intro	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color (NOT SETUP H)
HP InkJet	HP CG401A Blue (Must have plug on bottom)	HP CG401A Blue
HP InkJet	HP Q2353A Blue (Must have plug on bottom)	HP Q2353A Blue
HP InkJet	HP Q2354A Blue (Must have plug on bottom)	HP Q2354A Blue
HP InkJet Intro	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Black / D8J10A INTRO
HP InkJet Intro	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Cyan / D8J07A INTRO
HP InkJet Intro	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Magenta / D8J08A INTRO
HP InkJet Intro	HP Officejet Enterprise Colour Flow X585z/X555dn/X555xh/X585dn/X585f	HP 980 Yellow / D8J09A INTRO
HP InkJet	HP PageWide Pro 352/377/452/477	HP 913A / LOR95AE Black
HP InkJet	HP PageWide Pro 352/377/452/477	HP 913A / F6T77AE Cyan
HP InkJet	HP PageWide Pro 352/377/452/477	HP 913A / F6T78AE Magenta
HP InkJet	HP PageWide Pro 352/377/452/477	HP 913A / F6T79AE Yellow
HP InkJet Intro	HP PageWide Pro 352/377/452/477	HP 913A / LOR95AE Black INTRO
HP InkJet Intro	HP PageWide Pro 352/377/452/477	HP 913A / F6T77AE Cyan INTRO
HP InkJet Intro	HP PageWide Pro 352/377/452/477	HP 913A / F6T78AE Magenta INTRO
HP InkJet Intro	HP PageWide Pro 352/377/452/477	HP 913A / F6T79AE Yellow INTRO
HP InkJet	HP PageWide Pro 452dw / 477dw	HP 973X / LOS07AE Black
HP InkJet	HP PageWide Pro 452dw / 477dw	HP 973X / F6T81AE Cyan
HP InkJet	HP PageWide Pro 452dw / 477dw	HP 973X / F6T82AE Magenta
HP InkJet	HP PageWide Pro 452dw / 477dw	HP 973X / F6T83AE Yellow
HP InkJet Intro	HP PageWide Pro 452dw / 477dw	HP 973 Black INTRO
HP InkJet Intro	HP PageWide Pro 452dw / 477dw	HP 973 Cyan INTRO
HP InkJet Intro	HP PageWide Pro 452dw / 477dw	HP 973 Magenta INTRO
HP InkJet Intro	HP PageWide Pro 452dw / 477dw	HP 973 Yellow INTRO
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304 Black / N9K06AE
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304XL Black / N9K08AE
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304 Colour / N9K05AE
HP InkJet	HP Deskjet 3720/3730/3732/3733	HP 304XL Colour / N9K07AE
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Black (NOT SETUP H)
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Colour (NOT SETUP H)
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 / LOS58AE Black
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 / F6U12AE Cyan
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 / F6U13AE Magenta
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 / F6U14AE Yellow
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953XL / LOS70AE Black
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953XL / F6U16AE Cyan
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953XL / F6U17AE Magenta
HP InkJet	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953XL / F6U18AE Yellow
HP InkJet Intro	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 Black (NOT SETUP H)
HP InkJet Intro	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 Cyan (NOT SETUP H)
HP InkJet Intro	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 Magenta (NOT SETUP H)
HP InkJet Intro	HP Officejet Pro 7740/8210/18/8710/15/16/18/20/25/28/30/40	HP 953 Yellow (NOT SETUP H)
HP InkJet	HP Q2344A Black (Must have plug on bottom)	HP Q2344A Black (1918)
HP InkJet	HP C8842A Versatile black	HP C8842A Versatile black
HP InkJet	HP C6120A Red Fluorescent	HP C6120A Red Fluorescent
HP InkJet	HP C6128A Red	HP C6128A Red
HP InkJet	HP C6170A Blue	HP C6170A Blue
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 / T6L99AE Black
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 / T6L87AE Cyan
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 / T6L91AE Magenta
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 / T6L95AE Yellow
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903XL / T6M15AE Black
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903XL / T6M03AE Cyan
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903XL / T6M07AE Magenta
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903XL / T6M11AE Yellow
HP InkJet	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 907XL / T6M19AE Black
HP InkJet Intro	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Black (SETUP H)
HP InkJet Intro	HP Deskjet 1110/2130/3630/Envy 4520/4522/4523/4524/Officejet 3830/4650	HP 302 Color (SETUP H)
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Black (SETUP H)
HP InkJet Intro	HP Deskjet 3720/3730/3732/3733	HP 304 Colour (SETUP H)
HP InkJet Intro	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 Black INTRO
HP InkJet Intro	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 Cyan INTRO
HP InkJet Intro	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 Magenta INTRO
HP InkJet Intro	HP Officejet Pro 6950/6960/6970/6975 All-in-One	HP 903 Yellow INTRO
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991A / MOJ86AE Black
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991A / MOJ74AE Cyan
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991A / MOJ78AE Magenta
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991A / MOJ82AE Yellow
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991X / MOK02AE Black
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991X / MOJ90AE Cyan
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991X / MOJ94AE Magenta
HP InkJet	HP PageWide Pro 750dw / 772dn / 777z	HP 991X / MOJ98AE Yellow
HP InkJet Intro	HP PageWide Pro 750dw / 772dn / 777z	HP 991 / Black SETUP
HP InkJet Intro	HP PageWide Pro 750dw / 772dn / 777z	HP 991 / Cyan SETUP
HP InkJet Intro	HP PageWide Pro 750dw / 772dn / 777z	HP 991 / Magenta SETUP
HP InkJet Intro	HP PageWide Pro 750dw / 772dn / 777z	HP 991 / Yellow SETUP
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black / T6N02AE
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303XL Black / T6N04AE
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour / T6N01AE
HP InkJet	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303XL Colour / T6N03AE
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black (NOT SETUP H)
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour (NOT SETUP H)
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Black (SETUP H)
HP InkJet Intro	HP Envy Photo 6230 / 7130 / 7134 / 7830	HP 303 Colour (SETUP H)
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981A Black / J3M71A

HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981A Cyan / J3M68A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981A Magenta / J3M69A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981A Yellow / J3M70A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981X Black / LOR12A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981X Cyan / LOR09A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981X Magenta / LOR10A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981X Yellow / LOR11A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981Y Black / LOR16A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981Y Cyan / LOR13A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981Y Magenta / LOR13A
HP InkJet	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981Y Yellow / LOR15A
HP InkJet Intro	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981 Black INTO
HP InkJet Intro	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981 Cyan INTRO
HP InkJet Intro	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981 Magenta INTRO
HP InkJet Intro	HP PageWide Enterprise Colour 556dn/556xh/Flow MFP 586z	HP 981 Yellow INTRO
Lexmark InkJet	Lexmark 4076/1000/20/100/2030/50/55	Lexmark 13400HC
Lexmark InkJet	Lexmark 20 / 15M0120	Lexmark 20 / 15M0120
Lexmark InkJet	Lexmark i3/Z13/Z23/Z33/Z601/Z605 Black	Lexmark 16 / 10N0016
Lexmark InkJet	Lexmark i3/Z13/Z23/Z33/Z601/Z605 Colour	Lexmark 26 / 10N0026
Lexmark InkJet	Lexmark Z35/Z601/Z605 Low Black	Lexmark 17 / 10N0217
Lexmark InkJet	Lexmark X5100/X5130/X5150/X5190/X6150/X6190/X6170/Z55/Z66	Lexmark 83 / 18L0042
Lexmark InkJet	Lexmark Z815/X5250/5270 Colour	Lexmark 33 / 18C0033
Lexmark InkJet	Lexmark Z815/X5250/5270 Photo Colour	Lexmark 31 / 18C0031
Lexmark InkJet	Lexmark (various models)	Lexmark 35 / 18C0035
Lexmark InkJet	Lexmark Z815/X5250/5270 Black	Lexmark 32 / 18C0032
Lexmark InkJet	Lexmark Z815/X5250/5270 Black	Lexmark 34 / 18C0034
Lexmark InkJet	Lexmark Z815/X5250/5270 Black	Lexmark 34XL / 18C0034 Black
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650 Black	Lexmark 36A / 18C2150E
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650 Black	Lexmark 36XLA / 18C2190E
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650 Colour	Lexmark 37A / 18C2160E
Lexmark InkJet	Lexmark 100 / 14N0820E Black	Lexmark 100 / 14N0820E Black
Lexmark InkJet	Lexmark 100XL / 14N1068 Black	Lexmark 100XL / 14N1068 Black
Lexmark InkJet	Lexmark 100XL / 14N1069E Cyan	Lexmark 100XL / 14N1069E Cyan
Lexmark InkJet	Lexmark 100XL / 14N1070E Magenta	Lexmark 100XL / 14N1070E Magenta
Lexmark InkJet	Lexmark 100XL / 14N1071E Yellow	Lexmark 100XL / 14N1071E Yellow
Lexmark InkJet	Lexmark 100 / 14N0900E Cyan	Lexmark 100 / 14N0900E Cyan
Lexmark InkJet	Lexmark 100 / 14N0901E Magenta	Lexmark 100 / 14N0901E Magenta
Lexmark InkJet	Lexmark 100 / 14N0902E Yellow	Lexmark 100 / 14N0902E Yellow
Lexmark InkJet	Lexmark X2580/3580/Z1380 Black	Lexmark 3 / 18C1530
Lexmark InkJet	Lexmark X2580/3580/Z1380 Colour	Lexmark 2 / 18C0190
Lexmark InkJet	Lexmark X2310/2330/2350/Z730/735	Lexmark 1 / 18C0781
Lexmark InkJet	Lexmark X9350 / P350 Colour	Lexmark 43 / 18Y0143
Lexmark InkJet	Lexmark X9350	Lexmark 44 / 18Y0144
Lexmark InkJet	Lexmark X4800/6570 Black	Lexmark 42A / 18Y0342E
Lexmark InkJet	Lexmark X4800/6570 Colour	Lexmark 41A / 18Y0341E
Lexmark InkJet	Lexmark X9350 / P350 Colour	Lexmark 43XL / 18Y143E
Lexmark InkJet	Lexmark X9350 Black	Lexmark 44XL / 18Y134E
Lexmark InkJet	Lexmark Z2400, Z2410, Z2420, X3630, X3650, X4630, X4650 Black	Lexmark 36XL / 18C2190E
Neopost	Neopost RJ 25	Neopost IJ 25 Blue
Neopost	Neopost RJ 35 (410)	Neopost RJ 35 (410)
Neopost	Neopost RJ 35 (413)	Neopost RJ 35 (413)
Neopost	Neopost RJ 35 (4135555U)	Neopost RJ 35 (4135555U)
Neopost	Neopost RJ 35 (412)	Neopost RJ 35 (412)
Neopost	Neopost RJ 35 (414)	Neopost RJ 35 (414)
Neopost	Neopost IJ 25	Neopost IJ 25 Red
Neopost	Neopost IJ 240 Blue	Neopost IJ 240 Blue
Neopost	Neopost IJ 240 Red	Neopost IJ 240 Red
Samsung InkJet	Samsung SF-4000 / 4100 / 4200 / 3000 / 3100 / 3200	Samsung INK-M10
Samsung InkJet	Samsung SF-300/300T/330/331P/335T/340/341P/345TP/355T/360/361P/365TP	Samsung INK-M40 Black
Samsung InkJet	Samsung SF370 / SF375TP	Samsung INK-M41 Black
Samsung InkJet	Samsung SF370 / SF375TP	Samsung INK-M41 Black INTRO
Samsung InkJet	Samsung SF-300/300T/330/331P/335T/340/341P/345TP/355T/360/361P/365TP	Samsung INK-M40 Black INTRO
Samsung InkJet	Samsung SF350 Fax machine	Samsung INK-M55
Sharp InkJet	Sharp UXB20 / UXB30 / UXB700 / UXBD80 / UXBS60	Sharp UX-C70B
Kyocera	Kyocera TK150 Black	Kyocera TK-150 Black
Kyocera	Kyocera TK150 Cyan	Kyocera TK-150 Cyan
Kyocera	Kyocera TK150 Magenta	Kyocera TK-150 Magenta
Kyocera	Kyocera TK150 Yellow	Kyocera TK-150 Yellow
Kyocera	Kyocera FS-1100	Kyocera TK-140 Black
Kyocera	Kyocera TK-6305 Black	Kyocera TK-6305 Black
Kyocera	Kyocera TK-3100 Black	Kyocera TK-3100 Black
Kyocera	Kyocera TK-560 Black	Kyocera TK-560 Black
Kyocera	Kyocera TK-560 Cyan	Kyocera TK-560 Cyan
Kyocera	Kyocera TK-560 Magenta	Kyocera TK-560 Magenta
Kyocera	Kyocera TK-560 Yellow	Kyocera TK-560 Yellow
Kyocera	Kyocera TK-570 Black	Kyocera TK-570 Black
Kyocera	Kyocera TK-570 Cyan	Kyocera TK-570 Cyan
Kyocera	Kyocera TK-570 Magenta	Kyocera TK-570 Magenta
Kyocera	Kyocera TK-570 Yellow	Kyocera TK-570 Yellow
Kyocera	Kyocera TK-310 Black	Kyocera TK-310
Kyocera	Kyocera TK-170 / 172 Black	Kyocera TK-170 / 172 Black
Kyocera	Kyocera TK-340 Black	Kyocera TK-340
Kyocera	Kyocera TK-580 Black	Kyocera TK-580 Black
Kyocera	Kyocera TK-580 Cyan	Kyocera TK-580 Cyan
Kyocera	Kyocera TK-580 Magenta	Kyocera TK-580 Magenta
Kyocera	Kyocera TK-580 Yellow	Kyocera TK-580 Yellow
Kyocera	Kyocera TK-590 Black	Kyocera TK-590 Black
Kyocera	Kyocera TK-590 Cyan	Kyocera TK-590 Cyan
Kyocera	Kyocera TK-590 Magenta	Kyocera TK-590 Magenta
Kyocera	Kyocera TK-590 Yellow	Kyocera TK-590 Yellow
Kyocera	Kyocera TK-540 Black	Kyocera TK-540 Black
Kyocera	Kyocera TK-540 Cyan	Kyocera TK-540 Cyan
Kyocera	Kyocera TK-540 Magenta	Kyocera TK-540 Magenta
Kyocera	Kyocera TK-540 Yellow	Kyocera TK-540 Yellow
Kyocera	Kyocera TK-120 Black	Kyocera TK-120
Kyocera	Kyocera TK-130 Black	Kyocera TK-130

Kyocera	Kyocera TK-350 Black	Kyocera TK-350	
Kyocera	Kyocera TK-675 Black	Kyocera TK-675	
Kyocera	Kyocera TK-865 Black	Kyocera TK-865 Black	
Kyocera	Kyocera TK-865 Cyan	Kyocera TK-865 Cyan	
Kyocera	Kyocera TK-865 Magenta	Kyocera TK-865 Magenta	
Kyocera	Kyocera TK-865 Yellow	Kyocera TK-865 Yellow	
Kyocera	Kyocera TK-160 Black	Kyocera TK-160	
Kyocera Intro	Kyocera TK150 Black	Kyocera TK-150 Black INTRO	
Kyocera Intro	Kyocera TK150 Cyan	Kyocera TK-150 Cyan INTRO	
Kyocera Intro	Kyocera TK150 Magenta	Kyocera TK-150 Magenta INTRO	
Kyocera Intro	Kyocera TK150 Yellow	Kyocera TK-150 Yellow INTRO	
Kyocera	Kyocera TK-320	Kyocera TK-320	
Kyocera	Kyocera TK-400	Kyocera TK-400	
Kyocera	Kyocera TK-110	Kyocera TK-110	
Kyocera	Kyocera TK-1140	Kyocera TK-1140	
Kyocera	Kyocera TK-435	Kyocera TK-435	
Kyocera	Kyocera TK-330	Kyocera TK-330	
Kyocera	Kyocera TK-360	Kyocera TK-360	
Kyocera	Kyocera TASKalfa 4550ci / 5550ci	Kyocera TK-8505 Black	
Kyocera	Kyocera TASKalfa 4550ci / 5550ci	Kyocera TK-8505 Cyan	
Kyocera	Kyocera TASKalfa 4550ci / 5550ci	Kyocera TK-8505 Magenta	
Kyocera	Kyocera TASKalfa 4550ci / 5550ci	Kyocera TK-8505 Yellow	
Kyocera	Kyocera TASKalfa 3050ci / 3550ci	Kyocera TK-8305 Black	
Kyocera	Kyocera TASKalfa 3050ci / 3550ci	Kyocera TK-8305 Cyan	
Kyocera	Kyocera TASKalfa 3050ci / 3550ci	Kyocera TK-8305 Magenta	
Kyocera	Kyocera TASKalfa 3050ci / 3550ci	Kyocera TK-8305 Yellow	
Kyocera	Kyocera TK-895 Black	Kyocera TK-895 Black	
Kyocera	Kyocera TK-895 Cyan	Kyocera TK-895 Cyan	
Kyocera	Kyocera TK-895 Magenta	Kyocera TK-895 Magenta	
Kyocera	Kyocera TK-895 Yellow	Kyocera TK-895 Yellow	
Kyocera	Kyocera FS-1030MFP / 1130MFP	Kyocera TK-1130 Black	
Kyocera	Kyocera FS-6970DN	Kyocera TK-450	
Kyocera	Kyocera FS-1041 / FS-1220MFP / FS-1320MFP	Kyocera TK-1115 Black	
Kyocera	Kyocera FS-4100DN	Kyocera TK-3110 Black	
Kyocera	Kyocera FS-4200DN / FS-4300DN	Kyocera TK-3130 Black	
Kyocera	Kyocera TK-3150 Black	Kyocera TK-3150 Black	
Kyocera	Kyocera TASKalfa 2550ci	Kyocera TK-8315 Black	
Kyocera	Kyocera TASKalfa 2550ci	Kyocera TK-8315 Cyan	
Kyocera	Kyocera TASKalfa 2550ci	Kyocera TK-8315 Magenta	
Kyocera	Kyocera TASKalfa 2550ci	Kyocera TK-8315 Yellow	
Kyocera	Kyocera TASKalfa 2551ci	Kyocera TK-8325 Black	
Kyocera	Kyocera TASKalfa 2551ci	Kyocera TK-8325 Cyan	
Kyocera	Kyocera TASKalfa 2551ci	Kyocera TK-8325 Magenta	
Kyocera	Kyocera TASKalfa 2551ci	Kyocera TK-8325 Yellow	
Kyocera	Kyocera FS-C8600DN / C8650DN	Kyocera TK-8600 Black	
Kyocera	Kyocera FS-C8600DN / C8650DN	Kyocera TK-8600 Cyan	
Kyocera	Kyocera FS-C8600DN / C8650DN	Kyocera TK-8600 Magenta	
Kyocera	Kyocera FS-C8600DN / C8650DN	Kyocera TK-8600 Yellow	
Kyocera	Kyocera FS-1061DN / FS-1325MFP	Kyocera TK-1125 Black	
Kyocera	Kyocera ECOSYS M6035cidn/M6535cidn/P6035cdn	Kyocera TK-5150 Black	
Kyocera	Kyocera ECOSYS M6035cidn/M6535cidn/P6035cdn	Kyocera TK-5150 Cyan	
Kyocera	Kyocera ECOSYS M6035cidn/M6535cidn/P6035cdn	Kyocera TK-5150 Magenta	
Kyocera	Kyocera ECOSYS M6035cidn/M6535cidn/P6035cdn	Kyocera TK-5150 Yellow	
Kyocera	Kyocera ECOSYS M6030cdn / M6530cdn / P6130cdn	Kyocera TK-5140 Black	
Kyocera	Kyocera ECOSYS M6030cdn / M6530cdn / P6130cdn	Kyocera TK-5140 Cyan	
Kyocera	Kyocera ECOSYS M6030cdn / M6530cdn / P6130cdn	Kyocera TK-5140 Magenta	
Kyocera	Kyocera ECOSYS M6030cdn / M6530cdn / P6130cdn	Kyocera TK-5140 Yellow	
Kyocera	Kyocera TASKalfa 1800/1801/2200/2201	Kyocera TK-4105 Black	
Kyocera	Kyocera TASKalfa 5052ci / 6052ci	Kyocera TK-8515 Black	
Kyocera	Kyocera TASKalfa 5052ci / 6052ci	Kyocera TK-8515 Cyan	
Kyocera	Kyocera TASKalfa 5052ci / 6052ci	Kyocera TK-8515 Magenta	
Kyocera	Kyocera TASKalfa 5052ci / 6052ci	Kyocera TK-8515 Yellow	
Kyocera	Kyocera TK 1150 virgin	Kyocera TK-1150 virgin	
Kyocera	Kyocera TK 1160 virgin	Kyocera TK-1160 virgin	
Kyocera	Kyocera TK 1170 virgin	Kyocera TK-1170 virgin	
Kyocera	Kyocera TK 3160	Kyocera TK-3160	
Kyocera	Kyocera TK 3170	Kyocera TK-3170	
Kyocera	Kyocera TK 3190	Kyocera TK-3190	
Kyocera	Kyocera TK 475	Kyocera TK-475	
Kyocera	Kyocera TK 5160 Black	Kyocera TK-5160 Black	
Kyocera	Kyocera TK 5160 Cyan	Kyocera TK-5160 Cyan	
Kyocera	Kyocera TK 5160 Magenta	Kyocera TK-5160 Magenta	
Kyocera	Kyocera TK 5160 Yellow	Kyocera TK-5160 Yellow	
Kyocera	Kyocera TK-5205 Black	Kyocera TK-5205 Black	
Kyocera	Kyocera TK-5205 Cyan	Kyocera TK-5205 Cyan	
Kyocera	Kyocera TK-5205 Magenta	Kyocera TK-5205 Magenta	
Kyocera	Kyocera TK-5205 Yellow	Kyocera TK-5205 Yellow	
Kyocera	Kyocera TK-5220 Black	Kyocera TK-5220 Black	
Kyocera	Kyocera TK-5220 Cyan	Kyocera TK-5220 Cyan	
Kyocera	Kyocera TK-5220 Magenta	Kyocera TK-5220 Magenta	
Kyocera	Kyocera TK-5220 Yellow	Kyocera TK-5220 Yellow	
Kyocera	Kyocera TK-5240 Black	Kyocera TK-5240 Black	
Kyocera	Kyocera TK-5240 Cyan	Kyocera TK-5240 Cyan	
Kyocera	Kyocera TK-5240 Magenta	Kyocera TK-5240 Magenta	
Kyocera	Kyocera TK-5240 Yellow	Kyocera TK-5240 Yellow	
Kyocera	Kyocera TK-8345 Black	Kyocera TK-8345 Black	
Kyocera	Kyocera TK-8345 Cyan	Kyocera TK-8345 Cyan	
Kyocera	Kyocera TK-8345 Magenta	Kyocera TK-8345 Magenta	
Kyocera	Kyocera TK-8345 Yellow	Kyocera TK-8345 Yellow	
Kyocera	Kyocera TK-8525 Black	Kyocera TK-8525 Black	
Kyocera	Kyocera TK-8525 Cyan	Kyocera TK-8525 Cyan	
Kyocera	Kyocera TK-8525 Magenta	Kyocera TK-8525 Magenta	
Kyocera	Kyocera TK-8525 Yellow	Kyocera TK-8525 Yellow	
Kyocera	Kyocera TASKalfa 3010i / 3011i	Kyocera TK-7105	
Kyocera	Kyocera ECOSYS P7040cdn	Kyocera TK-5160 Black	
Kyocera	Kyocera ECOSYS P7040cdn	Kyocera TK-5160 Cyan	

Kyocera	Kyocera ECOSYS P7040cdn	Kyocera TK-5160 Magenta	
Kyocera	Kyocera ECOSYS P7040cdn	Kyocera TK-5160 Yellow	
Kyocera	Kyocera TK-5320 Black	Kyocera TK-5320 Black	
Kyocera	Kyocera TK-5320 Cyan	Kyocera TK-5320 Cyan	
Kyocera	Kyocera TK-5320 Magenta	Kyocera TK-5320 Magenta	
Kyocera	Kyocera TK-5320 Yellow	Kyocera TK-5320 Yellow	
Lexmark	Lexmark 4039	Lexmark 1380850	
Lexmark	Lexmark 4039	Lexmark 1380950	
Lexmark	Lexmark Optra E (Toner)	Lexmark Optra E / 69G8256	
Lexmark Drum	Lexmark Optra E (Drum)	Lexmark Optra E / 69G8257 Drum	
Lexmark	Lexmark E320 / E322	Lexmark E320/E322 / 08A0475	
Lexmark	Lexmark E320 / E322	Lexmark E320/E322 / 08A0476	
Lexmark	Lexmark E320 / E322	Lexmark E320/E322 / 08A0477	
Lexmark	Lexmark E320 / E322	Lexmark E320/E322 / 08A0478	
Lexmark	Lexmark 4049	Lexmark 1382100	
Lexmark	Lexmark 4049	Lexmark Optra RX / 1382150	
Lexmark	Lexmark Optra S (Prebate)	Lexmark Optra S / 1382620	
Lexmark	Lexmark Optra S (Prebate)	Lexmark Optra S / 1382625	
Lexmark	Lexmark Optra S (Non Prebate)	Lexmark Optra S / 1382920	
Lexmark	Lexmark Optra S (Non Prebate)	Lexmark Optra S / 1382925	
Lexmark	Lexmark Optra SE 3455 12A0725	Lexmark Optra SE ALL	
Lexmark	Lexmark Optra M / M410 / M412	Lexmark Optra M / 17G0152	
Lexmark	Lexmark Optra M / M410 / M412	Lexmark Optra M / 4K00199	
Lexmark	Lexmark Optra M / M410 / M412	Lexmark Optra M / 17G0154	
Lexmark	Lexmark T520 / T522 / X520 / X522	Lexmark T520 / 12A6735	
Lexmark	Lexmark T520 / T522 / X520 / X522	Lexmark T520 / 12A6730	
Lexmark	Lexmark T620 / T622 12A6760	Lexmark T620 / T622 ALL	
Lexmark	Lexmark E120	Lexmark E120 ALL	
Lexmark	Lexmark E210	Lexmark E210 / 10S0150	
Lexmark Color	Lexmark SC 1275	Lexmark SC 1275 / 1361751	
Lexmark Color	Lexmark SC 1275	Lexmark SC 1275 / 1361752	
Lexmark Color	Lexmark SC 1275	Lexmark SC 1275 / 1361753	
Lexmark Color	Lexmark SC 1275	Lexmark SC 1275 / 1361754	
Lexmark	Lexmark W820	Lexmark W820 / 12B0090-1	
Lexmark	Lexmark T420	Lexmark T420 ALL	
Lexmark	Lexmark E321 / E323	Lexmark E321 / 12A7305	
Lexmark Color	Lexmark C1200	Lexmark C1200 / 12A1451	
Lexmark Color	Lexmark C1200	Lexmark C1200 / 12A1452	
Lexmark Color	Lexmark C1200	Lexmark C1200 / 12A1453	
Lexmark Color	Lexmark C1200	Lexmark C1200 / 12A1454	
Lexmark	Lexmark T630	Lexmark T632 / 12A7365 Ex Hi Cap	
Lexmark	Lexmark E321 / E323	Lexmark E321 / 12A7400	
Lexmark	Lexmark E220	Lexmark E220 / 12S0400	
Lexmark	Lexmark E230 / E232 / E330 / E332	Lexmark E230 / 12A8400	
Lexmark	Lexmark E230 / E232 / E330 / E332	Lexmark E330 / 12A8405	
Lexmark	Lexmark T640 / T642 / T644 / 64040HW High Cap	Lexmark T640 Double Slot	
Lexmark	Lexmark E230 / E232 / E330 / E332 / E340 / E342 + Others	Lexmark E230 / 12A8300	
Lexmark	Lexmark E230 / E232 / E330 / E332 / E340 / E342 + Others	Lexmark E230 / 12A8305	
Lexmark	Lexmark T430 12A8425	Lexmark T430 12A8425	
Lexmark	Lexmark T430 12A8420	Lexmark T430 12A8420	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T644 / 64436XE	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T640 / 64036HE	
Lexmark	Lexmark E120	Lexmark E120 / 12036SE	
Lexmark	Lexmark E250 / 350 / 352 / 450	Lexmark E250 / E250A21E	
Lexmark	Lexmark E260/360/460	Lexmark E260 / E360 / E460 ALL	
Lexmark	Lexmark E340/342/232/330/332	Lexmark E340 / E34036HE	
Lexmark	Lexmark E360 / 460 High Yield Toner	Lexmark E360 / E360H21E	
Lexmark	Lexmark E460 Extra High Yield Toner	Lexmark E460 / E460X21E	
Lexmark	Lexmark X340 / E342e Toner	Lexmark E340 / E340A21G	
Lexmark Color	Lexmark C746	Lexmark C746 Black	
Lexmark Color	Lexmark C746	Lexmark C746 Cyan	
Lexmark Color	Lexmark C746	Lexmark C746 Magenta	
Lexmark Color	Lexmark C746	Lexmark C746 Yellow	
Lexmark	Lexmark T650 / 652 / 654 Standard Yield	Lexmark T650 / T650A21E	
Lexmark	Lexmark T650 / 652 / 654 High Yield	Lexmark T650 / T650H21E	
Lexmark	Lexmark X651/652/654/656/658 High Yield	Lexmark X651 / X651A21E	
Lexmark	Lexmark X651/652/654/656/658 High Yield	Lexmark X651 / X651H21E	
Lexmark	Lexmark X654 / 656 / 658 Extra High Yield	Lexmark X654 / X654X21E	
Lexmark	Lexmark T654 Extra High Yield	Lexmark T654 / T654X21A	
Lexmark	Lexmark E220	Lexmark E220 / 12S0300	
Lexmark	Lexmark E250 / 350 / 352 / 450	Lexmark E250 / E250A11E	
Lexmark	Lexmark E260	Lexmark E260 / E260A11E	
Lexmark	Lexmark E321 / E323	Lexmark E321 / 12A7405	
Lexmark Drum	Lexmark X850 / 852 / 854 Drum	Lexmark X850 / X850H22G Drum	
Lexmark Drum	Lexmark E230 / E232 / E330 / E332 / E340 / E342 Drum	Lexmark E230 / 12A8302 Drum	
Lexmark Color	Lexmark C720	Lexmark C720 / 15W0900	
Lexmark	Lexmark E450	Lexmark E450 / E450A21E	
Lexmark	Lexmark E350/352 Toner	Lexmark E352 / E352H21E	
Lexmark	Lexmark T630	Lexmark T630/2/4	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T640 / 64036SE	
Lexmark	Lexmark E230 / E232 / E240 / E330 / E332 / E340 / E342n	Lexmark E240 / E24016SE	
Lexmark	Lexmark E230 / E232 / E240 / E330 / E332 / E340 / E342n	Lexmark E240 / E24036SE	
Lexmark	Lexmark E340	Lexmark E340 / E34016HE	
Lexmark	Lexmark E352	Lexmark E352 / E352H11E	
Lexmark	Lexmark E360	Lexmark E360 / E360H11E	
Lexmark	Lexmark E460	Lexmark E460 / E460X11E	
Lexmark	Lexmark E450	Lexmark E450 / E450A11E	
Lexmark	Lexmark E450	Lexmark E450 / E450H11E	
Lexmark	Lexmark E450	Lexmark E450 / E450H21E	
Lexmark Color	Lexmark C720	Lexmark C720 / 15W0901	
Lexmark Color	Lexmark C720	Lexmark C720 / 15W0902	
Lexmark Color	Lexmark C720	Lexmark C720 / 15W0903	
Lexmark	Lexmark T430 12A8325	Lexmark T430 12A8325	
Lexmark	Lexmark T430 12A8320	Lexmark T430 12A8320	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K0500 Cyan	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K0501 Magenta	

Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K0502 Yellow	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K0503 Black	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K1400 Cyan	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K1401 Magenta	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K1402 Yellow	
Lexmark Color	Lexmark C510 / C510N	Lexmark C510 / 20K1403 Black	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T640 / 64016SE	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T640 Single Slot	
Lexmark	Lexmark E340	Lexmark E340 / E340A11G	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T644 / 64416XE	
Lexmark	Lexmark T650 / T650A11E	Lexmark T650 / T650A11E	
Lexmark	Lexmark T650 / T650H11E	Lexmark T650 / T650H11E	
Lexmark	Lexmark X644 / X644X11E	Lexmark X644 / X644X11E	
Lexmark	Lexmark X644 / X644H11E	Lexmark X644 / X644H11E	
Lexmark	Lexmark X644 / X644A11E	Lexmark X644 / X644A11E	
Lexmark	Lexmark X651 / X651A11E	Lexmark X651 / X651A11E	
Lexmark	Lexmark X651 / X651H11E	Lexmark X651 / X651H11E	
Lexmark	Lexmark X654 / X654X11E	Lexmark X654 / X654X11E	
Lexmark	Lexmark E350 / E352	Lexmark E350 / E352 ALL	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T640 / 64004HE Hi Cap	
Lexmark	Lexmark T654	Lexmark T654 / T654X11A	
Lexmark	Lexmark E321 / E323	Lexmark E321 / E323 ALL	
Lexmark	Lexmark X630	Lexmark X630	
Lexmark Color	Lexmark C734 / C736 / X734 / X736 / X738n	Lexmark C734 Series Black	
Lexmark Color	Lexmark C734 / C736 / X734 / X736 / X738n	Lexmark C734 Series Magenta	
Lexmark Color	Lexmark C734 / C736 / X734 / X736 / X738n	Lexmark C734 Series Cyan	
Lexmark Color	Lexmark C734 / C736 / X734 / X736 / X738n	Lexmark C734 Series Yellow	
Lexmark Color	Lexmark C770DN / C770DTN / C770N / C770X / C772X	Lexmark C7700K Black	
Lexmark Color	Lexmark C770DN / C770DTN / C770N / C770X / C772X	Lexmark C7700YS Yellow	
Lexmark Color	Lexmark C770DN / C770DTN / C770N / C770X / C772X	Lexmark C7700MS Magenta	
Lexmark Color	Lexmark C770DN / C770DTN / C770N / C770X / C772X	Lexmark C7700CS Cyan	
Lexmark Color	Lexmark C772DN / C772DTN / C772N	Lexmark C7720KX Black	
Lexmark Color	Lexmark C772DN / C772DTN / C772N	Lexmark C7720MX Magenta	
Lexmark Color	Lexmark C772DN / C772DTN / C772N	Lexmark C7720YX Yellow	
Lexmark Color	Lexmark C772DN / C772DTN / C772N	Lexmark C7720CX Cyan	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5240KH / C5242KH Black	
Lexmark Color	Lexmark C522 / C524	Lexmark C5220KS / C5222KS Black	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5242KH Black	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5240CH / C5242CH Cyan	
Lexmark Color	Lexmark C522 / C524	Lexmark C5220CS / C5222CS Cyan	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5242CH Cyan	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5240YH / C5242YH Yellow	
Lexmark Color	Lexmark C522 / C524	Lexmark C5220MS / C5222MS Magenta	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5242MH Magenta	
Lexmark	Lexmark T640/T642/T644/X640E/X642E/X644E/X646E	Lexmark T640 / 64080HW	
Lexmark Color	Lexmark C522 / C524	Lexmark C5220YS / C5222YS Yellow	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5242YH Yellow	
Lexmark Color	Lexmark C500 / X500N / X502N	Lexmark C500 Series ALL Black	
Lexmark Color	Lexmark C500 / X500N / X502N	Lexmark C500 Series ALL Magenta	
Lexmark Color	Lexmark C500 / X500N / X502N	Lexmark C500 Series ALL Yellow	
Lexmark Color	Lexmark C500 / X500N / X502N	Lexmark C500 Series ALL Cyan	
Lexmark	Lexmark X463 / X463X11G	Lexmark X463X11G	
Lexmark	Lexmark X463 / X463H11G	Lexmark X463H11G	
Lexmark	Lexmark X463 / X463X31G	Lexmark X463X31G	
Lexmark	Lexmark X340	Lexmark X340H11G	
Lexmark	Lexmark X340 / X340A21G	Lexmark X340A21G	
Lexmark Color	Lexmark C780x / C782n / C782x	Lexmark C780 / C782 ALL Black	
Lexmark Color	Lexmark C780x / C782n / C782x	Lexmark C780 / C782 ALL Magenta	
Lexmark Color	Lexmark C780x / C782n / C782x	Lexmark C780 / C782 ALL Cyan	
Lexmark Color	Lexmark C780x / C782n / C782x	Lexmark C780 / C782 ALL Yellow	
Lexmark Color	Lexmark C752	Lexmark C752 Series ALL Black	
Lexmark Color	Lexmark C752	Lexmark C752 Series ALL Cyan	
Lexmark Color	Lexmark C752	Lexmark C752 Series ALL Magenta	
Lexmark Color	Lexmark C752	Lexmark C752 Series ALL Yellow	
Lexmark Color	Lexmark C910 / C910N / C912 / X912E	Lexmark C910 / 12N0771 Black	
Lexmark Color	Lexmark C910 / C910N / C912 / X912E	Lexmark C910 / 12N0768 Cyan	
Lexmark Color	Lexmark C910 / C910N / C912 / X912E	Lexmark C910 / 12N0769 Magenta	
Lexmark Color	Lexmark C910 / C910N / C912 / X912E	Lexmark C910 / 12N0770 Yellow	
Lexmark	Lexmark T520 / T522	Lexmark T520 / T522 ALL	
Lexmark	Lexmark E320 / E322	Lexmark E320 / 12A2260	
Lexmark	Lexmark X644 Extra High Yield	Lexmark X644 / X644X31E	
Lexmark	Lexmark T610 / T612 / T614 / T616n	Lexmark T610 ALL	
Lexmark	Lexmark Optra S (Prebate)	Lexmark Optra S / 12A0150 Hi Cap	
Lexmark Color	Lexmark C524 / C532DN / C534x	Lexmark C5240MH / C5242MH Magenta	
Lexmark	Lexmark X264dn / X363dn / X364dn / X364dw	Lexmark X264 / X264H11G Hi Cap	
Lexmark	Lexmark X264dn / X363dn / X364dn / X364dw	Lexmark X264 / X264H21G Hi Cap	
Lexmark	Lexmark X264dn / X363dn / X364dn / X364dw	Lexmark X264 / X264A11G Std Cap	
Lexmark	Lexmark X264dn / X363dn / X364dn / X364dw	Lexmark X264 / X264A21G Std Cap	
Lexmark	Lexmark T650 / T652 / T654	Lexmark T650 / T650H31E	
Lexmark	Lexmark X654X31E	Lexmark X654 / X654X31E	
Lexmark	Lexmark E460	Lexmark E460 / E460X31E	
Lexmark	Lexmark W840	Lexmark W84020H	
Lexmark	Lexmark X203n / X204n	Lexmark X203 / X204	
Lexmark Color	Lexmark C736 / X736 / X738	Lexmark C736A Black	
Lexmark Color	Lexmark C736 / X736 / X738	Lexmark C736A Cyan	
Lexmark Color	Lexmark C736 / X736 / X738	Lexmark C736A Magenta	
Lexmark Color	Lexmark C736 / X736 / X738	Lexmark C736A Yellow	
Lexmark Color	Lexmark C540 / C543 / C544 / C546 / X543 / X544 / X546	Lexmark C540 Series ALL Black	
Lexmark Color	Lexmark C540 / C543 / C544 / C546 / X543 / X544 / X546	Lexmark C540 Series ALL Cyan	
Lexmark Color	Lexmark C540 / C543 / C544 / C546 / X543 / X544 / X546	Lexmark C540 Series ALL Magenta	
Lexmark Color	Lexmark C540 / C543 / C544 / C546 / X543 / X544 / X546	Lexmark C540 Series ALL Yellow	
Lexmark	Lexmark T654 Extra High Yield	Lexmark T654 / T654X31E	
Lexmark	Lexmark T640 / T642 / T644n	Lexmark T644 / 64440KW	
Lexmark Intro	Lexmark T652	Lexmark T650 / 652 654 ALL INTRO	
Lexmark Color	Lexmark C534 / C5340CX Cyan	Lexmark C5340CX Cyan	
Lexmark Color	Lexmark C534 / C5340MX Magenta	Lexmark C5340MX Magenta	

Lexmark Color	Lexmark C534 / C5340YX Yellow	Lexmark C5340YX Yellow
Lexmark Drum	Lexmark X642e / X644 High Yield	Lexmark W84030H Drum
Lexmark	Lexmark T654	Lexmark T654 / T654X11E
Lexmark Drum	Lexmark X340	Lexmark X340 / X340H22G Drum
Lexmark Color	Lexmark C930 / C930H2KG Black	Lexmark C930H2KG Black
Lexmark Color	Lexmark C930 / C930H2CG Cyan	Lexmark C930H2CG Cyan
Lexmark Color	Lexmark C930 / C930H2MG Magenta	Lexmark C930H2MG Magenta
Lexmark Color	Lexmark C930 / C930H2YG Yellow	Lexmark C930H2YG Yellow
Lexmark Color	Lexmark C750	Lexmark C750 / 10B042K Black
Lexmark Color	Lexmark C750	Lexmark C750 / 10B042C Cyan
Lexmark Color	Lexmark C750	Lexmark C750 / 10B042M Magenta
Lexmark Color	Lexmark C750	Lexmark C750 / 10B042Y Yellow
Lexmark	Lexmark X651/652/654/656/658 High Yield	Lexmark X651 / X651H31E
Lexmark	Lexmark E260/360/460	Lexmark E260 / E260A31E
Lexmark	Lexmark E340/342/232/330/332	Lexmark E340 / E340A0HW
Lexmark	Lexmark X264dn / X363dn / X364dn / X364dw	Lexmark X264 / X264H31G Hi Cap
Lexmark Drum	Lexmark C510 / C510N	Lexmark C510 / 20K0504 Drum
Lexmark	Lexmark T654 / T654X21E	Lexmark T654 / T654X21E
Lexmark	Lexmark E360 / 460 Ext High Yield Toner	Lexmark E360 / E360H31E Ex Hi Cap
Lexmark Color	Lexmark C520 / C530	Lexmark C5200KS Black
Lexmark Color	Lexmark C520 / C530	Lexmark C5200CS Cyan
Lexmark Color	Lexmark C520 / C530	Lexmark C5200MS Magenta
Lexmark Color	Lexmark C520 / C530	Lexmark C5200YS Yellow
Lexmark Color	Lexmark C792	Lexmark C792A1KG Black
Lexmark Color	Lexmark C792	Lexmark C792A1CG Cyan
Lexmark Color	Lexmark C792	Lexmark C792A1MG Magenta
Lexmark Color	Lexmark C792	Lexmark C792A1YG Yellow
Lexmark Color	Lexmark X925de / C925	Lexmark X925 / C925 All Black
Lexmark Color	Lexmark X925de / C925	Lexmark X925 / C925 All Cyan
Lexmark Color	Lexmark X925de / C925	Lexmark X925 / C925 All Magenta
Lexmark Color	Lexmark X925de / C925	Lexmark X925 / C925 All Yellow
Lexmark	Lexmark X463 / X463A11G	Lexmark X463A11G
Lexmark Color	Lexmark CX410 / CX510	Lexmark802 Black ALL
Lexmark Color	Lexmark CX410 / CX510	Lexmark 802 Cyan ALL
Lexmark Color	Lexmark CX410 / CX510	Lexmark 802 Magenta ALL
Lexmark Color	Lexmark CX410 / CX510	Lexmark 802 Yellow ALL
Lexmark	Lexmark 502 Std Cap 1.5K	Lexmark 502 Std Cap
Lexmark	Lexmark 502H Hi Cap 5K	Lexmark 502H Hi Cap
Lexmark	Lexmark 502U Ultra Hi Cap 20K	Lexmark 502U Ultra Hi Cap
Lexmark	Lexmark 522 Std Cap 6K	Lexmark 522 Std Cap
Lexmark	Lexmark 522H Hi Cap 25K	Lexmark 522H Hi Cap
Lexmark	Lexmark 522X Extra Hi Cap 45K	Lexmark 522X Ultra Hi Cap
Lexmark	Lexmark 602 Std Cap	Lexmark 602 Std Cap
Lexmark	Lexmark 602H Hi Cap	Lexmark 602H Hi Cap
Lexmark	Lexmark 600XA Extra Hi Cap	Lexmark 600XA Extra Hi Cap
Lexmark	Lexmark 622 Std Cap	Lexmark 622 Std Cap
Lexmark	Lexmark 622H Hi Cap	Lexmark 622H Hi Cap
Lexmark	Lexmark 620XA Extra Hi Cap	Lexmark 620XA Extra Hi Cap
Lexmark Intro	Lexmark MS310/410/510/511/610 INTRO	Lexmark MS310/410/510/511/610 INTRO
Lexmark Intro	Lexmark MX310/410/510/511/610 INTRO	Lexmark MX310/410/510/511/610 INTRO
Lexmark Intro	Lexmark M710/711/810/811/812 INTRO	Lexmark M710/711/810/811/812 INTRO
Lexmark Intro	Lexmark MX710/711/810/811/812 INTRO	Lexmark MX710/711/810/811/812 INTRO
Lexmark Drum	Lexmark X864de 4	Lexmark X860H22G Drum
Lexmark Color	Lexmark CS310 / 410 / 510	Lexmark 702CK / 702HK / 702XK
Lexmark Color	Lexmark CS310 / 410 / 510	Lexmark 702CC / 702HC / 702XC
Lexmark Color	Lexmark CS310 / 410 / 510	Lexmark 702CM / 702HM / 702XM
Lexmark Color	Lexmark CS310 / 410 / 510	Lexmark 702CY / 702HY / 702XY
Lexmark Color	Lexmark CX310 / 410 / 510	Lexmark 802CK / 802HCK / 802XCK
Lexmark Color	Lexmark CX310 / 410 / 510	Lexmark 802CC / 802HCC / 802XCC
Lexmark Color	Lexmark CX310 / 410 / 510	Lexmark 802CM / 802HCM / 802XCM
Lexmark Color	Lexmark CX310 / 410 / 510	Lexmark 802CY / 802HCY / 802XCY
Lexmark Intro	Lexmark CS310 / 410 / 510	Lexmark 702CK / 702HK / 702XK INTRO
Lexmark Intro	Lexmark CS310 / 410 / 510	Lexmark 702CC / 702HC / 702XC INTRO
Lexmark Intro	Lexmark CS310 / 410 / 510	Lexmark 702CM / 702HM / 702XM INTRO
Lexmark Intro	Lexmark CS310 / 410 / 510	Lexmark 702CY / 702HY / 702XY INTRO
Lexmark Intro	Lexmark CX310 / 410 / 510	Lexmark 802CK / 802HCK / 802XCK INTRO
Lexmark Intro	Lexmark CX310 / 410 / 510	Lexmark 802CC / 802HCC / 802XCC INTRO
Lexmark Intro	Lexmark CX310 / 410 / 510	Lexmark 802CM / 802HCM / 802XCM INTRO
Lexmark Intro	Lexmark CX310 / 410 / 510	Lexmark 802CY / 802HCY / 802XCY INTRO
Lexmark Color	Lexmark C748	Lexmark C748 Black
Lexmark Color	Lexmark C748	Lexmark C748 Cyan
Lexmark Color	Lexmark C748	Lexmark C748 Magenta
Lexmark Color	Lexmark C748	Lexmark C748 Yellow
Lexmark Color	Lexmark C792	Lexmark C792X1KG Black
Lexmark Color	Lexmark C792	Lexmark C792X1CG Cyan
Lexmark Color	Lexmark C792	Lexmark C792X1MG Magenta
Lexmark Color	Lexmark C792	Lexmark C792X1YG Yellow
Lexmark Color	Lexmark C2132 / XC2132 / XC2130	Lexmark 24B6008 Cyan
Lexmark Color	Lexmark C2132 / XC2132 / XC2130	Lexmark 24B6009 Magenta
Lexmark Color	Lexmark C2132 / XC2132 / XC2130	Lexmark 24B6010 Yellow
Lexmark Color	Lexmark C2132 / XC2132 / XC2130	Lexmark 24B6011 Black
Lexmark Color	Lexmark X5796	Lexmark 24B5832 Cyan Hi Cap
Lexmark Color	Lexmark X5796	Lexmark 24B5833 Magenta Hi Cap
Lexmark Color	Lexmark X5796	Lexmark 24B5834 Yellow Hi Cap
Lexmark Color	Lexmark X5796	Lexmark 24B5835 Black Hi Cap
Lexmark	Lexmark MS811 / MS812	Lexmark 24B6740
Lexmark	Lexmark M1145 / XM1145	Lexmark 24B6035
Lexmark	Lexmark XC6152 / XC8155	Lexmark 24B6511
Lexmark Color	Lexmark C950de	Lexmark C950X2KG Black
Lexmark Color	Lexmark C950de	Lexmark C950X2CG Cyan
Lexmark Color	Lexmark C950de	Lexmark C950X2MG Magenta
Lexmark Color	Lexmark C950de	Lexmark C950X2YG Yellow
Lexmark Color	Lexmark X950de / X950dhe / X952de / X954de	Lexmark X950X2KG Black
Lexmark Color	Lexmark X950de / X950dhe / X952de / X954de	Lexmark X950X2CG Cyan
Lexmark Color	Lexmark X950de / X950dhe / X952de / X954de	Lexmark X950X2MG Magenta
Lexmark Color	Lexmark X950de / X950dhe / X952de / X954de	Lexmark X950X2YG Yellow

Lexmark Color	Lexmark W850dn / W850n	Lexmark W850H21G Black
Lexmark Drum	Lexmark W850dn / W850n	Lexmark W850H22G Drum
Lexmark Color	Lexmark C4150	Lexmark 24B6516 Cyan
Lexmark Color	Lexmark C4150	Lexmark 24B6517 Magenta
Lexmark Color	Lexmark C4150	Lexmark 24B6518 Yellow
Lexmark Color	Lexmark C4150	Lexmark 24B6519 Black
Lexmark	Lexmark 500UA Ultra Hi Cap 20K	Lexmark 500UA Ultra Hi Cap
Lexmark	Lexmark 500XA Extra Hi Cap 10K	Lexmark 500XA Extra Hi Cap
Lexmark	Lexmark 502X Extra Hi Cap 10K	Lexmark 502X Extra Hi Cap
Lexmark	Lexmark 512H Hi Cap 5K	Lexmark 512H Hi Cap
Lexmark	Lexmark 520HA Hi Cap	Lexmark 520HA Hi Cap
Lexmark	Lexmark 520UE Ultra Hi Cap 20K	Lexmark 520UE Ultra Hi Cap
Lexmark	Lexmark 520XA Extra Hi Cap 45K	Lexmark 520XA Extra Hi Cap
Lexmark	Lexmark 520XAL Extra Hi Cap 45K	Lexmark 520XAL Extra Hi Cap
Lexmark	Lexmark 522HL Hi Cap 25K	Lexmark 522HL Hi Cap
Lexmark	Lexmark 602X Extra Hi Cap	Lexmark 602X Extra Hi Cap
Lexmark	Lexmark 622X Extra Hi Cap	Lexmark 622X Extra Hi Cap
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV30AH Black
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV30CH Magenta
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV30HH Cyan
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV306H Yellow
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV30AH Magenta
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV30GH Cyan
Konica Minolta	QMS MagiColor 1600W / 1650EN / 1680MF / 1690MF	Konica 1600 / AOV305H Yellow
Konica Minolta	Konica Minolta TN-312 Black	Konica TN-312 Black
Konica Minolta	Konica Minolta TN-312 Cyan	Konica TN-312 Cyan
Konica Minolta	Konica Minolta TN-312 Magenta	Konica TN-312 Magenta
Konica Minolta	Konica Minolta TN-312 Yellow	Konica TN-312 Yellow
Konica Minolta	Konica Minolta Bizhub C452/C552/C652/C652DS	Konica TN-613 Black
Konica Minolta	Konica Minolta Bizhub C452/C552/C652/C652DS	Konica TN-613 Cyan
Konica Minolta	Konica Minolta Bizhub C452/C552/C652/C652DS	Konica TN-613 Magenta
Konica Minolta	Konica Minolta Bizhub C452/C552/C652/C652DS	Konica TN-613 Yellow
Konica Minolta	Konica Minolta TN-310 Black	Konica TN-310 Black
Konica Minolta	Konica Minolta TN-310 Cyan	Konica TN-310 Cyan
Konica Minolta	Konica Minolta TN-310 Magenta	Konica TN-310 Magenta
Konica Minolta	Konica Minolta TN-310 Yellow	Konica TN-310 Yellow
Konica Minolta	Konica Minolta Bizhub 4000P A63W01H Black	Konica TNP-35 Black
Konica Minolta	Konica Minolta C224 Black	Konica TN-321 Black
Konica Minolta	Konica Minolta C224 Cyan	Konica TN-321 Cyan
Konica Minolta	Konica Minolta C224 Magenta	Konica TN-321 Magenta
Konica Minolta	Konica Minolta C224 Yellow	Konica TN-321 Yellow
Konica Minolta	Konica Minolta C220 Black	Konica TN-216 Black
Konica Minolta	Konica Minolta C220 Cyan	Konica TN-216 Cyan
Konica Minolta	Konica Minolta C220 Magenta	Konica TN-216 Magenta
Konica Minolta	Konica Minolta C220 Yellow	Konica TN-216 Yellow
Konica Minolta	Konica Minolta Magicolor 5500/5550/5570/5650EN	Konica 5500 A06V Black
Konica Minolta	Konica Minolta Magicolor 5500/5550/5570/5650EN	Konica 5500 A06V Cyan
Konica Minolta	Konica Minolta Magicolor 5500/5550/5570/5650EN	Konica 5500 A06V Magenta
Konica Minolta	Konica Minolta Magicolor 5500/5550/5570/5650EN	Konica 5500 A06V Yellow
Konica Minolta	Konica Minolta Bizhub Bizhub C3350	Konica ASX0 TNP-48 Black
Konica Minolta	Konica Minolta Bizhub Bizhub C3350	Konica ASX0 TNP-48 Cyan
Konica Minolta	Konica Minolta Bizhub Bizhub C3350	Konica ASX0 TNP-48 Magenta
Konica Minolta	Konica Minolta Bizhub Bizhub C3350	Konica ASX0 TNP-48 Yellow
Konica Minolta	Konica Minolta Bizhub C360	Konica TN-319 Black
Konica Minolta	Konica Minolta Bizhub C360	Konica TN-319 Cyan
Konica Minolta	Konica Minolta Bizhub C360	Konica TN-319 Magenta
Konica Minolta	Konica Minolta Bizhub C360	Konica TN-319 Yellow
Konica Minolta	Konica Minolta Bizhub C258/C308/C368	Konica TN-324 Black
Konica Minolta	Konica Minolta Bizhub C258/C308/C368	Konica TN-324 Cyan
Konica Minolta	Konica Minolta Bizhub C258/C308/C368	Konica TN-324 Magenta
Konica Minolta	Konica Minolta Bizhub C258/C308/C368	Konica TN-324 Yellow
Konica Minolta	Konica Minolta Bizhub C451/C550/C650	Konica TN-611 Black
Konica Minolta	Konica Minolta Bizhub C451/C550/C650	Konica TN-611 Cyan
Konica Minolta	Konica Minolta Bizhub C451/C550/C650	Konica TN-611 Magenta
Konica Minolta	Konica Minolta Bizhub C451/C550/C650	Konica TN-611 Yellow
Konica Minolta	Konica Minolta Bizhub 3320 A6WT00H	Konica TNP-41 Black
Konica Minolta	Konica Minolta Bizhub 4050/4750 A6VK01H	Konica TNP-44 Black
Konica Minolta	Konica Minolta Bizhub 4050/4750 A6VK01W	Konica TNP-46 Black
OKI	OKi C5600 / 5700	OKI 43324408 C5600 / C5700 Black
OKI	OKi C110 / C130 / MC160n	OKI 44250724 C110 / C130 Hi Black
OKI	OKi C110 / C130 / MC160n	OKI 44250723 C110 / C130 Hi Cyan
OKI	OKi C110 / C130 / MC160n	OKI 44250722 C110 / C130 Hi Magenta
OKI	OKi C110 / C130 / MC160n	OKI 44250721 C110 / C130 Hi Yellow
OKI	OKi C110 / C130 / MC160n	OKI C110 / C130 Std Black
OKI	OKi C110 / C130 / MC160n	OKI 44250719 C110 / C130 Std Cyan
OKI	OKi C110 / C130 / MC160n	OKI 44250718 C110 / C130 Std Magenta
OKI	OKi C110 / C130 / MC160n	OKI 44250717 C110 / C130 Std Yellow
OKI	OKi C9600/C9650/C9800/C9850	OKI 42918916 C9600 / C9800 Black
OKI	OKi C9600/C9650/C9800/C9850	OKI 42918915 C9600 / C9800 Cyan
OKI	OKi C9600/C9650/C9800/C9850	OKI 42918914 C9600 / C9800 Magenta
OKI	OKi C9600/C9650/C9800/C9850	OKI 42918913 C9600 / C9800 Yellow
OKI Drum	OKi C9600/C9650/C9800/C9850 Drum	OKI 42918108 C9600 / C9800 Black Drum
OKI Drum	OKi C9600/C9650/C9800/C9850 Drum	OKI 42918107 C9600 / C9800 Cyan Drum
OKI Drum	OKi C9600/C9650/C9800/C9850 Drum	OKI 42918106 C9600 / C9800 Magenta Drum
OKI Drum	OKi C9600/C9650/C9800/C9850 Drum	OKI 42918105 C9600 / C9800 Yellow Drum
OKI	OKi C5600 / 5700	OKI 43381907 C5600 / C5700 Cyan
OKI	OKi C5600 / 5700	OKI 43381906 C5600 / C5700 Magenta
OKI	OKi C5600 / 5700	OKI 43381905 C5600 / C5700 Yellow
OKI Drum	OKi C5600 / 5700	OKI 43381708 C5600 / C5700 Black Drum
OKI Drum	OKi C5600 / 5700	OKI 43381707 C5600 / C5700 Cyan Drum
OKI Drum	OKi C5600 / 5700	OKI 43381706 C5600 / C5700 Magenta Drum
OKI Drum	OKi C5600 / 5700	OKI 43381705 C5600 / C5700 Yellow Drum
OKI	OKi C8600 / 8800	OKI 43487712 / C8600 / C8800 Black
OKI	OKi C8600 / 8800	OKI 43487711 / C8600 / C8800 Cyan
OKI	OKi C8600 / 8800	OKI 43487710 / C8600 / C8800 Magenta
OKI	OKi C8600 / 8800	OKI 43487709 / C8600 / C8800 Yellow

OKI Drum	OKi C8600 / 8800 Drum	OKI 43449016 C8600 / C8800 Black Drum
OKI Drum	OKi C8600 / 8800 Drum	OKI 43449015 C8600 / C8800 Cyan Drum
OKI Drum	OKi C8600 / 8800 Drum	OKI 43449014 C8600 / C8800 Magenta Drum
OKI Drum	OKi C8600 / 8800 Drum	OKI 43449013 C8600 / C8800 Yellow Drum
OKI	OKi C710 / C711 Black	OKI 43866108 / C710 / C711 Black
OKI	OKi C710 / C711 Cyan	OKI 43866107 / C710 / C711 Cyan
OKI	OKi C710 / C711 Magenta	OKI 43866106 / C710 / C711 Magenta
OKI	OKi C710 / C711 Yellow	OKI 43866105 / C710 / C711 Yellow
OKI	OKi C310dn / C330dn / C510dn / C530dn / MC351 / MC361 / MC561	OKi 44469706 Black
OKI	OKi C310dn / C330dn / C510dn / C530dn / MC351 / MC361 / MC561	OKi 44469724 Cyan
OKI	OKi C310dn / C330dn / C510dn / C530dn / MC351 / MC361 / MC561	OKi 44469723 Magenta
OKI	OKi C310dn / C330dn / C510dn / C530dn / MC351 / MC361 / MC561	OKi 44469722 Yellow
OKI Drum	OKi B430/440/460/470/480	OKi 43979002 B400 / B410 Drum
OKI	OKi B6300	OKI 09004079 / B6300 Black
OKI	OKi B411/B431/MB471	OKI 44574702 / 602 B411 / B431
OKI	OKi C831 / C841	OKI 44844508 C831 / C841 Black
OKI	OKi C831 / C841	OKI 44844507 C831 / C841 Cyan
OKI	OKi C831 / C841	OKI 44844506 C831 / C841 Magenta
OKI	OKi C831 / C841	OKI 44844505 C831 / C841 Yellow
OKI	OKi C5650 / C5750	OKI 43865708 C5650 / C5750 Black
OKI	OKi C5650 / C5750	OKI 43872307 C5650 / C5750 Cyan
OKI	OKi C5650 / C5750	OKI 43872306 C5650 / C5750 Magenta
OKI	OKi C5650 / C5750	OKI 43872305 C5650 / C5750 Yellow
OKI Drum	OKi C5650 / C5750	OKI 43870008 C5650 / C5750 Black Drum
OKI Drum	OKi C5650 / C5750	OKI 43870007 C5650 / C5750 Cyan Drum
OKI Drum	OKi C5650 / C5750	OKI 43870006 C5650 / C5750 Magenta Drum
OKI Drum	OKi C5650 / C5750	OKI 43870005 C5650 / C5750 Yellow Drum
OKI	OKi C5550 / C5800 / C5900	OKI 43324424 C5550 / C5800 / C5900 Black
OKI	OKi C5550 / C5800 / C5900	OKI 43324423 C5550 / C5800 / C5900 Cyan
OKI	OKi C5550 / C5800 / C5900	OKI 43324422 C5550 / C5800 / C5900 Magenta
OKI	OKi C5550 / C5800 / C5900	OKI 43324421 C5550 / C5800 / C5900 Yellow
OKI Drum	OKi C5550 / C5800 / C5900	OKI 43381724 C5550/C5800/C5900 Black Drum
OKI Drum	OKi C5550 / C5800 / C5900	OKI 43381723 C5550/C5800/C5900 Cyan Drum
OKI Drum	OKi C5550 / C5800 / C5900	OKI 43381722 C5550/C5800/C5900 Magenta Drum
OKI Drum	OKi C5550 / C5800 / C5900	OKI 43381721 C5550/C5800/C5900 Yellow Drum
OKI Drum	OKi C710 / C711 Black	OKI 43913808 C710 / C711 Black Drum
OKI Drum	OKi C710 / C711 Cyan	OKI 43913807 C710 / C711 Cyan Drum
OKI Drum	OKi C710 / C711 Magenta	OKI 43913806 C710 / C711 Magenta Drum
OKI Drum	OKi C710 / C711 Yellow	OKI 43913805 C710 / C711 Yellow Drum
OKI	OKi Executive Series 6410	OKI 44315320 / E56410 Black
OKI	OKi Executive Series 6410	OKI 44315319 / E56410 Cyan
OKI	OKi Executive Series 6410	OKI 44315318 / E56410 Magenta
OKI	OKi Executive Series 6410	OKI 44315317 / E56410 Yellow
OKI Drum	OKi Executive Series 6410	OKI 01272904 / E56410 Black Drum
OKI Drum	OKi Executive Series 6410	OKI 01272903 / E56410 Cyan Drum
OKI Drum	OKi Executive Series 6410	OKI 01272902 / E56410 Magenta Drum
OKI Drum	OKi Executive Series 6410	OKI 01272901 / E56410 Yellow Drum
OKI Drum	OKi B411/B431/MB471	OKI 44574302 / B411 / B431 Drum
OKI	OKi B2500 MFP/B2520/B2540/OKIFAX 2510/2530	OKI 09004447 / B2500
OKI	OKi B6500	OKI 09004461 / B6500 Black Std Cap
OKI	OKi B6500	OKI 09004462 / B6500 Black Hi Cap
OKI	OKi B6100	OKI 09004058 / B6100
OKI	OKi B6200 / B6250	OKI 09004078 / B6200 / B6250
OKI	OKi B710/B720/B730	OKI 01279001 / B710
OKI	OKi B412d / B432 / B512 / MB472/ MB492/ MB562	OKI 45807102 / B412 Black Std Cap
OKI	OKi B412d / B432 / B512 / MB472/ MB492/ MB562	OKI 45807106 / 7111 B412 Black Hi Cap
OKI	OKi C931 / C931dn	OKI 45536508 Black Hi Cap
OKI	OKi C931 / C931dn	OKI 45536507 Cyan Hi Cap
OKI	OKi C931 / C931dn	OKI 45536506 Magenta Hi Cap
OKI	OKi C931 / C931dn	OKI 45536505 Yellow Hi Cap
OKI	OKi C911dn / C931 / C931dn	OKI 45536416 Black
OKI	OKi C911dn / C931 / C931dn	OKI 45536415 Cyan
OKI	OKi C911dn / C931 / C931dn	OKI 45536414 Magenta
OKI	OKi C911dn / C931 / C931dn	OKI 45536413 Yellow
OKI Drum	OKi C911dn / C931 / C931dn	OKI 45103716 / C931 Black Drum
OKI Drum	OKi C911dn / C931 / C931dn	OKI 45103715 / C931 Cyan Drum
OKI Drum	OKi C911dn / C931 / C931dn	OKI 45103714 / C931 Magenta Drum
OKI Drum	OKi C911dn / C931 / C931dn	OKI 45103713 / C931 Yellow Drum
OKI	OKi B731dnw / MB770 / MB770dfn / MB770dn	OKI 45439002 B731 Black Hi Cap
OKI	OKi C822 Black	OKI 44844616 / C822 Black
OKI	OKi C822 Cyan	OKI 44844615 / C822 Cyan
OKI	OKi C822 Magenta	OKI 44844614 / C822 Magenta
OKI	OKi C822 Yellow	OKI 44844613 / C822 Yellow
OKI	OKi C301/C321/MC332/MC342	OKI 44973536 Black C301
OKI	OKi C301/C321/MC332/MC342	OKI 44973535 Cyan C301
OKI	OKi C301/C321/MC332/MC342	OKI 44973534 Magenta C301
OKI	OKi C301/C321/MC332/MC342	OKI 44973533 Yellow C301
OKI	OKi B721 / 731d / MB760 / 770	OKI 45488802 / B721
OKI	OKi B840/B840dn/B840dtn/B840n	OKI 44661802 Black B840
OKI Drum	OKi MB760 / MB770	OKI 45456305 Drum MB760
OKI	OKi ES9431 / ES9541	OKI 45536512 Black
OKI	OKi ES9431 / ES9541	OKI 45536511 Cyan
OKI	OKi ES9431 / ES9541	OKI 45536510 Magenta
OKI	OKi ES9431 / ES9541	OKI 45536509 Yellow
OKI	OKi C801 / C821	OKI 44643004 / C801 Black
OKI	OKi C801 / C821	OKI 44643003 / C801 Cyan
OKI	OKi C801 / C821	OKI 44643002 / C801 Magenta
OKI	OKi C801 / C821	OKI 44643001 / C801 Yellow
OKI	OKi B412d / B432 / B512 / MB472/ MB492/ MB562	OKI 45807111 Black Extra Hi Cap
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490401 Yellow
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490402 Magenta
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490403 Cyan
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490404 Black
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490605 Yellow Hi Cap
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490606 Magenta Hi Cap
OKI	OKi C532 / C542 / MC573 / MC563dn	OKi 46490607 Cyan Hi Cap

OKI	OkI C532 / C542 / MC573 / MC563dn	OkI 46490608 Black Hi Cap
Panasonic	Panafax DX-600/UF-580/UF-585/UF-590/UF-595/UF-6100/UF-6300	Panafax UG-3380
Panasonic	Panafax UF7100 / UF8100	Panafax UG-5545
Panasonic	Panafax UF-4100 / UF-490	Panafax UG-3221
Konica Minolta	QMS MagiColor 4650DN / 4690MF / 4695MF / 5670EN	QMS Mag 4650 (AODK) Black
Konica Minolta	QMS MagiColor 4650DN / 4690MF / 4695MF / 5670EN	QMS Mag 4650 (AODK) Yellow
Konica Minolta	QMS MagiColor 4650DN / 4690MF / 4695MF / 5670EN	QMS Mag 4650 (AODK) Magenta
Konica Minolta	QMS MagiColor 4650DN / 4690MF / 4695MF / 5670EN	QMS Mag 4650 (AODK) Cyan
Konica Minolta	Konica Minolta C454 Black	Konica TN-512 Black
Konica Minolta	Konica Minolta C454 Cyan	Konica TN-512 Cyan
Konica Minolta	Konica Minolta C454 Magenta	Konica TN-512 Magenta
Konica Minolta	Konica Minolta C454 Yellow	Konica TN-512 Yellow
Konica Minolta	Konica Minolta Bizhub C654/C754	Konica TN-711 Black
Konica Minolta	Konica Minolta Bizhub C654/C754	Konica TN-711 Cyan
Konica Minolta	Konica Minolta Bizhub C654/C754	Konica TN-711 Magenta
Konica Minolta	Konica Minolta Bizhub C654/C754	Konica TN-711 Yellow
Ricoh	Ricoh Aficio SP3500 / SP3510	Ricoh SP3500 / SP3510
Ricoh	Ricoh Aficio SP 1000S / Ricoh Fax 1140L / 1180L	Ricoh 413196 / SP1000E
Ricoh	Ricoh Aficio SP 6330N	Ricoh 406649 / SP6330N
Ricoh	Ricoh SP 3600DN/3600SF/3610/4510DN/4510SF	Ricoh 407340 / SP3600/4510
Ricoh	Ricoh SP C310HE	Ricoh SPC310HE Black
Ricoh	Ricoh SP C310HE	Ricoh SPC310HE Cyan
Ricoh	Ricoh SP C310HE	Ricoh SPC310HE Magenta
Ricoh	Ricoh SP C310HE	Ricoh SPC310HE Yellow
Ricoh	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Black
Ricoh	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Cyan
Ricoh	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Magenta
Ricoh	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Yellow
Ricoh	Ricoh Aficio SP4100N / SP4110N / SP4210N / SP4310N	Ricoh 403073 / SP4100
Ricoh	Ricoh Aficio MP C2000/2500/3000 Black	Ricoh MP C2000/2500/3000 Black
Ricoh	Ricoh Aficio MP C2000/2500/3000 Cyan	Ricoh MP C2000/2500/3000 Cyan
Ricoh	Ricoh Aficio MP C2000/2500/3000 Magenta	Ricoh MP C2000/2500/3000 Magenta
Ricoh	Ricoh Aficio MP C2000/2500/3000 Yellow	Ricoh MP C2000/2500/3000 Yellow
Ricoh	Ricoh Aficio MP C3500/4500 Black	Ricoh MP C3500/4500 Black
Ricoh	Ricoh Aficio MP C3500/4500 Cyan	Ricoh MP C3500/4500 Cyan
Ricoh	Ricoh Aficio MP C3500/4500 Magenta	Ricoh MP C3500/4500 Magenta
Ricoh	Ricoh Aficio MP C3500/4500 Yellow	Ricoh MP C3500/4500 Yellow
Ricoh	Ricoh Aficio MP C4000/5000 Black	Ricoh MP C4000/5000 Black
Ricoh	Ricoh Aficio MP C4000/5000 Cyan	Ricoh MP C4000/5000 Cyan
Ricoh	Ricoh Aficio MP C4000/5000 Magenta	Ricoh MP C4000/5000 Magenta
Ricoh	Ricoh Aficio MP C4000/5000 Yellow	Ricoh MP C4000/5000 Yellow
Ricoh	Ricoh Aficio MP C2030 / C2050 / C2550	Ricoh MP C2050 / C2550E Black
Ricoh	Ricoh Aficio MP C2030 / C2050 / C2550	Ricoh MP C2050 / C2550E Cyan
Ricoh	Ricoh Aficio MP C2030 / C2050 / C2550	Ricoh MP C2050 / C2550E Magenta
Ricoh	Ricoh Aficio MP C2030 / C2050 / C2550	Ricoh MP C2050 / C2550E Yellow
Ricoh	Ricoh SP 3400/3401	Ricoh 406523 / SP3400 Std Cap
Ricoh	Ricoh SP 3400/3402	Ricoh 406522 / SP3400 Hi Cap
Ricoh	Ricoh SP C811dn	Ricoh 884201 Black
Ricoh	Ricoh SP C811dn	Ricoh 884202 Yellow
Ricoh	Ricoh SP C811dn	Ricoh 884203 Magenta
Ricoh	Ricoh SP C811dn	Ricoh 884204 Cyan
Ricoh	Ricoh Aficio AP400 Type 220 / 400943	Ricoh 400943 / AP400
Ricoh	Ricoh Aficio MP C2003SP / C2503SP	Ricoh MPC2003SP / C2503SP Black
Ricoh	Ricoh Aficio MP C2003SP / C2503SP	Ricoh MPC2003SP / C2503SP Cyan
Ricoh	Ricoh Aficio MP C2003SP / C2503SP	Ricoh MPC2003SP / C2503SP Magenta
Ricoh	Ricoh Aficio MP C2003SP / C2503SP	Ricoh MPC2003SP / C2503SP Yellow
Ricoh	Ricoh Aficio MP C3003SP / C3503SP	Ricoh MPC3003SP / C3503SP Black
Ricoh	Ricoh Aficio MP C3003SP / C3503SP	Ricoh MPC3003SP / C3503SP Cyan
Ricoh	Ricoh Aficio MP C3003SP / C3503SP	Ricoh MPC3003SP / C3503SP Magenta
Ricoh	Ricoh Aficio MP C3003SP / C3503SP	Ricoh MPC3003SP / C3503SP Yellow
Ricoh	Ricoh Aficio MP C4503SP/C5503SP/C6003SP	Ricoh MPC4503SP/C5503SP/C6003SPB
Ricoh	Ricoh Aficio MP C4503SP/C5503SP/C6003SP	Ricoh MPC4503SP/C5503SP/C6003SPC
Ricoh	Ricoh Aficio MP C4503SP/C5503SP/C6003SP	Ricoh MPC4503SP/C5503SP/C6003SPM
Ricoh	Ricoh Aficio MP C4503SP/C5503SP/C6003SP	Ricoh MPC4503SP/C5503SP/C6003SPY
Ricoh	Ricoh Aficio SP 201N / 204SF	Ricoh SP201N / 204SF
Ricoh	Ricoh Aficio SP C250	Ricoh SPC250 Black
Ricoh	Ricoh Aficio SP C250	Ricoh SPC250 Cyan
Ricoh	Ricoh Aficio SP C250	Ricoh SPC250 Magenta
Ricoh	Ricoh Aficio SP C250	Ricoh SPC250 Yellow
Ricoh Intro	Ricoh SP C310HE	Ricoh SPC310HE Black INTRO
Ricoh Intro	Ricoh SP C310HE	Ricoh SPC310HE Cyan INTRO
Ricoh Intro	Ricoh SP C310HE	Ricoh SPC310HE Magenta INTRO
Ricoh Intro	Ricoh SP C310HE	Ricoh SPC310HE Yellow INTRO
Ricoh	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Black
Ricoh	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Cyan
Ricoh	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Magenta
Ricoh	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Yellow
Ricoh Intro	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Black INTRO
Ricoh Intro	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Cyan INTRO
Ricoh Intro	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Magenta INTRO
Ricoh Intro	Ricoh Aficio SP C252 HE	Ricoh SPC252HE Yellow INTRO
Ricoh	Ricoh Aficio MP C2800 / C3300	Ricoh MPC2800 / C3300 Black
Ricoh	Ricoh Aficio MP C2800 / C3300	Ricoh MPC2800 / C3300 Cyan
Ricoh	Ricoh Aficio MP C2800 / C3300	Ricoh MPC2800 / C3300 Magenta
Ricoh	Ricoh Aficio MP C2800 / C3300	Ricoh MPC2800 / C3300 Yellow
Ricoh Drum	Ricoh SP 3600DN/3600SF/3610/4510DN/4510SF	Ricoh 407324 / SP3600/3610/4510 Drum
Ricoh	Ricoh SP 311	Ricoh 407246 / SP311
Ricoh	Ricoh Aficio SP 100e/112/112SF/112SU	Ricoh 407166 SP100
Ricoh	Ricoh SP 150/150SU/150SUw/150w	Ricoh 407971 150 Black Std Cap
Ricoh	Ricoh SP 150/150SU/150SUw/150w	Ricoh 408010 150 Black Hi Cap
Ricoh	Ricoh SP 311	Ricoh 407249 / SP311
Ricoh Intro	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Black INTRO
Ricoh Intro	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Cyan INTRO
Ricoh Intro	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Magenta INTRO
Ricoh Intro	Ricoh Aficio SP C220N / C221N / C222DN	Ricoh SPC220 Yellow INTRO
Ricoh Intro	Ricoh Aficio SP C250	Ricoh SPC250 Black INTRO

Ricoh Intro	Ricoh Aficio SP C250	Ricoh SPC250 Cyan INTRO	
Ricoh Intro	Ricoh Aficio SP C250	Ricoh SPC250 Magenta INTRO	
Ricoh Intro	Ricoh Aficio SP C250	Ricoh SPC250 Yellow INTRO	
Ricoh	Ricoh Aficio SP5200DN / 5200S / 5210DN / 5210SF / 5210SR	Ricoh 406685 SP5200	
Ricoh	Ricoh SP 3600DN/3600SF/3610/4510DN/4510SF	Ricoh 407318 / SP3600 Hi Cap	
Ricoh	Ricoh SP 6430DN	Ricoh 407510 Black	
Ricoh	Ricoh MP 501SPF / 601SPF / SP 5300DN / SP 5310DN	Ricoh 407823	
Samsung Intro	Samsung ML-3750ND	Samsung MLT 305 INTRO	
Samsung	Samsung ML-1440 / ML-1450 / ML-6060	Samsung ML 6060D6	
Samsung	Samsung ML-3750ND	Samsung MLT D305L	
Samsung Drum	Samsung ML 4512ND / ML5012ND	Samsung MLT R307 Drum	
Samsung	Samsung SCX-4200 Series	Samsung SCX 4200	
Samsung	Samsung SCX-4655F / 4655FN	Samsung MLT D1175	
Samsung	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Black	
Samsung	Samsung SF-560R	Samsung SF 560R	
Samsung Intro	Samsung ML-2950 / ML-2955 / SCX-4729	Samsung MLT 103 INTRO	
Samsung	Samsung SCX-4016	Samsung SCX 4100D3	
Samsung	Samsung Xpress SL-M2020W / M2022 / M2070	Samsung MLT D1115	
Samsung	Samsung CLP-510 Black	Samsung CLP 510 Black	
Samsung	Samsung ML-2850	Samsung ML 2850B	
Samsung	Samsung ML-1630A	Samsung ML 1630	
Samsung Intro	Samsung Xpress SL-M2020W / M2022 / M2070	Samsung MLT 111 INTRO	
Samsung	Samsung SCX-4300	Samsung MLT D1092S	
Samsung	Samsung ML-1910 / 1915 / 2525 / 2580 / SCX-4600 / 4623 / SF-650	Samsung MLT D1052S	
Samsung	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Cyan	
Samsung	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Magenta	
Samsung	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Yellow	
Samsung	Samsung ML-3750ND	Samsung MLT D305S	
Samsung	Samsung ML 4510ND / ML 4512ND / ML5012ND	Samsung MLT D307E	
Samsung	Samsung ML 4510ND / ML 4512ND / ML5012ND	Samsung MLT D307S	
Samsung	Samsung CLP-770 / 775	Samsung CLT 6092S Black	
Samsung	Samsung CLP-770 / 775	Samsung CLT 6092S Cyan	
Samsung	Samsung CLP-770 / 775	Samsung CLT 6092S Magenta	
Samsung	Samsung CLP-770 / 775	Samsung CLT 6092S Yellow	
Samsung	Samsung ML-1660 / ML-1665 / ML-1860 / ML-1865W / SCX-3205 / 3205W	Samsung MLT D1042S	
Samsung	Samsung ML-1640 / 2240 / 2241	Samsung MLT D1082S	
Samsung	Samsung CLP-510 Cyan	Samsung CLP 510 Cyan	
Samsung Drum	Samsung SCX-6320 / Xerox 113R00671	Samsung SCX 6320 Drum	
Samsung	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072S Black	
Samsung	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072S Cyan	
Samsung	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072S Magenta	
Samsung	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072S Yellow	
Samsung Drum	Samsung CLP-310 / 315 / CLX 3170fn / 3176	Samsung CLT R409 Drum	
Samsung Intro	Samsung ML 4510ND / ML 4512ND / ML5012ND	Samsung MLT 307 INTRO	
Samsung	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L Black	
Samsung	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L Cyan	
Samsung	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L Magenta	
Samsung	Samsung ML-2010 / ML-2015 / ML-2510 / ML-2570 / ML-2571N	Samsung MLT D1195 / ML 2010D	
Samsung	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L Yellow	
Samsung	Samsung CLP-510 Magenta	Samsung CLP 510 Magenta	
Samsung	Samsung CLP-510 Yellow	Samsung CLP 510 Yellow	
Samsung Intro	Samsung CLP-680ND / CLX-6260	Samsung CLT 506 Black INTRO	
Samsung Intro	Samsung CLP-680ND / CLX-6260	Samsung CLT 506 Cyan INTRO	
Samsung Intro	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Black INTRO	
Samsung Intro	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Cyan INTRO	
Samsung Intro	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Magenta INTRO	
Samsung Intro	Samsung CLP-310 / 315 / CLX 3170fn / 3175	Samsung CLT 4092 Yellow INTRO	
Samsung Intro	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072 Black INTRO	
Samsung Intro	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072 Cyan INTRO	
Samsung Intro	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072 Magenta INTRO	
Samsung Intro	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT 4072 Yellow INTRO	
Samsung	Samsung ML-1910 / 1915 / 2525 / 2580 / SCX-4600 / 4623 / SF-650	Samsung MLT D1052L	
Samsung	Samsung ML 4510ND / ML 4512ND / ML5012ND	Samsung MLT D307L	
Samsung Intro	Samsung CLP-680ND / CLX-6260	Samsung CLT 506 Magenta INTRO	
Samsung Drum	Samsung CLP-320/320N/325/325W/CLX-3185/3185N/3185FN/3185FW	Samsung CLT R407 Drum	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506L Black	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506L Cyan	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506L Magenta	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506L Yellow	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506S Black	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506S Cyan	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506S Magenta	
Samsung	Samsung CLP-680ND / CLX-6260	Samsung CLT 506S Yellow	
Samsung Intro	Samsung ML-1660 / ML-1665 / ML-1860 / ML-1865W / SCX-3205 / 3205W	Samsung MLT 1042 INTRO	
Samsung	Samsung ML-3310ND / ML-3312ND / ML-3712DW / SCX-4833 / SCX-5637FR	Samsung MLT D205L	
Samsung	Samsung ML-3310ND / ML-3312ND / ML-3712DW / SCX-4833 / SCX-5637FR	Samsung MLT D205S	
Samsung	Samsung ML-3310ND / ML-3312ND / ML-3712DW / SCX-4833 / SCX-5637FR	Samsung MLT D205E	
Samsung Intro	Samsung CLP-680ND / CLX-6260	Samsung CLT 506 Yellow INTRO	
Samsung	Samsung ML-2950 / ML-2955 / SCX-4729	Samsung MLT D103L	
Samsung	Samsung ML-2950 / ML-2955 / SCX-4729	Samsung MLT D103S	
Samsung	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504S Black	
Samsung	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504S Cyan	
Samsung	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504S Magenta	
Samsung	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504S Yellow	
Samsung	Samsung ML-2160 / 2162 / 2165 / 2168 / SCX-3400 / 3405 / SF-760P	Samsung MLT D101S	
Samsung Intro	Samsung ML-2160 / 2162 / 2165 / 2168 / SCX-3400 / 3405 / SF-760P	Samsung MLT 101 INTRO	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6062S Black	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6072S Cyan	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6072S Magenta	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6072S Yellow	
Samsung	Samsung ML-5510ND/5515ND/6510ND/6515ND	Samsung MLT D309S	
Samsung	Samsung ML-5510ND/5515ND/6510ND/6515ND	Samsung MLT D309L	
Samsung	Samsung ML-5510ND/5515ND/6510ND/6515ND	Samsung MLT D309E	
Samsung	Samsung CLT 406S Black	Samsung CLT 406S Black	
Samsung	Samsung CLT 406S Cyan	Samsung CLT 406S Cyan	
Samsung	Samsung CLT 406S Magenta	Samsung CLT 406S Magenta	

Samsung	Samsung CLT 406S Yellow	Samsung CLT 406S Yellow	
Samsung Intro	Samsung CLT 406 Black INTRO	Samsung CLT 406 Black INTRO	
Samsung Intro	Samsung CLT 406 Cyan INTRO	Samsung CLT 406 Cyan INTRO	
Samsung Intro	Samsung CLT 406 Magenta INTRO	Samsung CLT 406 Magenta INTRO	
Samsung Intro	Samsung CLT 406 Yellow INTRO	Samsung CLT 406 Yellow INTRO	
Samsung Intro	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504 Black INTRO	
Samsung Intro	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504 Cyan INTRO	
Samsung Intro	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504 Magenta INTRO	
Samsung Intro	Samsung CLP-415/CLX-4195/SL-C1810/C1860/C1860	Samsung CLT 504 Yellow INTRO	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6062S Cyan	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6062S Magenta	
Samsung	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT 6062S Yellow	
Samsung Intro	Samsung ML-5510ND / ML-6510ND	Samsung MLT 309 INTRO	
Samsung	Samsung Xpress M2675 / M2825/ M2875FD	Samsung MLT D116L	
Samsung	Samsung Xpress M2675 / M2825/ M2875FD	Samsung MLT D116S	
Samsung Intro	Samsung Xpress M2675 / M2825/ M2875FD	Samsung MLT 116 INTRO	
Samsung	Samsung ML-1660 / ML-1665 / ML-1860 / ML-1865W / SCX-3205 / 3205W	Samsung MLT D1042SX	
Samsung Drum	Samsung Xpress M2675 / M2825/ M2875FD	Samsung MLT R116 Drum	
Samsung	Samsung ProXpress M3325/3375/M3825/M3875/M4025/M4075	Samsung MLT D204S	
Samsung	Samsung ProXpress M3325/3375/M3825/M3875/M4025/M4075	Samsung MLT D204L	
Samsung	Samsung ProXpress M3325/3375/M3825/M3875/M4025/M4075	Samsung MLT D204E	
Samsung Drum	Samsung ProXpress M3325/3375/M3825/M3875/M4025/M4075	Samsung MLT R204 Drum	
Samsung Intro	Samsung ProXpress M3325/3375/M3825/M3875/M4025/M4075	Samsung MLT 204 INTRO	
Samsung	Samsung CLX-9201NA / 9251NA / 9301NA	Samsung CLT 809S Black	
Samsung	Samsung CLX-9201NA / 9251NA / 9301NA	Samsung CLT 809S Cyan	
Samsung	Samsung CLX-9201NA / 9251NA / 9301NA	Samsung CLT 809S Magenta	
Samsung	Samsung CLX-9201NA / 9251NA / 9301NA	Samsung CLT 809S Yellow	
Samsung	Samsung SL-M3320/M3370/M3820/M3870/M4020/M4070	Samsung MLT D203L	
Samsung	Samsung SL-M3320/M3370/M3820/M3870/M4020/M4070	Samsung MLT D203S	
Samsung Intro	Samsung SL-M3320/M3370/M3820/M3870/M4020/M4070	Samsung MLT 203 INTRO	
Samsung	Samsung SL-M3320/M3370/M3820/M3870/M4020/M4070	Samsung MLT D203E	
Samsung Drum	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT R607 Black Drum	
Samsung Drum	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT R607 Cyan Drum	
Samsung Drum	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT R607 Magenta Drum	
Samsung Drum	Samsung CLX 9250 / 9252 / 9350 / 9352	Samsung CLT R607 Yellow Drum	
Samsung	Samsung ML 4510ND / ML 4512ND / ML5012ND	Samsung MLT D307U	
Samsung	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505L Black	
Samsung	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505L Cyan	
Samsung	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505L Magenta	
Samsung	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505L Yellow	
Samsung Intro	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505 Black INTRO	
Samsung Intro	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505 Cyan INTRO	
Samsung Intro	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505 Magenta INTRO	
Samsung Intro	Samsung C2620DW / C2670FW / SL-C2620DW / SL-C2670FW	Samsung CLT 505 Yellow INTRO	
Samsung Drum	Samsung CLX-360/365/CLX-3300/3305/Xpress SL-C410/430/460/480	Samsung CLT R406 Drum	
Samsung	Samsung SCX-6545N/6545NX/6555N/6555NX	Samsung SCX D6555 Black	
Samsung Intro	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L / 5082S Black INTRO	
Samsung Intro	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L / 5082S Cyan INTRO	
Samsung Intro	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L / 5082S Magenta INTRO	
Samsung Intro	Samsung CLP-620 / CLP-670 / CLX-6220FX / CLX-6250FX	Samsung CLT 5082L / 5082S Yellow INTRO	
Samsung	Samsung CLX-8640ND/8650ND/MultiXpress C8640ND/C8650ND	Samsung CLT 659S Black	
Samsung	Samsung CLX-8640ND/8650ND/MultiXpress C8640ND/C8650ND	Samsung CLT 659S Cyan	
Samsung	Samsung CLX-8640ND/8650ND/MultiXpress C8640ND/C8650ND	Samsung CLT 659S Magenta	
Samsung	Samsung CLX-8640ND/8650ND/MultiXpress C8640ND/C8650ND	Samsung CLT 659S Yellow	
Samsung	Samsung SL-M3320/M3370/M3820/M3870/M4020/M4070	Samsung MLT D203U	
Samsung	Samsung SL-C430/SL-C480	Samsung CLT 404S Black	
Samsung	Samsung SL-C430/SL-C480	Samsung CLT 404S Cyan	
Samsung	Samsung SL-C430/SL-C480	Samsung CLT 404S Magenta	
Samsung	Samsung SL-C430/SL-C480	Samsung CLT 404S Yellow	
Samsung Intro	Samsung SL-C430/SL-C480	Samsung CLT 404S Black INTRO	
Samsung Intro	Samsung SL-C430/SL-C480	Samsung CLT 404S Cyan INTRO	
Samsung Intro	Samsung SL-C430/SL-C480	Samsung CLT 404S Magenta INTRO	
Samsung Intro	Samsung SL-C430/SL-C480	Samsung CLT 404S Yellow INTRO	
Samsung Intro	Samsung CLP-770 / 775	Samsung CLT 6092S Black INTRO	
Samsung Intro	Samsung CLP-770 / 775	Samsung CLT 6092S Cyan INTRO	
Samsung Intro	Samsung CLP-770 / 775	Samsung CLT 6092S Magenta INTRO	
Samsung Intro	Samsung CLP-770 / 775	Samsung CLT 6092S Yellow INTRO	
Samsung	Samsung MultiXpress X7400/X7500/X7600	Samsung CLT 806S Black	
Samsung	Samsung MultiXpress X7400/X7500/X7600	Samsung CLT 806S Cyan	
Samsung	Samsung MultiXpress X7400/X7500/X7600	Samsung CLT 806S Magenta	
Samsung	Samsung MultiXpress X7400/X7500/X7600	Samsung CLT 806S Yellow	
Samsung	Samsung MultiXpress X K4250RX/K4300LX/4220RX/4250LX/4300LX	Samsung CLT 808S Black	
Samsung	Samsung MultiXpress X K4250RX/K4300LX/4220RX/4250LX/4300LX	Samsung CLT 808S Cyan	
Samsung	Samsung MultiXpress X K4250RX/K4300LX/4220RX/4250LX/4300LX	Samsung CLT 808S Magenta	
Samsung	Samsung MultiXpress X K4250RX/K4300LX/4220RX/4250LX/4300LX	Samsung CLT 808S Yellow	
Samsung	Samsung MultiXpress M4580FX	Samsung MLT D303E/ELS	
Samsung Intro	Samsung MultiXpress M4580FX	Samsung MLT 303 INTRO	
Samsung	Samsung SL-M4530ND/M4530NX/SL-M4583FX	Samsung MLT D304S	
Samsung	Samsung SL-M4530ND/M4530NX/SL-M4583FX	Samsung MLT D304L	
Samsung	Samsung SL-M4530ND/M4530NX/SL-M4583FX	Samsung MLT D304E	
Samsung Intro	Samsung SL-M4530ND/M4530NX/SL-M4583FX	Samsung MLT 304 INTRO	
Samsung	Samsung SL-K7400GX/LX/K7500GX/K7500LX	Samsung MLT K706S	
Samsung	Samsung SCX-8123NA/8128NA/8128NX	Samsung MLT D709S/ELS	
Samsung Drum	Samsung ML-5510ND/5515ND/6510ND/6515ND	Samsung MLT R309 Drum	
Samsung Drum	Samsung SCX-6545N/6545NX/6555N/6555NX	Samsung SCX R6555A/SEE Drum	
Samsung	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503L Black	
Samsung	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503L Cyan	
Samsung	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503L Magenta	
Samsung	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503L Yellow	
Samsung Intro	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503 Black INTRO	
Samsung Intro	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503 Cyan INTRO	
Samsung Intro	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503 Magenta INTRO	
Samsung Intro	Samsung ProXpress SL-C3010ND/SL-C3060FR/SL-C3060ND	Samsung CLT 503 Yellow INTRO	
Samsung	Samsung SL-M4030ND / SL-M4080FX	Samsung MLT D201L	
Samsung	Samsung SL-M4030ND / SL-M4080FX	Samsung MLT D201S	
Samsung Drum	Samsung MLT R304 Drum	Samsung MLT R304 Drum	

Samsung Drum	Samsung CLP-300 / CLX 2160 / 2161K / 3160FN	Samsung CLP-R300A Drum	
Samsung Drum	Samsung MultiXpress X7500 / X7600 / X7400	Samsung CLT-R806K Drum	
Samsung	Samsung ML-2160 / 2162 / 2165 / 2168 / SCX-3400 / 3405 / SF-760P	Samsung MLT D101X	
Sharp	Sharp DX-C20 Black	Sharp DX-C20 Black	
Sharp	Sharp DX-C20 Cyan	Sharp DX-C20 Cyan	
Sharp	Sharp DX-C20 Magenta	Sharp DX-C20 Magenta	
Sharp Intro	Sharp DX-C20 Black INTRO	Sharp DX-C20 Black INTRO	
Sharp	Sharp DX-C20 Yellow	Sharp DX-C20 Yellow	
Sharp Intro	Sharp DX-C20 Cyan INTRO	Sharp DX-C20 Cyan INTRO	
Sharp Intro	Sharp DX-C20 Magenta INTRO	Sharp DX-C20 Magenta INTRO	
Sharp Intro	Sharp DX-C20 Yellow INTRO	Sharp DX-C20 Yellow INTRO	
Sharp	Sharp MX-60 Black	Sharp MX-60 Black	
Sharp	Sharp MX-60 Cyan	Sharp MX-60 Cyan	
Sharp	Sharp MX-60 Magenta	Sharp MX-60 Magenta	
Sharp	Sharp MX-60 Yellow	Sharp MX-60 Yellow	
Xerox	Xerox N24 / N32 / N40	Xerox 113R00184	
Xerox	Xerox Phaser 4500	Xerox 113R00656	
Xerox	Xerox Phaser 4510	Xerox 113R00711 Std Cap	
Xerox	Xerox Phaser 4510	Xerox 113R00712 / 715 Hi Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01391 B Std Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01395 B Hi Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01388 C Std Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01392 C Hi Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01389 M Std Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01393 M Hi Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01390 Y Std Cap	
Xerox	Xerox Phaser 6280	Xerox 106R01394 Y Hi Cap	
Xerox	Xerox Phaser 4500	Xerox 113R00703 Hi Cap	
Xerox	Xerox WorkCentre 7120	Xerox 006R01457 Black	
Xerox	Xerox WorkCentre 7120	Xerox 006R01458 Yellow	
Xerox	Xerox WorkCentre 7120	Xerox 006R01459 Magenta	
Xerox	Xerox WorkCentre 7120	Xerox 006R01460 Cyan	
Xerox Drum	Xerox CopyCentre C20 / 4118 / M20i	Xerox 113R00671 Drum	
Xerox	Xerox Phaser 7500	Xerox 106R01439 Black	
Xerox	Xerox Phaser 7500	Xerox 106R01433 / 01436 Cyan	
Xerox	Xerox Phaser 7500	Xerox 106R01437 / 01434 Magenta	
Xerox	Xerox Phaser 7500	Xerox 106R01435 / 01438 Yellow	
Xerox	Xerox Phaser 7800	Xerox 106R01566 Cyan	
Xerox	Xerox Phaser 7800	Xerox 106R01567 Magenta	
Xerox	Xerox Phaser 7800	Xerox 106R01568 Yellow	
Xerox	Xerox Phaser 7800	Xerox 106R01569 Black	
Xerox	Xerox Phaser 3610 / WorkCentre 3615	Xerox 106R02731 Black Ex hi Cap	
Xerox	Xerox Phaser 3610 / WorkCentre 3615	Xerox 106R02722 Black Hi Cap	
Xerox	Xerox Phaser 3610 / WorkCentre 3615	Xerox 106R02720 Black Std Cap	
Xerox	Xerox Phaser 3610 / WorkCentre 3615	Xerox 106R02724 Black	
Xerox	Xerox Phaser 6180	Xerox 113R00726 B Hi Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00723 C Hi Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00724 M Hi Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00725 Y Hi Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00722 B Std Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00719 C Std Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00720 M Std Cap	
Xerox	Xerox Phaser 6180	Xerox 113R00721 Y Std Cap	
Xerox Drum	Xerox WorkCentre M15 / M15i / Pro 312 / 413	Xerox 113R00663 Drum	
Xerox	Xerox Phaser 6120	Xerox 113R00692 B Hi Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00693 C Hi Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00695 M Hi Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00694 Y Hi Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00689 C Std Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00691 M Std Cap	
Xerox	Xerox Phaser 6120	Xerox 113R00690 Y Std Cap	
Xerox	Xerox Phaser 7400	Xerox 106R01080 Black 7400	
Xerox	Xerox Phaser 7400	Xerox 106R01077 Hi Cap Cyan 7400	
Xerox	Xerox Phaser 7400	Xerox 106R01078 Hi Cap Magenta 7400	
Xerox	Xerox Phaser 7400	Xerox 106R01079 Hi Cap Yellow 7400	
Xerox	Xerox Phaser 7400	Xerox 106R01150 Cyan Std Cap	
Xerox	Xerox Phaser 7400	Xerox 106R01151 Magenta Std Cap	
Xerox	Xerox Phaser 7400	Xerox 106R01152 Yellow Std Cap	
Xerox	Xerox Phaser 7750	Xerox 106R00652 Black 7750	
Xerox	Xerox Phaser 7750	Xerox 106R00653 Cyan 7750	
Xerox	Xerox Phaser 7750	Xerox 106R00654 Magenta 7750	
Xerox	Xerox Phaser 7750	Xerox 106R00655 Yellow 7750	
Xerox	Xerox Phaser 6121	Xerox 106R01469 Black Hi Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01466 Cyan Hi Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01467 Magenta Hi Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01468 Yellow Hi Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01463 Cyan Std Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01464 Magenta Std Cap	
Xerox	Xerox Phaser 6121	Xerox 106R01465 Yellow Std Cap	
Xerox	Xerox Phaser 6180 Metered""	Xerox 113R00731 Cyan	
Xerox	Xerox Phaser 6180 Metered""	Xerox 113R00732 Magenta	
Xerox	Xerox Phaser 6180 Metered""	Xerox 113R00733 Yellow	
Xerox	Xerox Phaser 6180 Metered""	Xerox 113R00734 Black	
Xerox	Xerox Phaser 6700	Xerox 106R01503 Std Cap Cyan	
Xerox	Xerox Phaser 6700	Xerox 106R01504 Std Cap Magenta	
Xerox	Xerox Phaser 6700	Xerox 106R01505 Std Cap Yellow	
Xerox	Xerox Phaser 6700	Xerox 106R01506 Std Cap Black	
Xerox	Xerox Phaser 6700	Xerox 106R01507 Hi Cap Cyan	
Xerox	Xerox Phaser 6700	Xerox 106R01508 Hi Cap Magenta	
Xerox	Xerox Phaser 6700	Xerox 106R01509 Hi Cap Yellow	
Xerox	Xerox Phaser 6700	Xerox 106R01510 Hi Cap Black	
Xerox	Xerox Phaser 6600	Xerox 106R02229 Cyan Hi Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02230 Magenta Hi Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02231 Yellow Hi Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02232 Black Hi Cap	
Xerox	Xerox Phaser 6605	Xerox 106R02237 Cyan Std Cap	

Xerox	Xerox Phaser 6605	Xerox 106R02238 Magenta Std Cap	
Xerox	Xerox Phaser 6605	Xerox 106R02239 Yellow Std Cap	
Xerox	Xerox Phaser 6605	Xerox 106R02240 Black Std Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02245 Cyan Std Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02246 Magenta Std Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02247 Yellow Std Cap	
Xerox	Xerox Phaser 6600	Xerox 106R02248 Black Std Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02599 Cyan Std Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02600 Magenta Std Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02601 Yellow Std Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02602 Cyan Hi Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02603 Magenta Hi Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02604 Yellow Hi Cap	
Xerox	Xerox Phaser 7100	Xerox 106R02605 Black Hi Cap	
Xerox	Xerox Phaser 7760	Xerox 106R01164 Cyan	
Xerox	Xerox Phaser 7760	Xerox 106R01165 Magenta	
Xerox	Xerox Phaser 7760	Xerox 106R01166 Yellow	
Xerox	Xerox Phaser 7760	Xerox 106R01167 Black	
Xerox	Xerox Phaser 7800	Xerox 106R01563 Cyan	
Xerox	Xerox Phaser 7800	Xerox 106R01564 Magenta	
Xerox	Xerox Phaser 7800	Xerox 106R01565 Yellow	
Xerox	Xerox Phaser 3100MFP	Xerox 106R01378	
Xerox	Xerox Phaser 3100MFP	Xerox 106R01379 (HC)	
Xerox	Xerox WorkCentre 7525/7530/7535/7545/7556/7830/7835/7845/7855/7970/	Xerox 006R01513 / 1509 Black	
Xerox	Xerox WorkCentre 7525/7530/7535/7545/7556/7830/7835/7845/7855/7970/	Xerox 006R01514 / 1510 Yellow	
Xerox	Xerox WorkCentre 7525/7530/7535/7545/7556/7830/7835/7845/7855/7970/	Xerox 006R01515 / 1511 Magenta	
Xerox	Xerox WorkCentre 7525/7530/7535/7545/7556/7830/7835/7845/7855/7970/	Xerox 006R01516 / 1512 Cyan	
Xerox	Xerox Phaser 3020 / WorkCentre 3025	Xerox 106R02773 Black	
Xerox	Xerox Phaser 6510 / WorkCentre 6515	Xerox 106R03476 Black Hi Cap	
Xerox	Xerox Phaser 6510 / WorkCentre 6515	Xerox 106R03477 Cyan Hi Cap	
Xerox	Xerox Phaser 6510 / WorkCentre 6515	Xerox 106R03478 Magenta Hi Cap	
Xerox	Xerox Phaser 6510 / WorkCentre 6515	Xerox 106R03479 Yellow Hi Cap	
Xerox Drum	Xerox WorkCentre 5016 / 5020	Xerox 101R00432 Black Drum	
Xerox	Xerox Phaser 3330/3330DNI/WorkCentre 3335/3335DNI/3345/3345DNI	Xerox 106R03620 Black	
Xerox	Xerox Phaser 3330/3330DNI/WorkCentre 3335/3335DNI/3345/3345DNI	Xerox 106R03622 Black Hi Cap	
Xerox	Xerox Phaser 3330/3330DNI/WorkCentre 3335/3335DNI/3345/3345DNI	Xerox 106R03624 Black Extra Hi Cap	

Printer Cartridge Replacements